### 2023 Acura Integra L4-1.5L Turbo (L15CA) Vehicle > Body and Frame > Interior Moulding / Trim > Service and Repair > Removal and Replacement CENTER CONSOLE AREA (CVT)

#### Center Console Area

How to use this manual.

1

**Center Console Assembly Removal** 

 













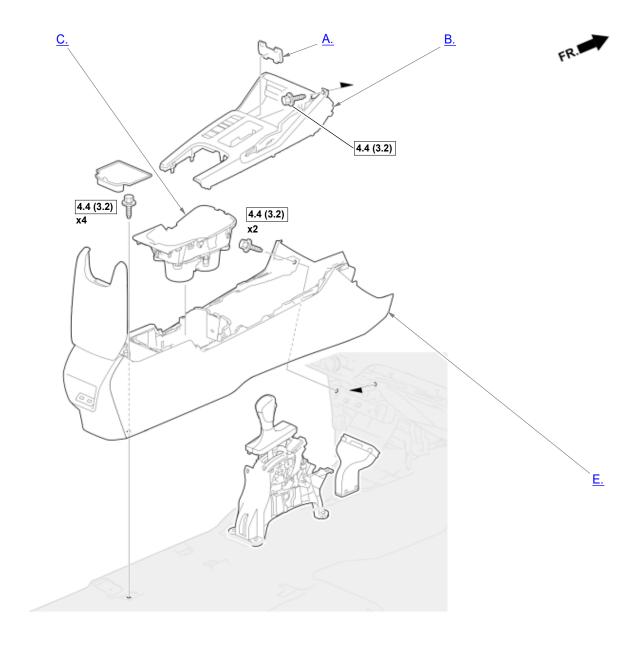




Change

Bookmarks

⊕ Library

**△ △** Convert

Reference - Repair

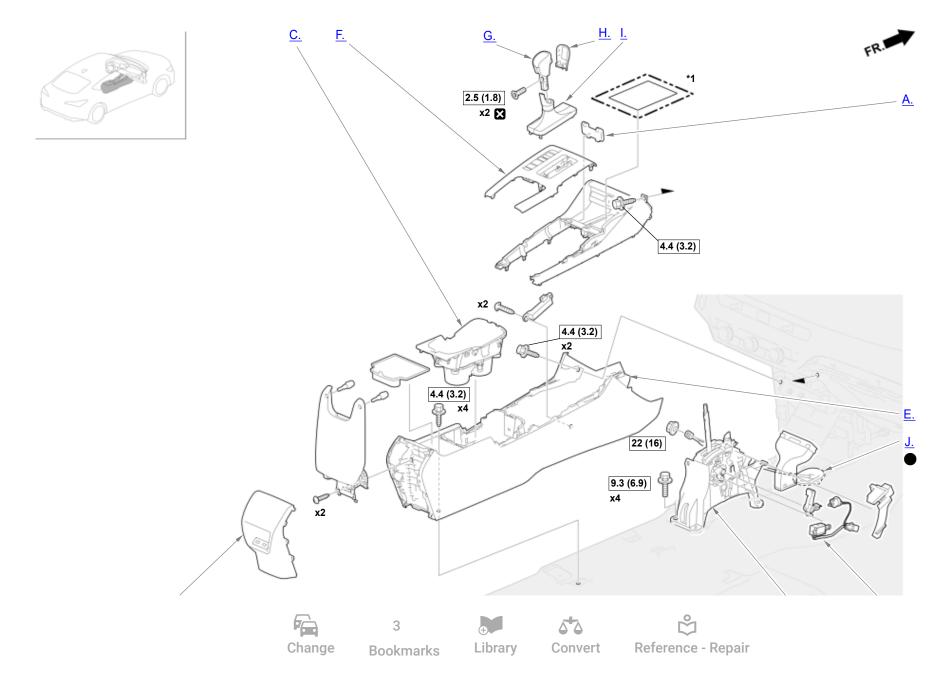

: Torque, N·m	<b>X</b> :	<u> </u>	•:			<b>←</b> : Required Removal
(lbf·ft)	Replace	Warning/Caution	Inspection/Adjustment	★: Learning	■: SPL Tool	•

\*1: Without wireless charger

3




 









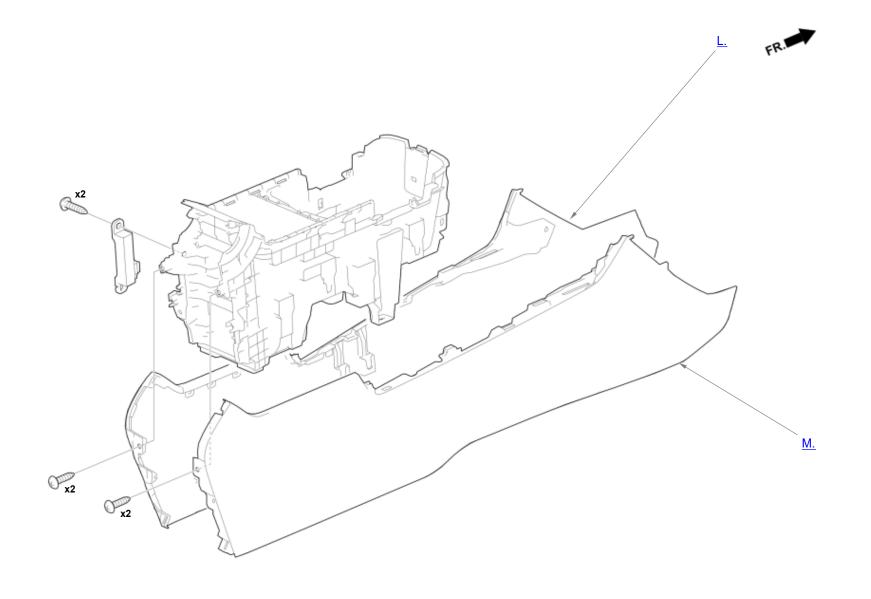



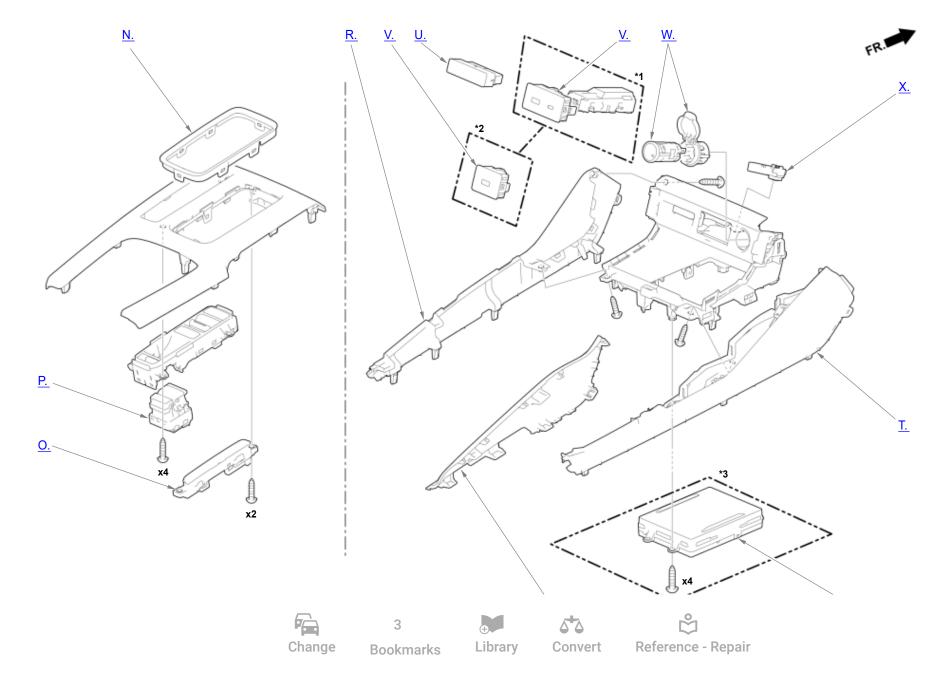

: Torque, N·m	<b>X</b> :	<u>^</u> :	•:			:: Required Removal
(lbf·ft)	Replace	Warning/Caution	Inspection/Adjustment	<b>★</b> : Learning	■: SPL Tool	. riequired riemoval

\*1: Display audio type (9-inch screen)

\*2: Color audio type (7-inch screen)

\*3: With wireless charger

5













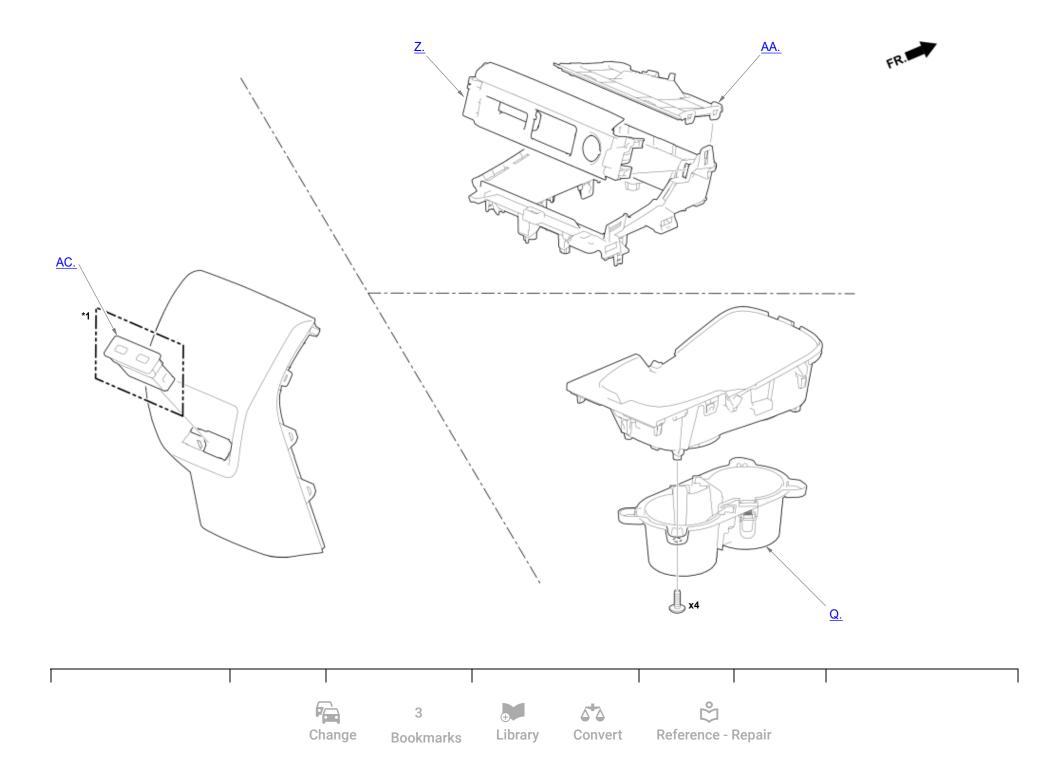

\*1: Display audio type (9-inch screen)

A. -

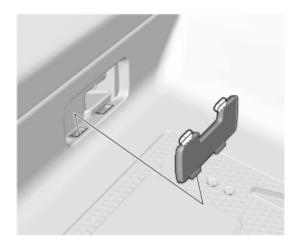

В.-

# ■ Key Information

Do the following before starting your work.

#### Remove:

· Passenger's Pad Assembly












# Removal

• Refer to the figure.



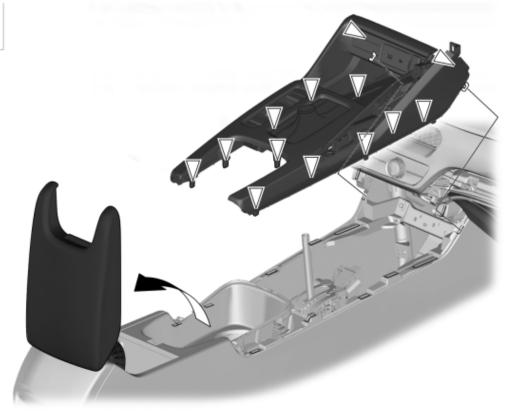












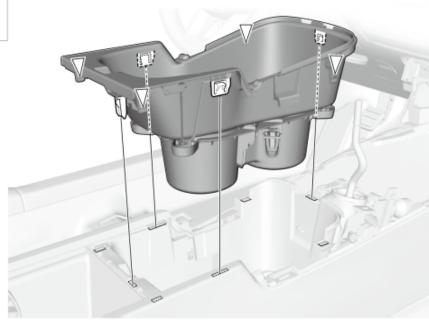

D. -














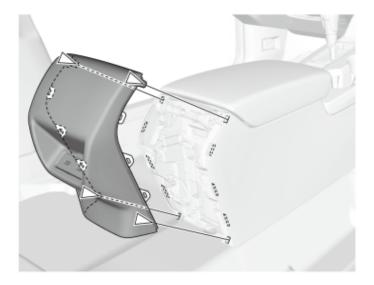

E. -

### ■ Sub-Procedure

### Removal

• Refer to the figure.












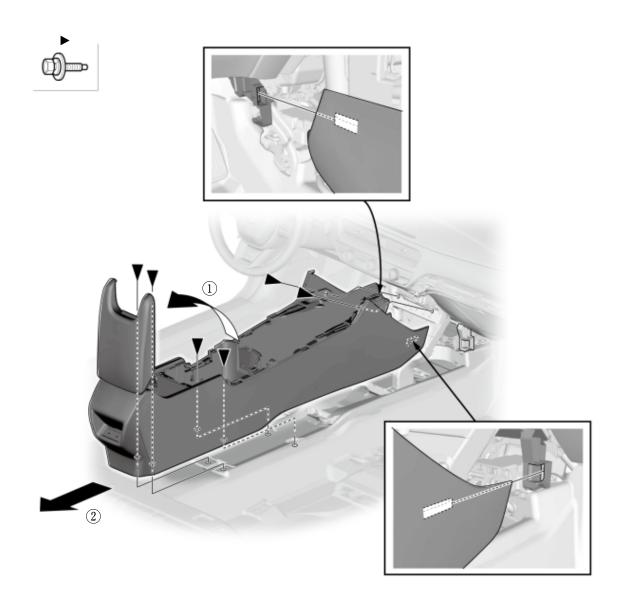

F. -

















G. -

# ■ Sub-Procedure



Bookmarks








#### NOTICE

Do not wipe off the special grease.

• Refer to the figure.

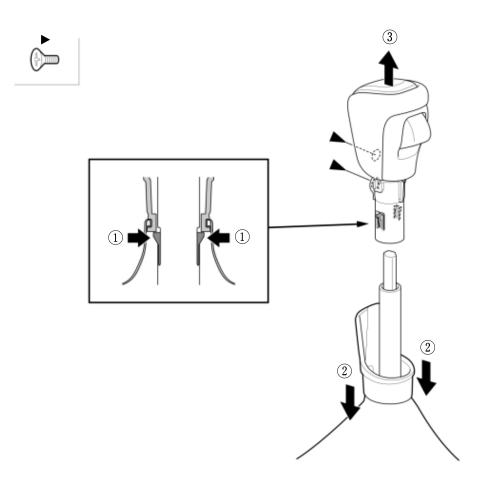












### ■ Sub-Procedure

### Removal

• Refer to the figure.

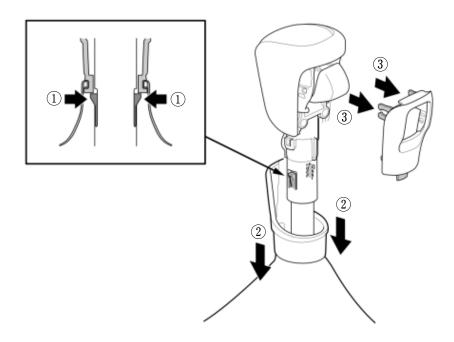

1. -

#### - Sub-Procedure



3 Bookmarks




**△ △** Convert



Reference - Repair

#### Removal

• Refer to the figure.

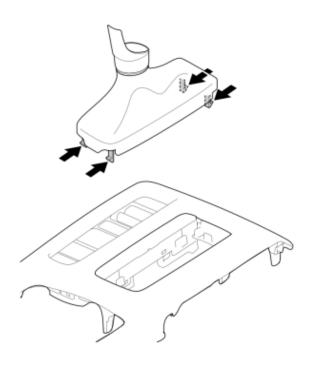

J. -

### **■** Preconditions

• Transmission R position/mode

### ■ Sub-Procedure












• Do not remove the shift cable by pulling the shift cable guide (a). (Figure 1)

Figure 1

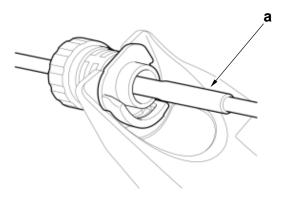

### Removal

1. Refer to figure 2.

#### Pin Specifications (Figure 2)


Specification				
b	6.0 mm (0.24 in)			

Figure 2








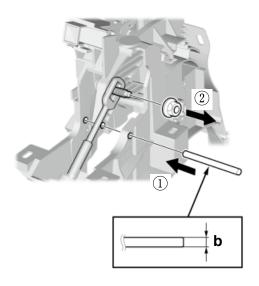

#### 2. Refer to figure 3.

Figure 3

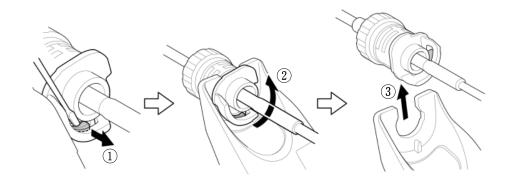



3 Bookmarks









#### 2. Refer to figure 4.

Figure 4

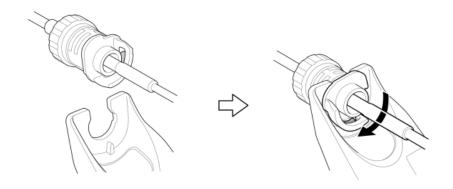

3. Make sure that the shift cable end (a) is properly installed on the mounting stud (b). (Figure 5)

Figure 5

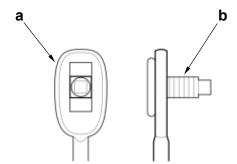









- · Shift cable after install check.
- -1. Turn the vehicle to the ON mode.
- -2. Move the shift lever to each position/mode, and check that the shift position indicator follows the shift lever operation.
- -3. Shift the transmission to P position/mode, and check that the shift lock works properly.
- -4. Push the shift lock release, and check that the shift lever releases. Also check that the shift lever locks when it is shifted back to P position/mode.
- -5. Start the engine.

NOTE: Check that the engine starts in P or N position/mode, and does not start in any other positions/modes.

-6. Make sure the vehicle is turned to the OFF (LOCK) mode with the shift lever in P position/mode. If it is not, adjust the shift cable again.

K.-

#### ■ Sub-Procedure

#### Removal



Do not wipe off the special grease.

L. -












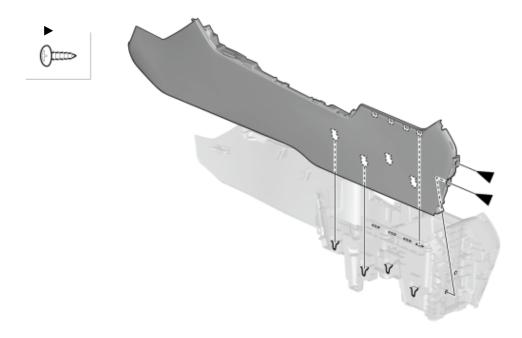

M.-














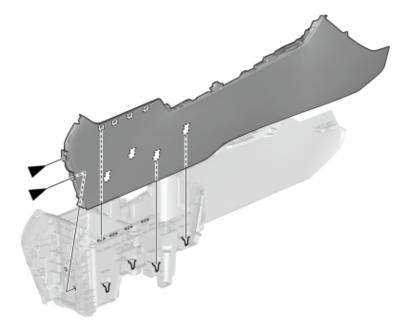

N.-












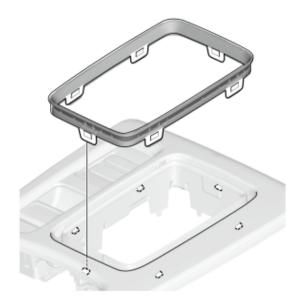

O. -














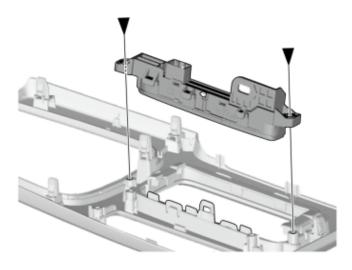

P. -













Q. -












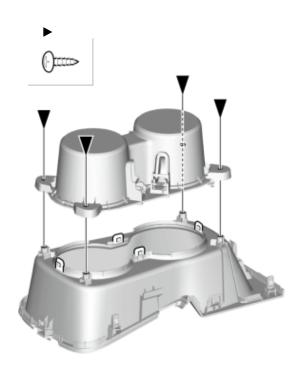

R.-












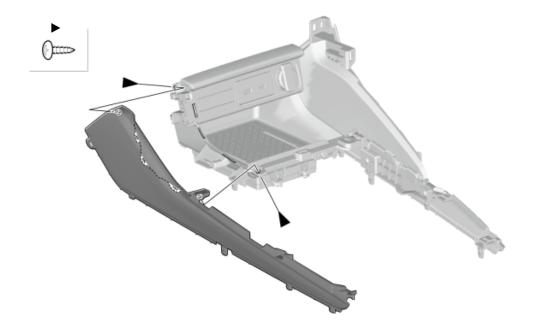

S. -













T. -












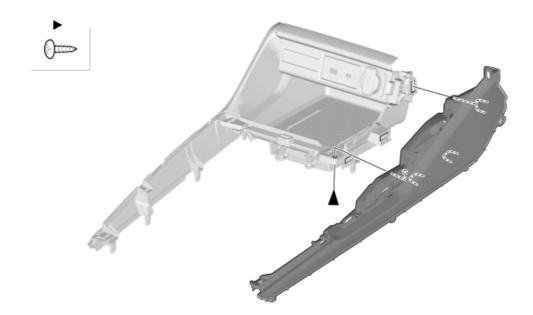

U. -

# ■ Sub-Procedure











### Removal

• Refer to the figure.



V. -

# ■ Sub-Procedure












### • Removal

• Refer to the figure.

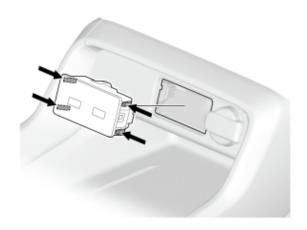

W. -

### ■ Sub-Procedure

# Removal

• Refer to the figure.












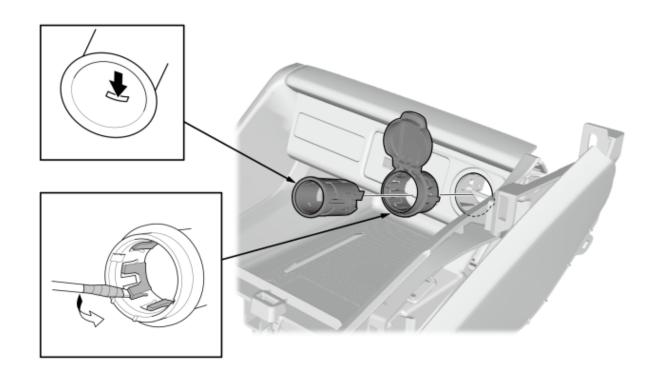

X. -

# ■ Sub-Procedure



3 Bookmarks








### Removal

• Refer to the figure.

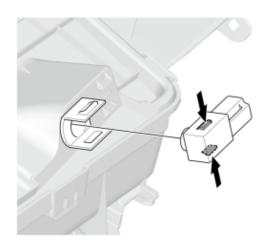

Y. -














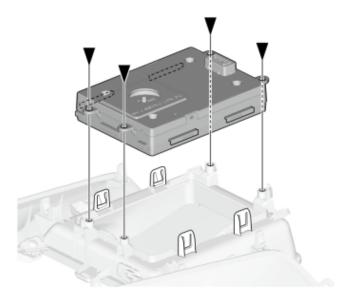

Z. -












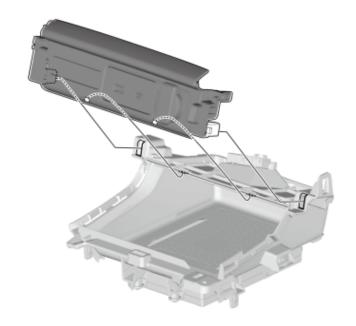

AA.-












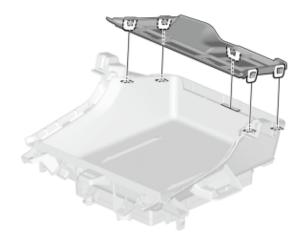

AB.-

# ■ Sub-Procedure












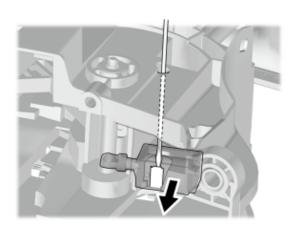

## Removal

### NOTICE

Do not wipe off the special grease.

• Refer to the figure.

AC.-

## ■ Sub-Procedure












## Removal

• Refer to the figure.

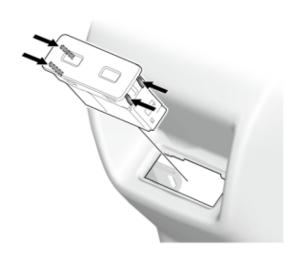

**1**Center Console Assembly Removal














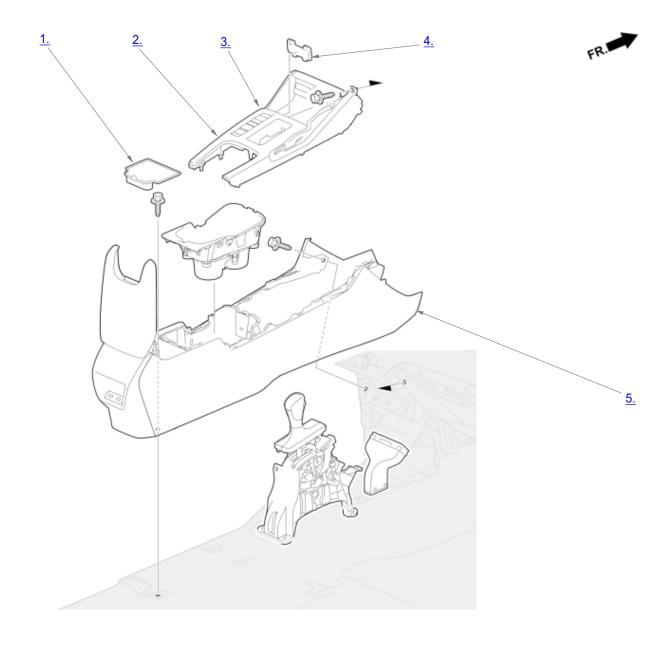




3 Bookmarks



Convert



Reference - Repair

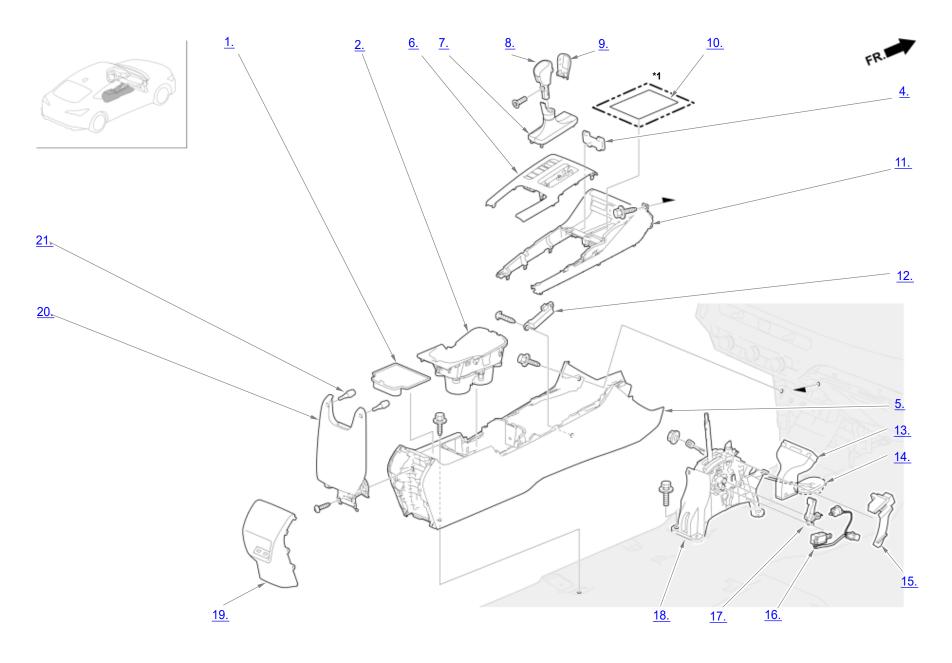

+1. \\/i+h a...+ ...ival aaa ah awaa




3



**△ △** Convert



Reference - Repair

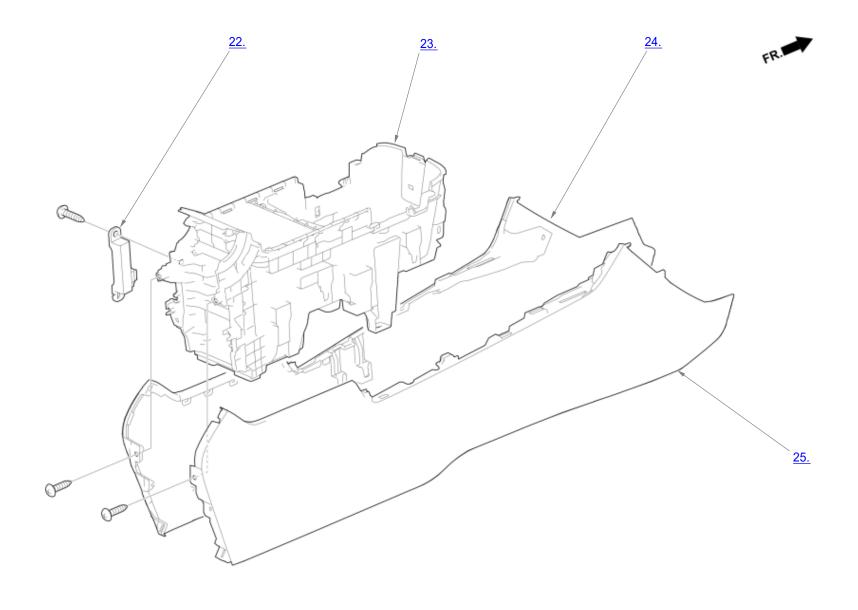




3 Bookmarks



Convert



Reference - Repair

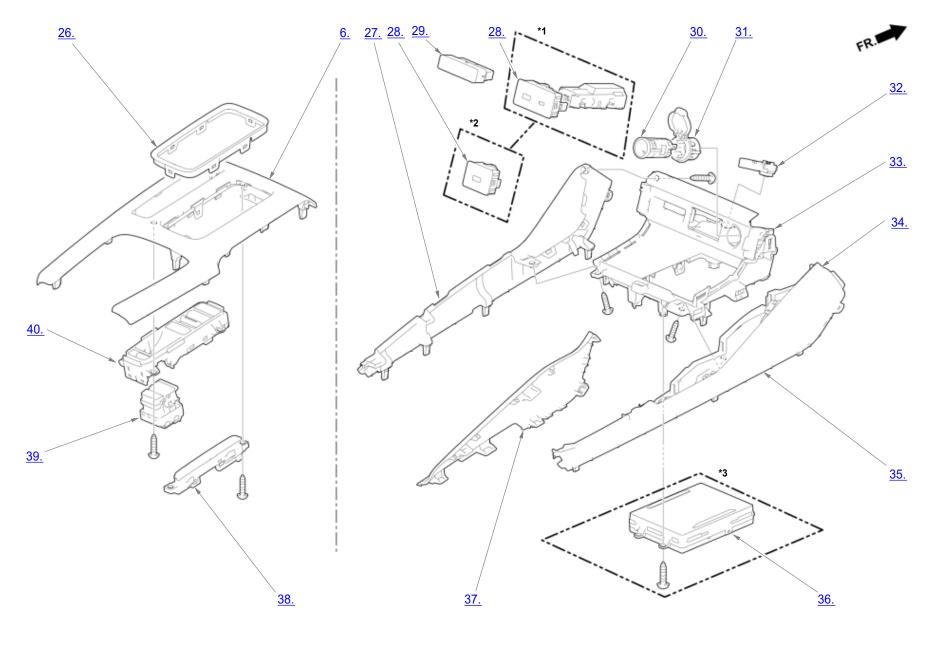

+1. Display andia type (0 inch serson)




3 Bookmarks








Reference - Repair

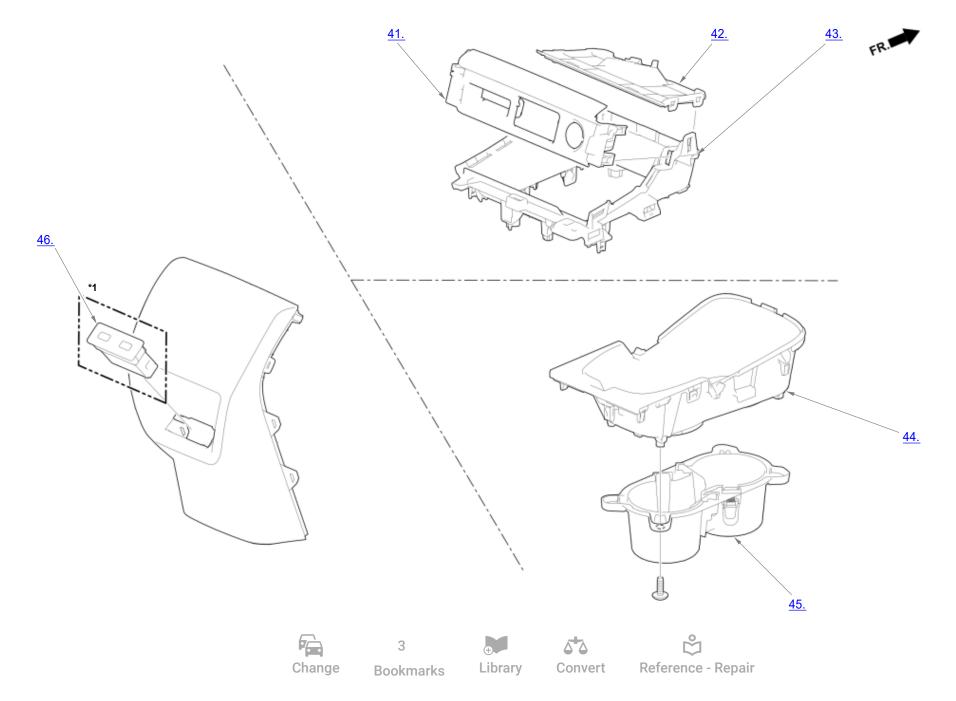

9. Shift Lever Knob Cover	3	<b>①</b>	5*3	<b>⊗</b>
8. Shift Lever Knob				
7. Shift Lever Boot				
6. Center Console Panel				
5. Center Console				
4. Shift Lock Release Lid				
3. Center Console Panel Assembly				
2. Cup Holder Assembly				
1. Center Console Box Mat				

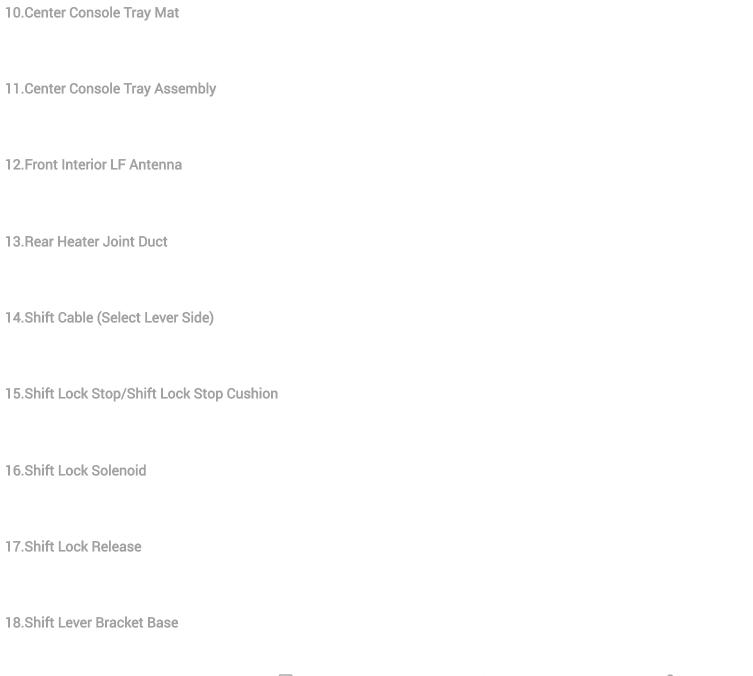











20.Center Console Armrest
21.Center Console Armrest Stopper
22.Rear Interior LF Antenna
23.Center Console Box
24.Driver's Center Console Side Panel
25.Passenger's Center Console Side Panel
26.Shift Lever Molding
27.Driver's Center Console Side Trim












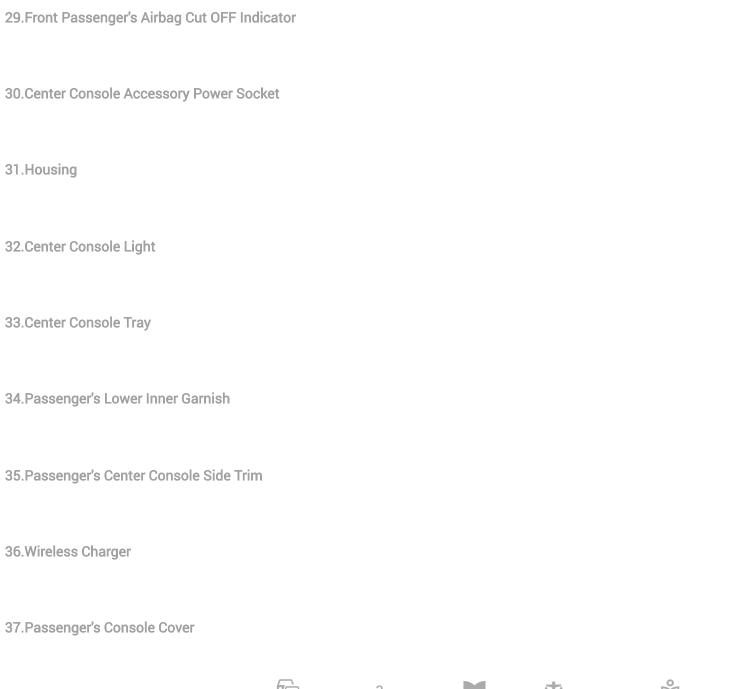











39. Electric Parking Brake Switch/Automatic Brake Hold Switch 40.Drive Mode Switch/Idle Stop OFF Switch/ECON Switch 41.Jack Panel **42.Center Console Upper Tray 43**.Center Console Lower Tray 44.Cup Holder Trim 45.Cup Holder 46.USB Charger Unit (Rear Console)









