


 : Torque, N·m (lbf·ft)	 : Replace	 : Warning/Caution	 : Inspection/Adjustment	 : Learning	 : SPL Tool	 : Required Removal
---	--	--	--	---	---	---


2

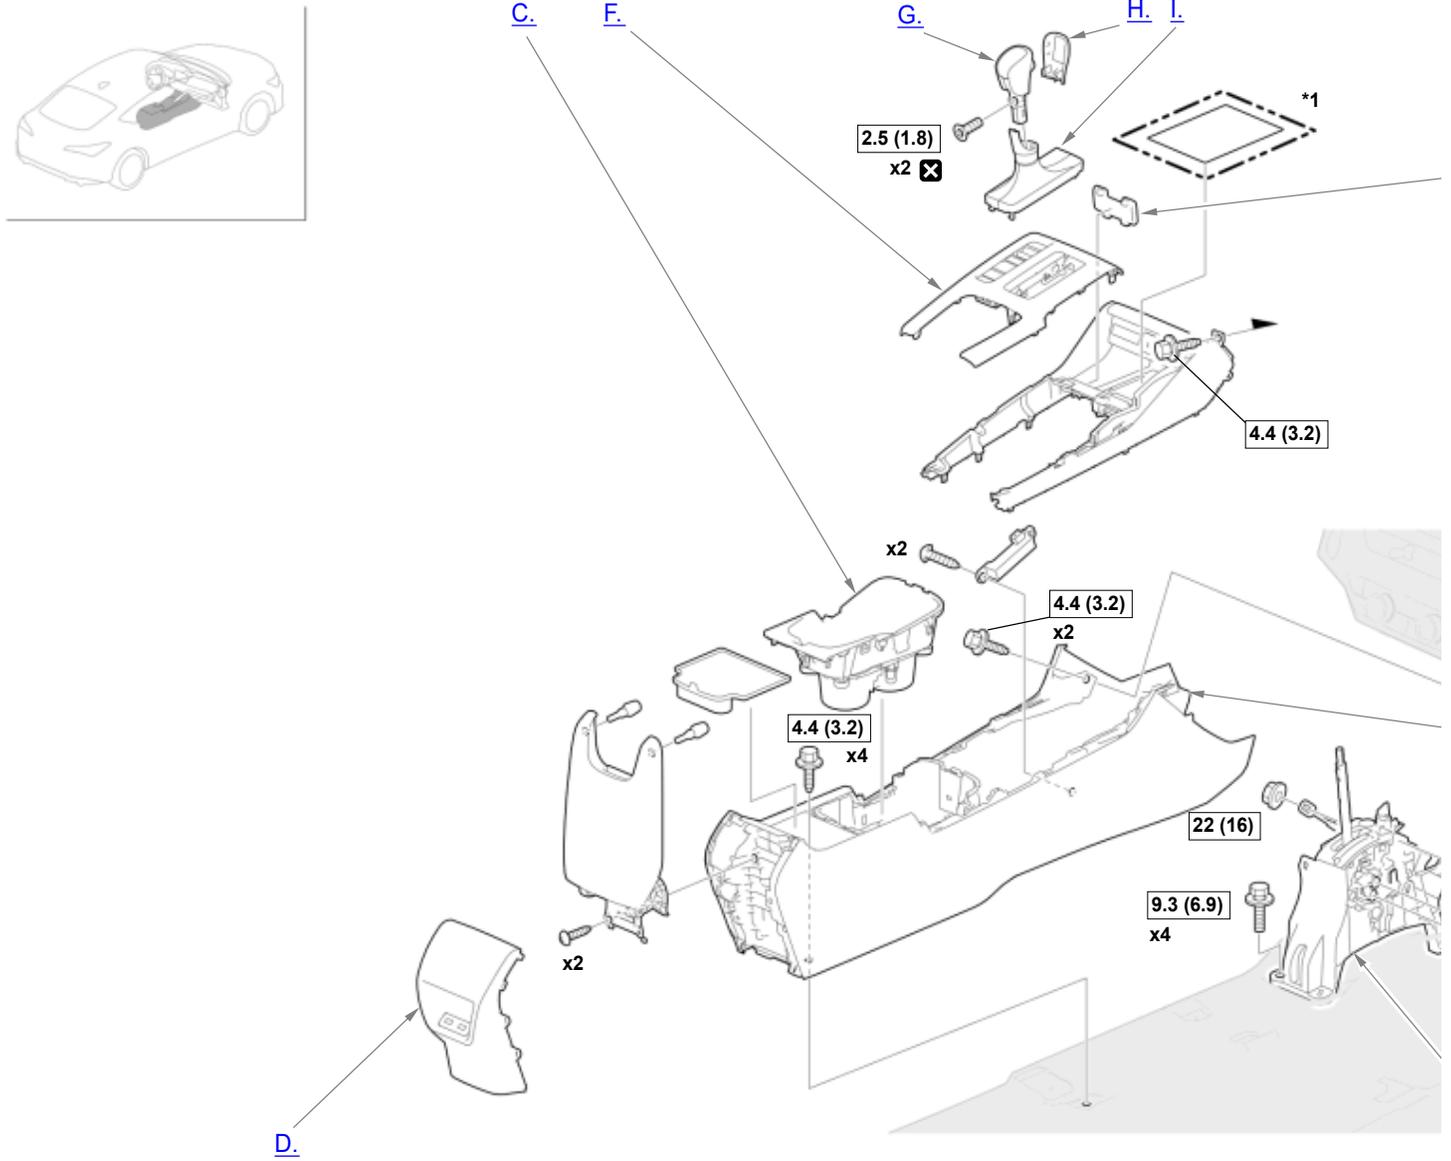

 : Torque, N·m (lbf·ft)	 : Replace	 : Warning/Caution	 : Inspection/Adjustment	 : Learning	 : SPL Tool	 : Required Removal
---	--	--	--	---	---	---


*1: Without wireless charger

3

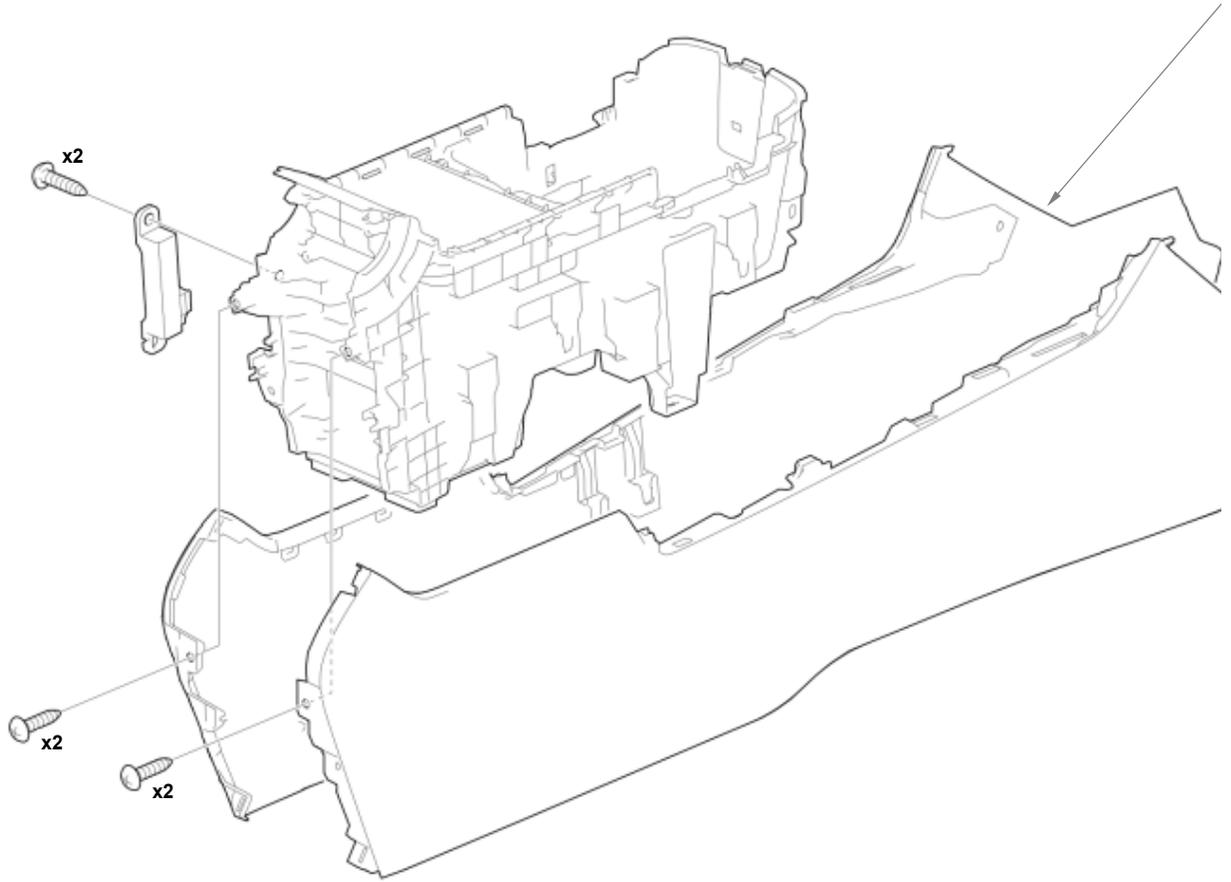


 : Torque, N·m (lbf·ft)	 :	 :	 :	 :	 : SPL	 : Required
	Replace	Warning/Caution	Inspection/Adjustment	Learning	Tool	Removal

4

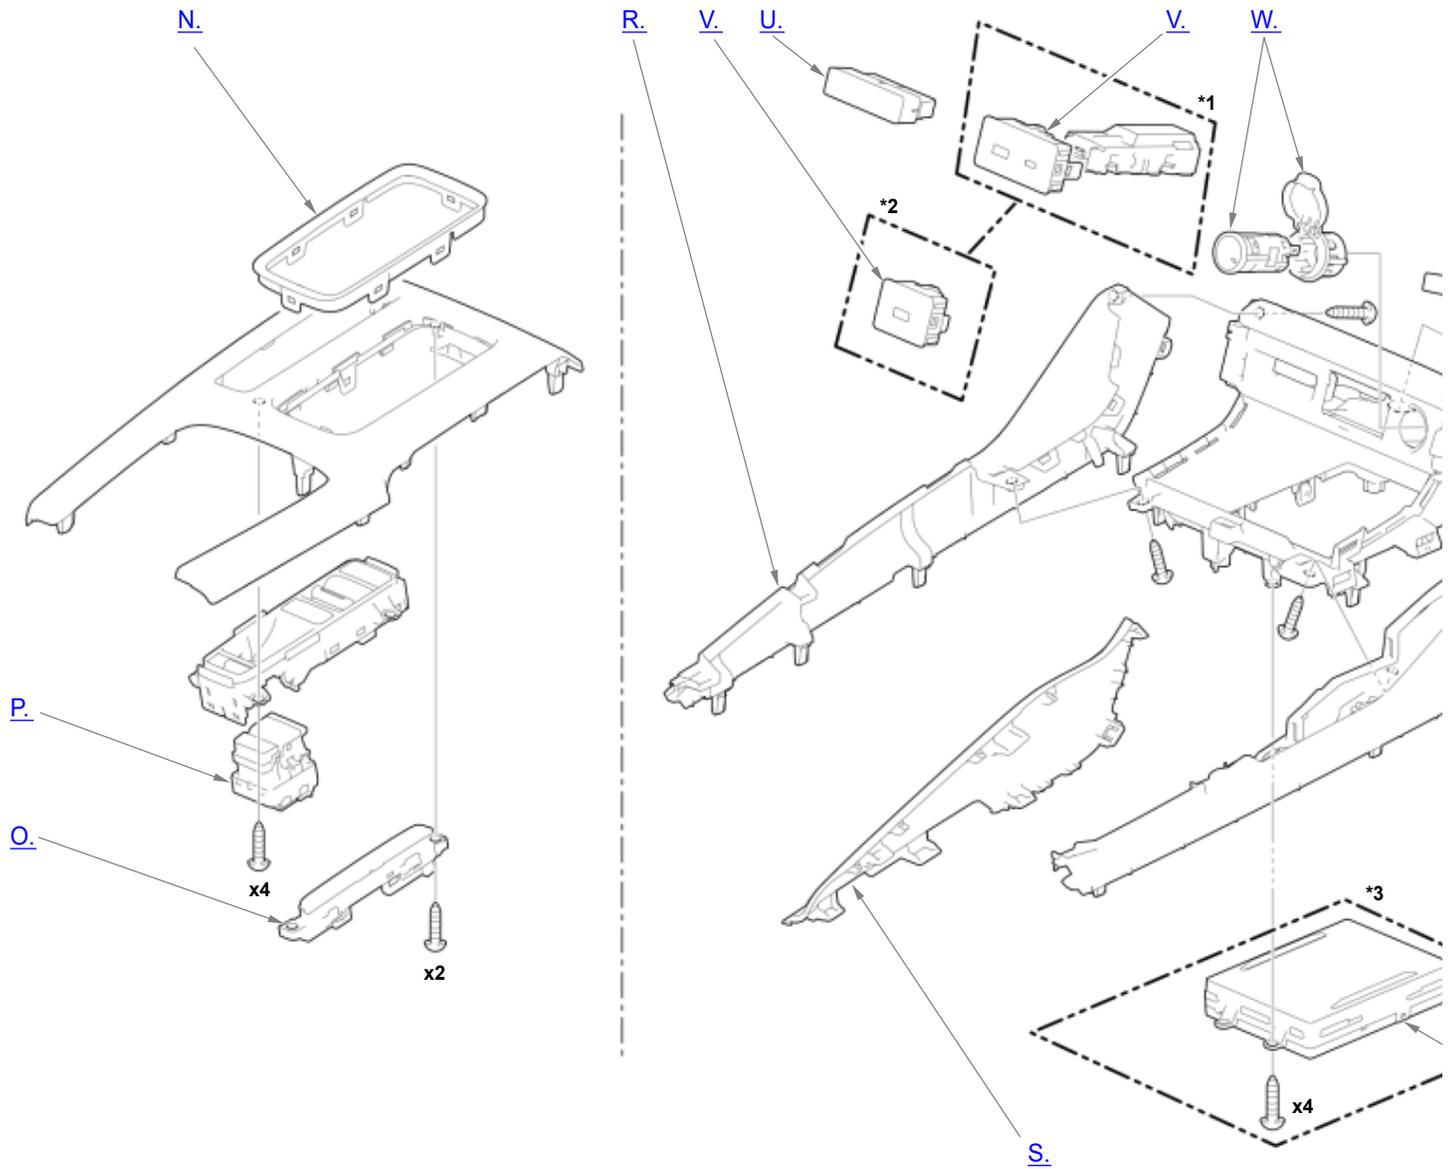

 : Torque,	 :	 :	 :	 :	 : SPL	 : Required
N·m (lbf·ft)	Replace	Warning/Caution	Inspection/Adjustment	Learning	Tool	Removal


*1: Display audio type (9-inch screen)
 *2: Color audio type (7-inch screen)
 *3: With wireless charger

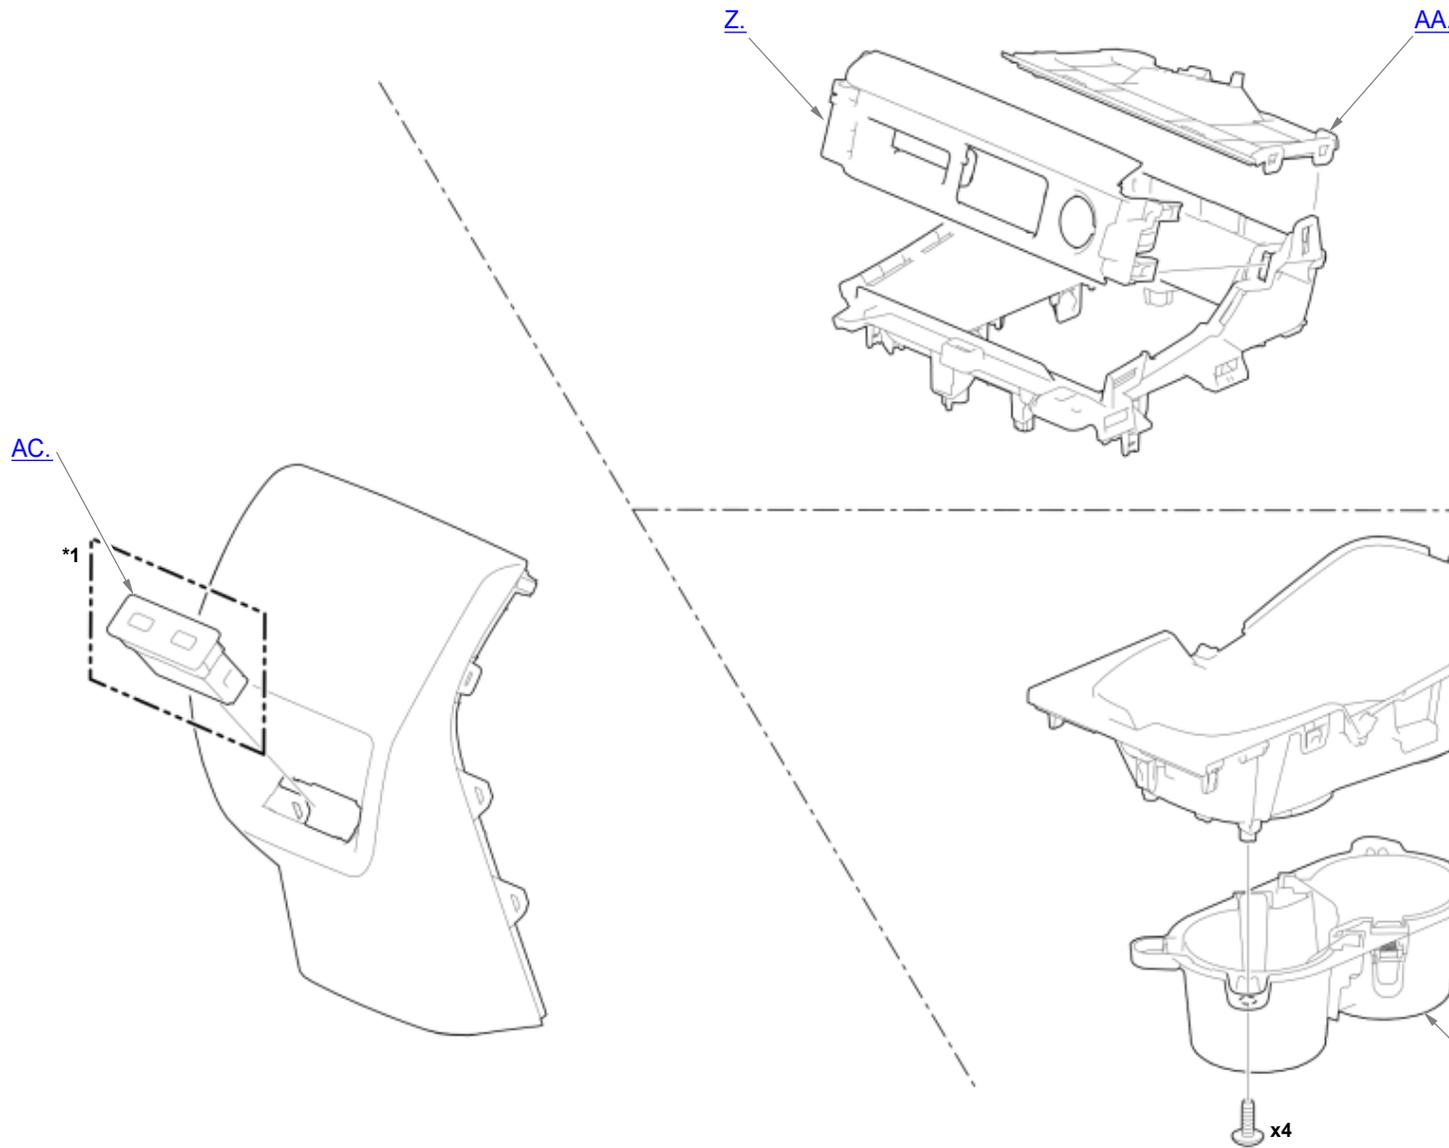

: Torque, N·m (lbf·ft)	:	:	:	:	: SPL Tool	: Required Removal
---------------------------	---	---	---	---	---------------	-----------------------

*1: Display audio type (9-inch screen)

A. -

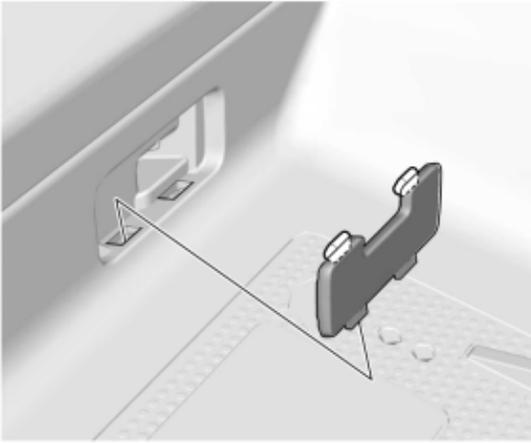

B. -

■ Key Information

Do the following before starting your work.



Remove:

- Passenger's Pad Assembly



■ Sub-Procedure

● Removal


- Refer to the figure.

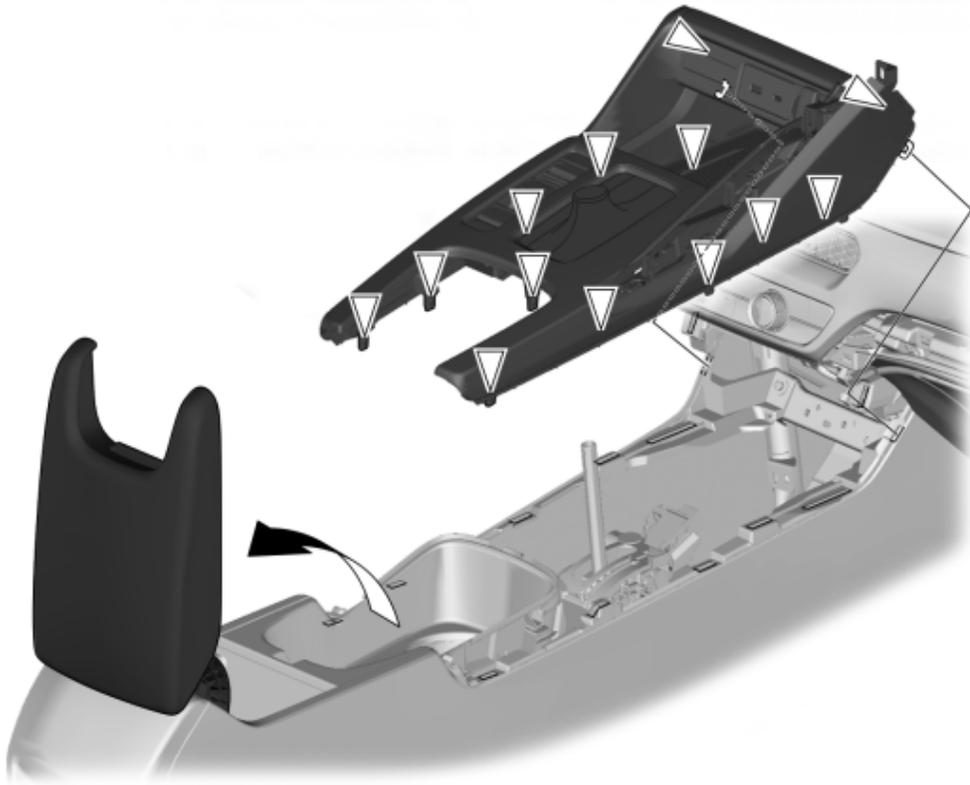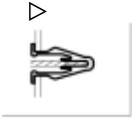

C. -

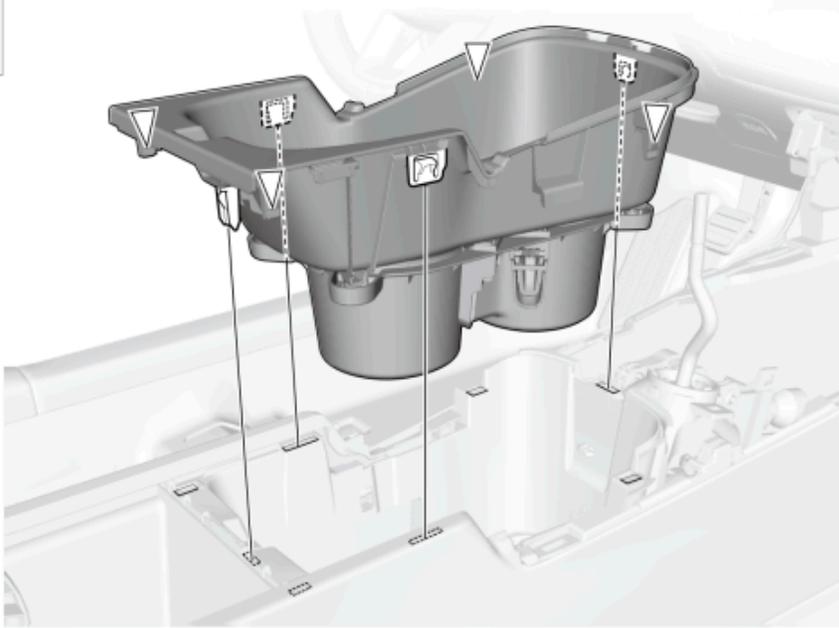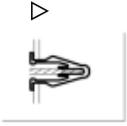

D. -


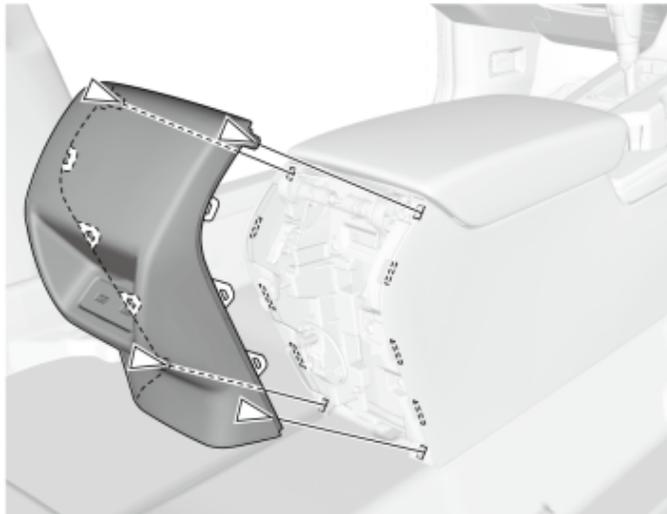


E. -



■ Sub-Procedure

- Removal

- Refer to the figure.

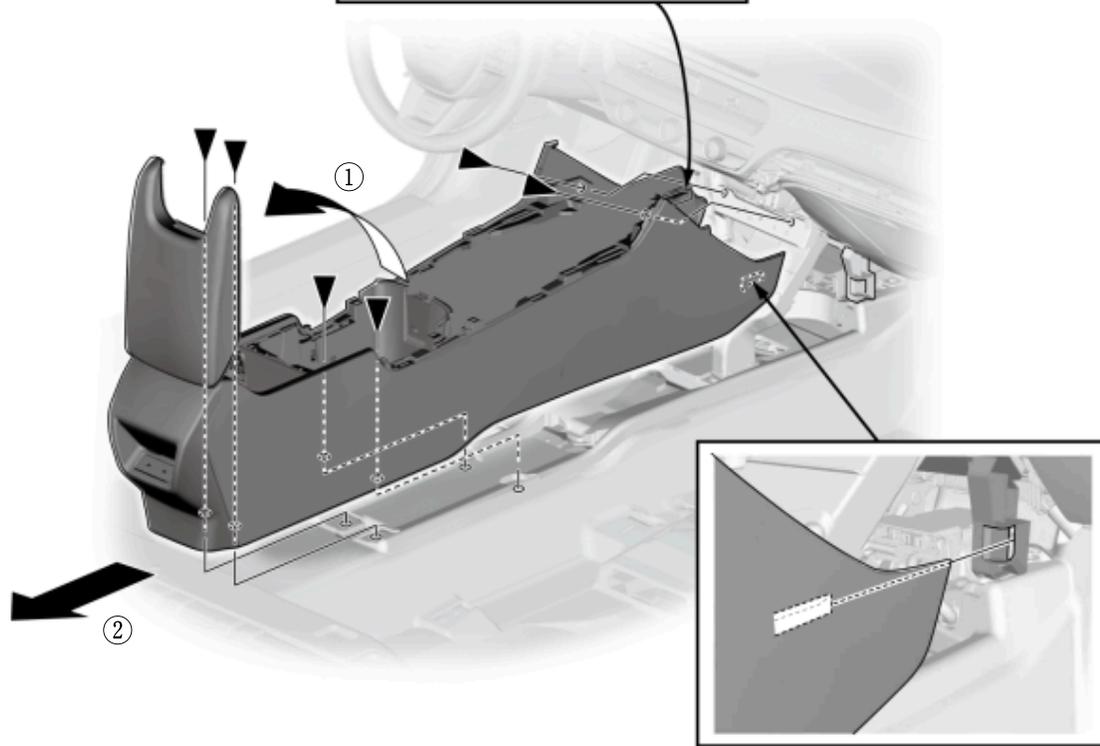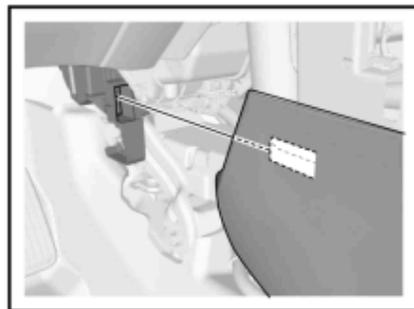

F. -

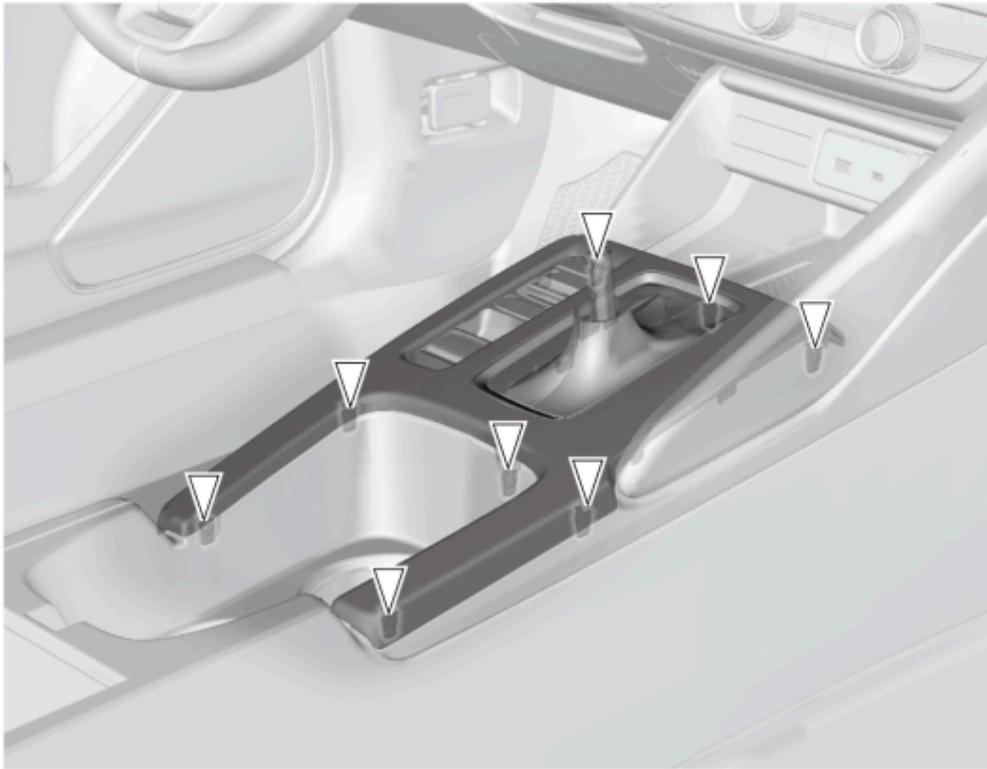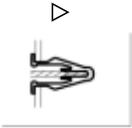

G. -


■ Sub-Procedure

● Removal

NOTICE

Do not wipe off the special grease.

- Refer to the figure.

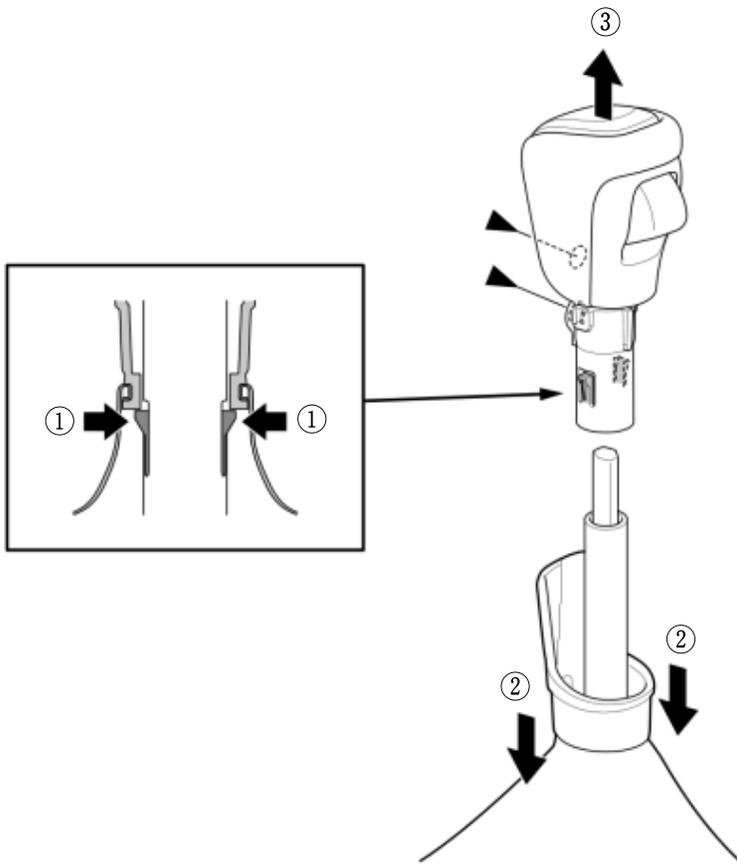


H. -

■ Sub-Procedure

● Removal

- Refer to the figure.

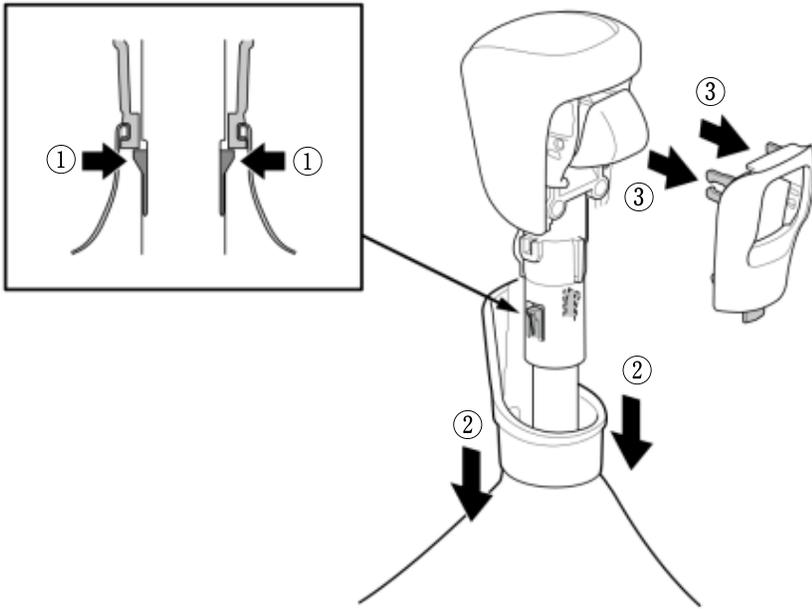


I. -

■ Sub-Procedure

● Removal

- Refer to the figure.

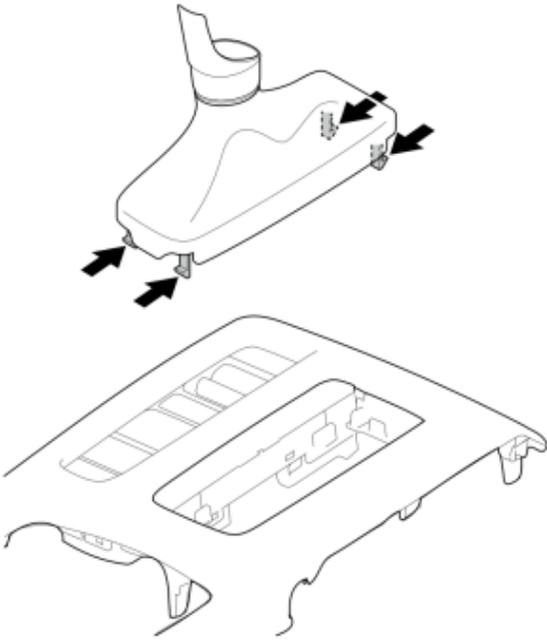

J. -

■ Preconditions


- Transmission R position/mode

■ Sub-Procedure

NOTICE

- Do not bend the shift cable excessively.
- Do not remove the shift cable by pulling the shift cable guide (a). (Figure 1)

Figure 1

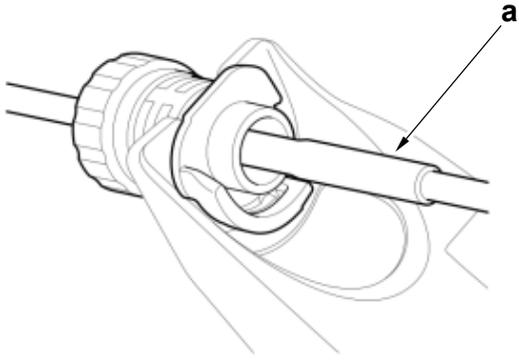


● Removal

1. Refer to figure 2.

Pin Specifications (Figure 2)


Specification	
b	6.0 mm (0.24 in)

Figure 2

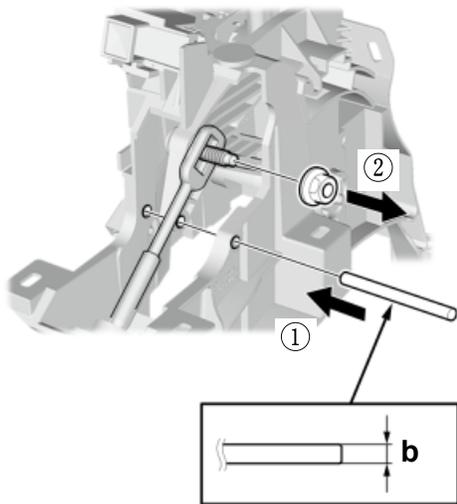

2. Refer to figure 3.


Figure 3

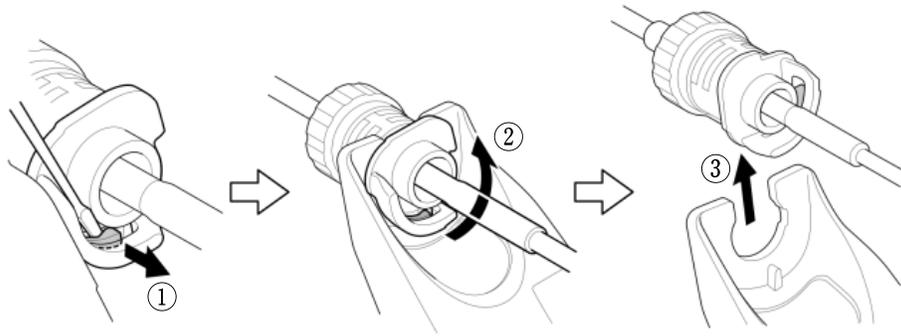

● Installation


1. Adjust shift cable.
2. Refer to figure 4.

Figure 4

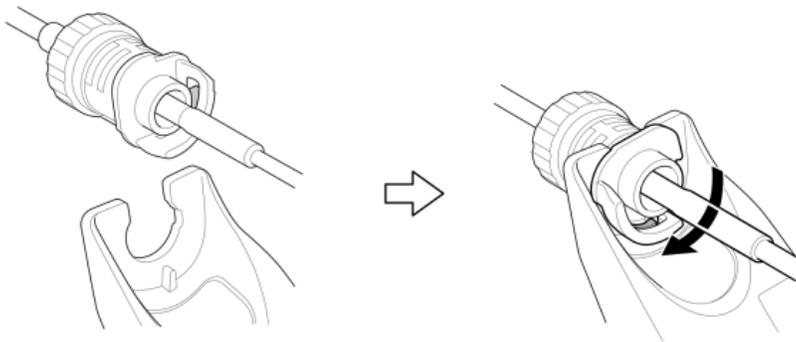

3. Make sure that the shift cable end (a) is properly installed on the mounting stud (b). (Figure 5)

Figure 5

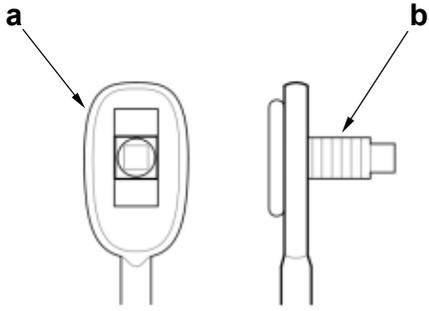

■ After Installation

- Shift cable after install check.

- 1. Turn the vehicle to the ON mode.
- 2. Move the shift lever to each position/mode, and check that the shift position indicator follows the shift lever operation.
- 3. Shift the transmission to P position/mode, and check that the shift lock works properly.
- 4. Push the shift lock release, and check that the shift lever releases. Also check that the shift lever locks when it is shifted back to P position/mode.
- 5. Start the engine.

NOTE: Check that the engine starts in P or N position/mode, and does not start in any other positions/modes.

- 6. Make sure the vehicle is turned to the OFF (LOCK) mode with the shift lever in P position/mode. If it is not, adjust the shift cable again.

K. -



■ Sub-Procedure

● Removal



NOTICE

Do not wipe off the special grease.


L. -

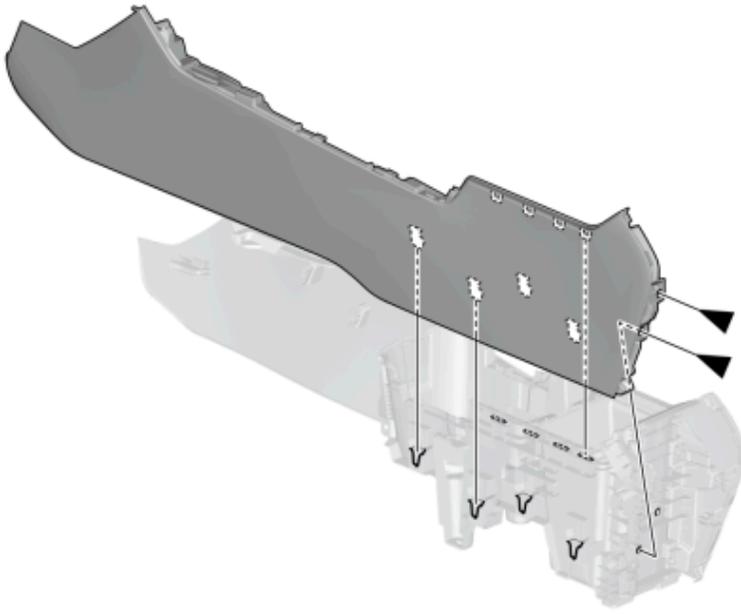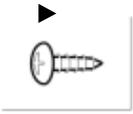



M.-

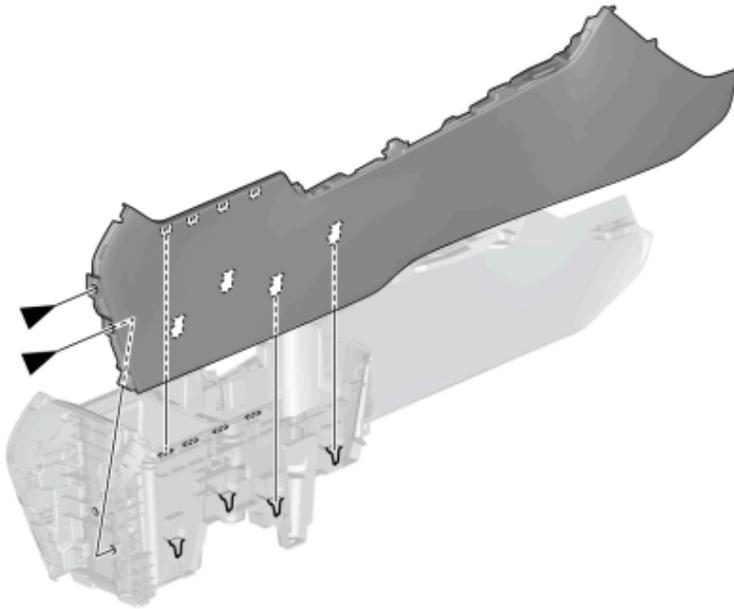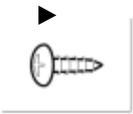


N.-

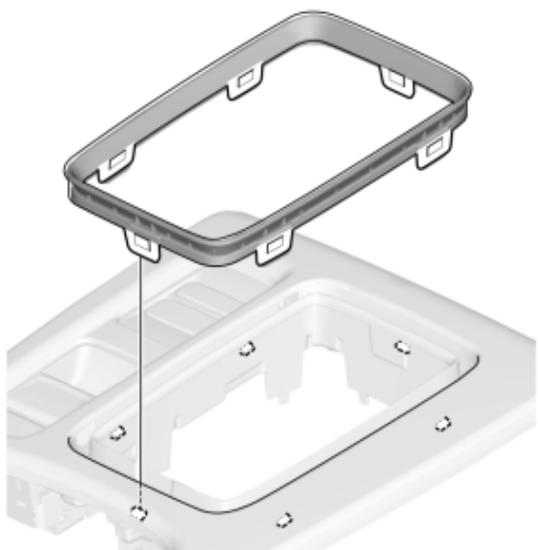



O. -

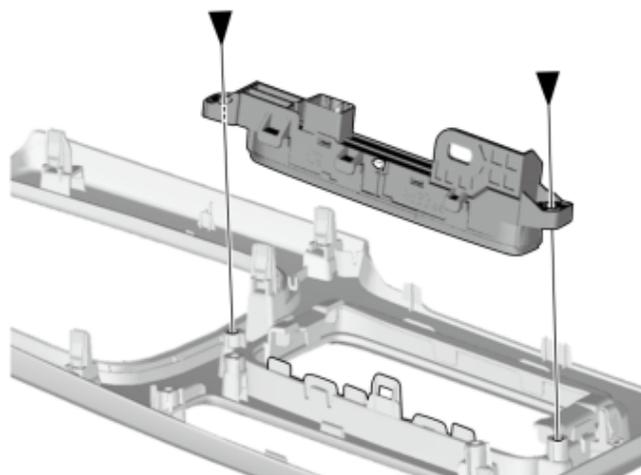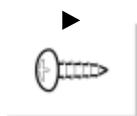



P. -

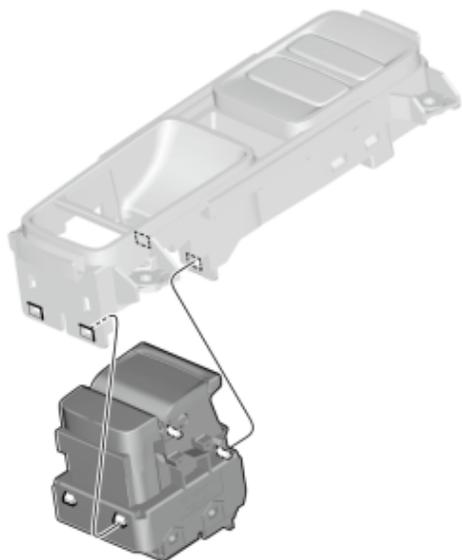

Q. -

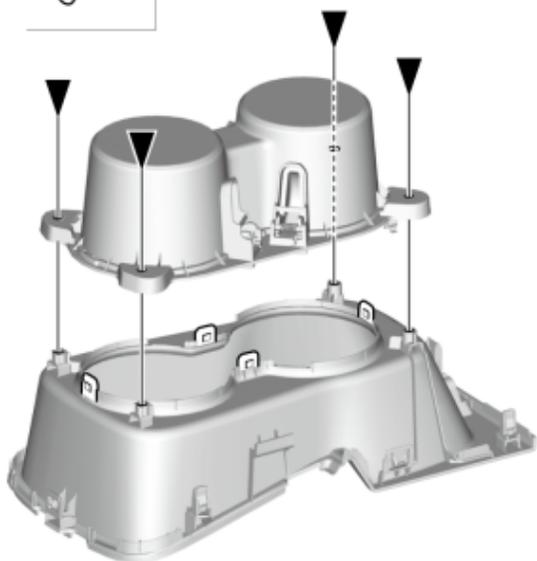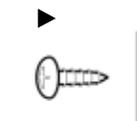



R. -

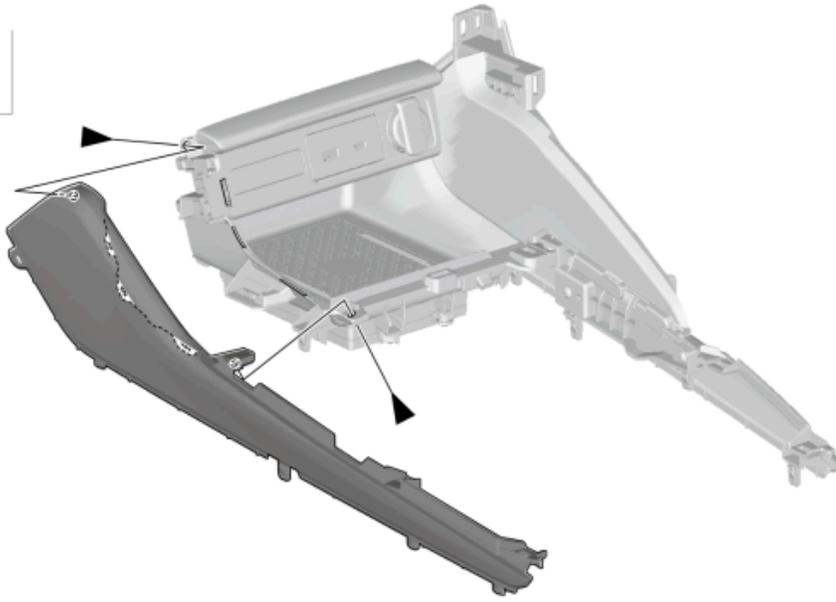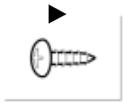

S. -



T. -

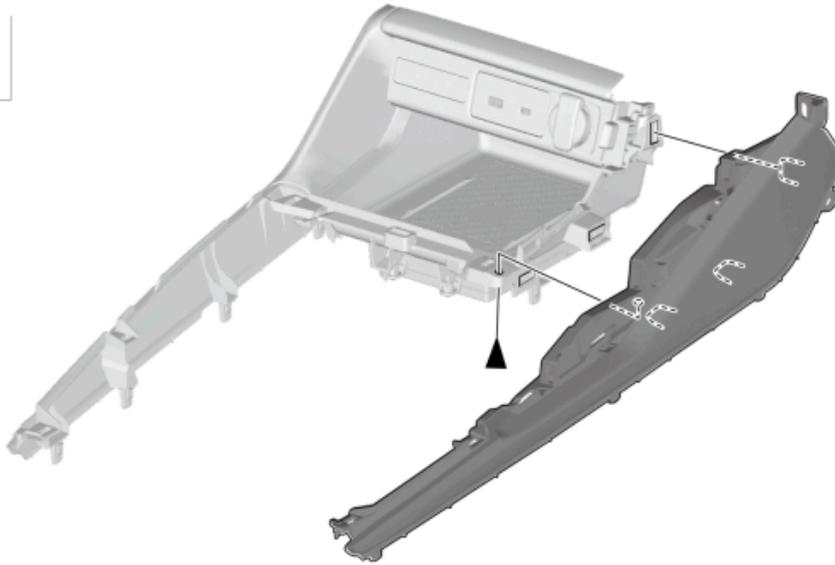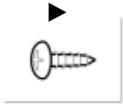


U. -

■ Sub-Procedure

● Removal

- Refer to the figure.

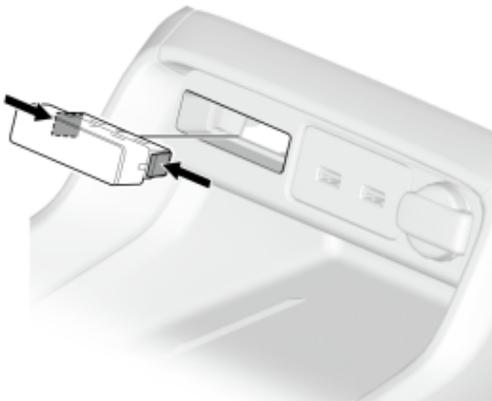


V. -

■ Sub-Procedure

● Removal

- Refer to the figure.

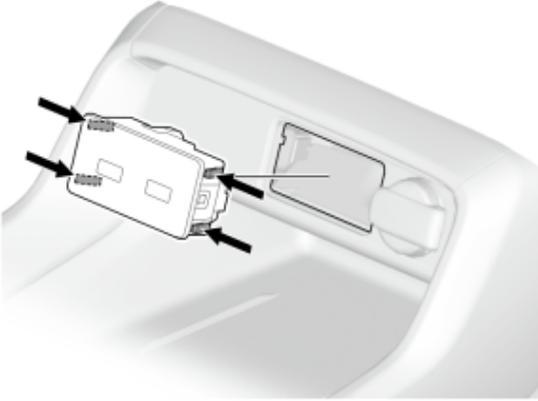


W.-

■ Sub-Procedure

● Removal

- Refer to the figure.

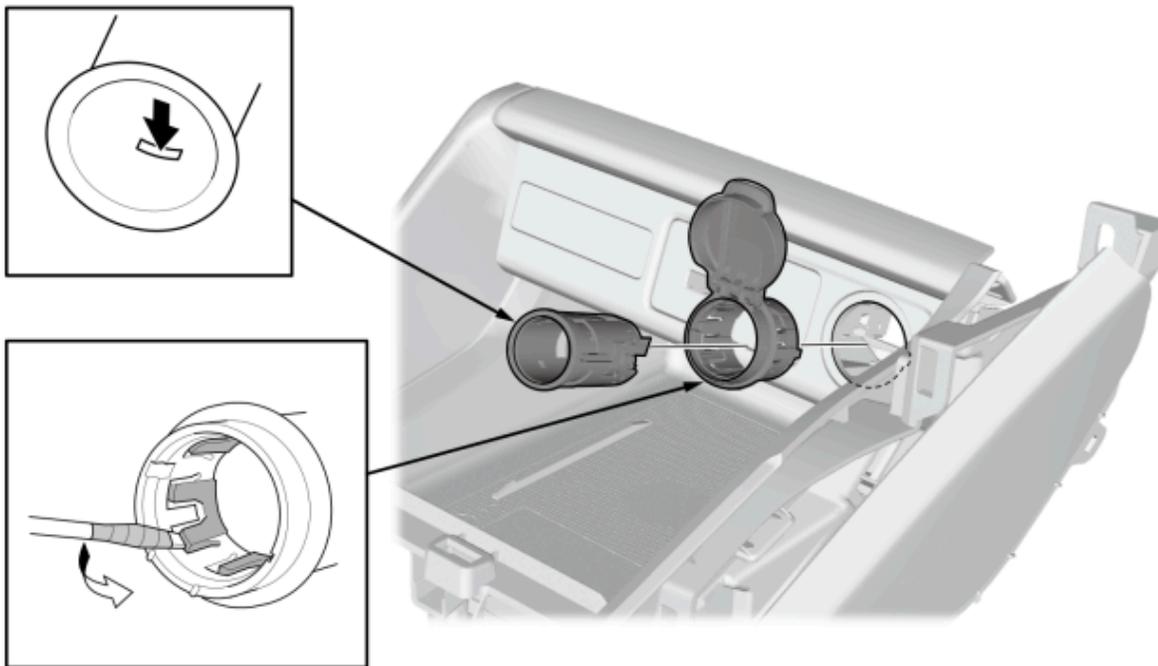


X. -



■ Sub-Procedure

● Removal


- Refer to the figure.

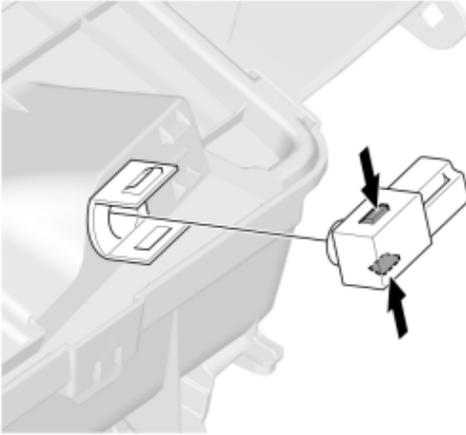


Y. -

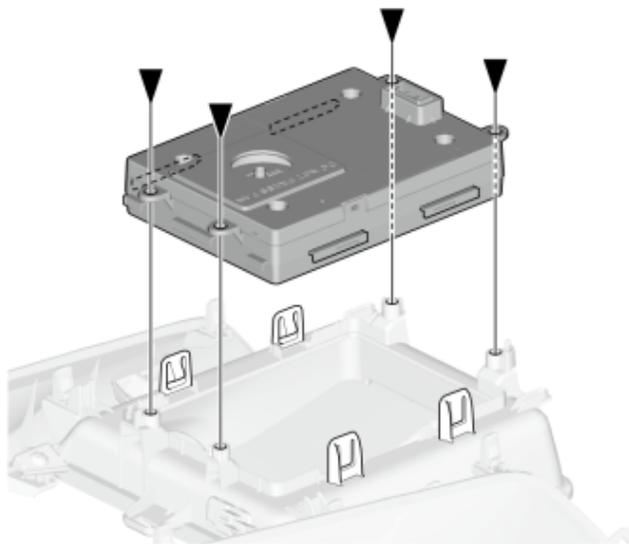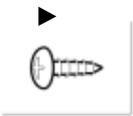

Z. -

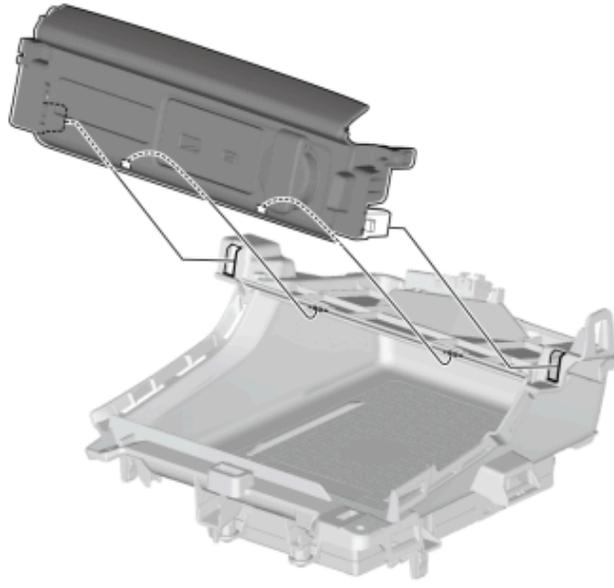


AA.-

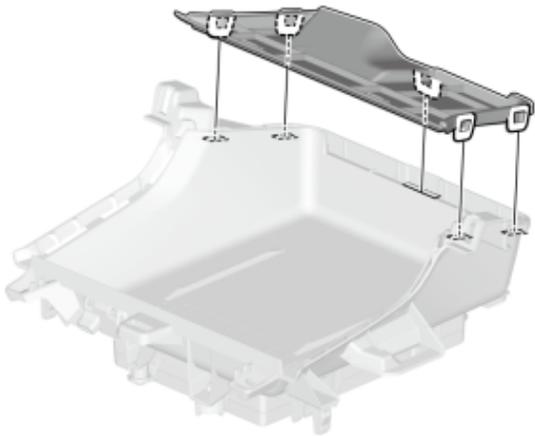

AB.-

■ Sub-Procedure

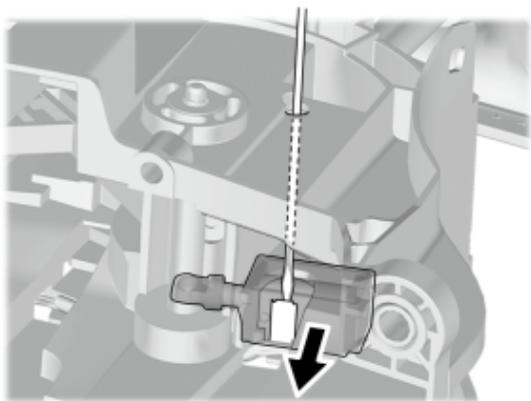


● Removal

NOTICE

Do not wipe off the special grease.

- Refer to the figure.

AC.-

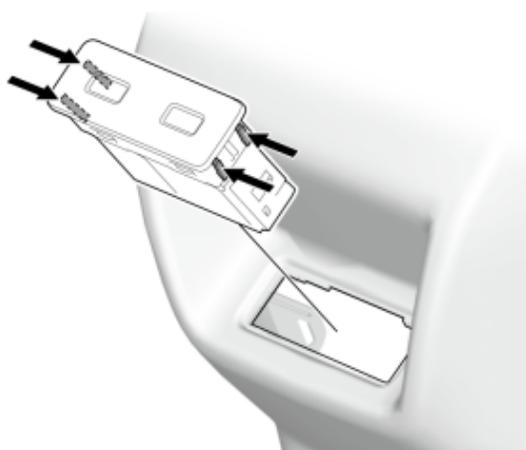



■ Sub-Procedure


● Removal

- Refer to the figure.


1


Center Console Assembly Removal

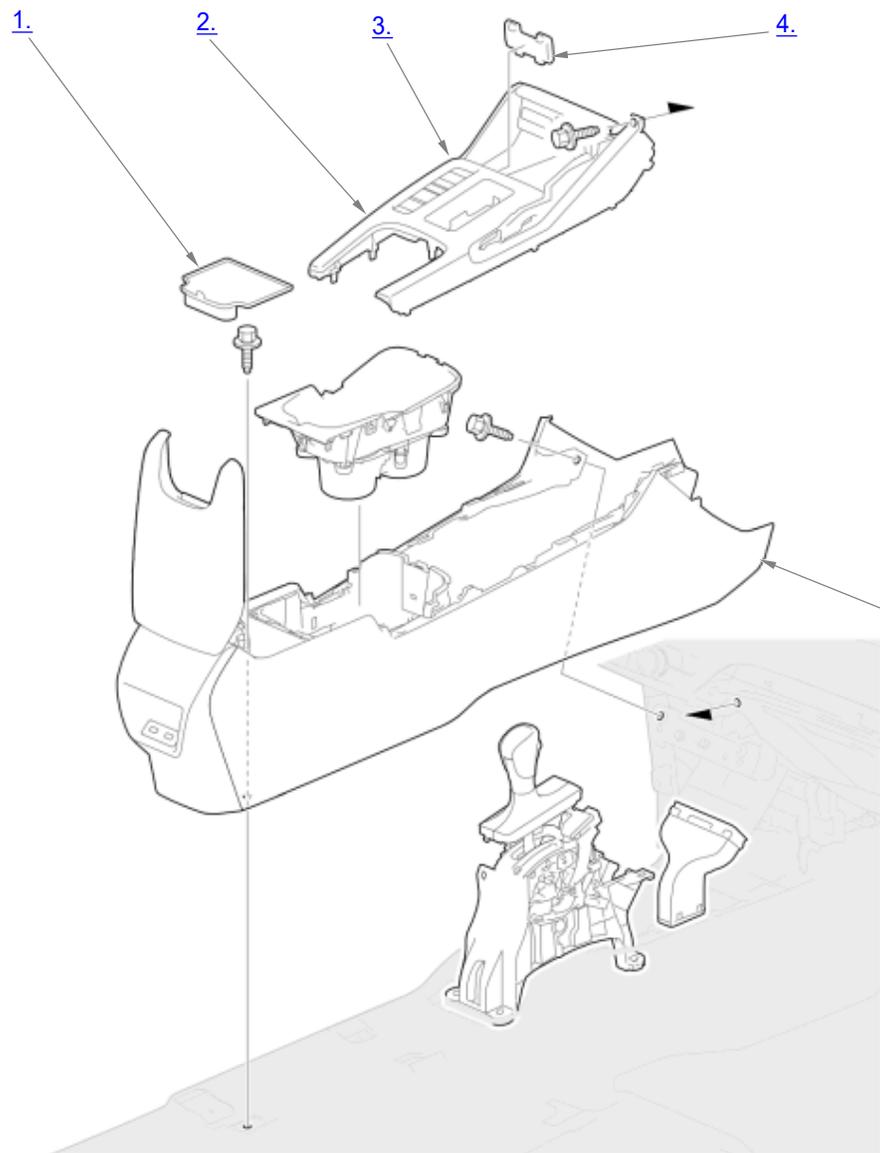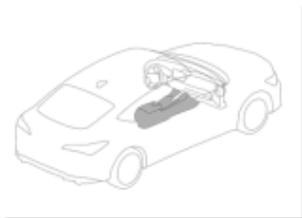

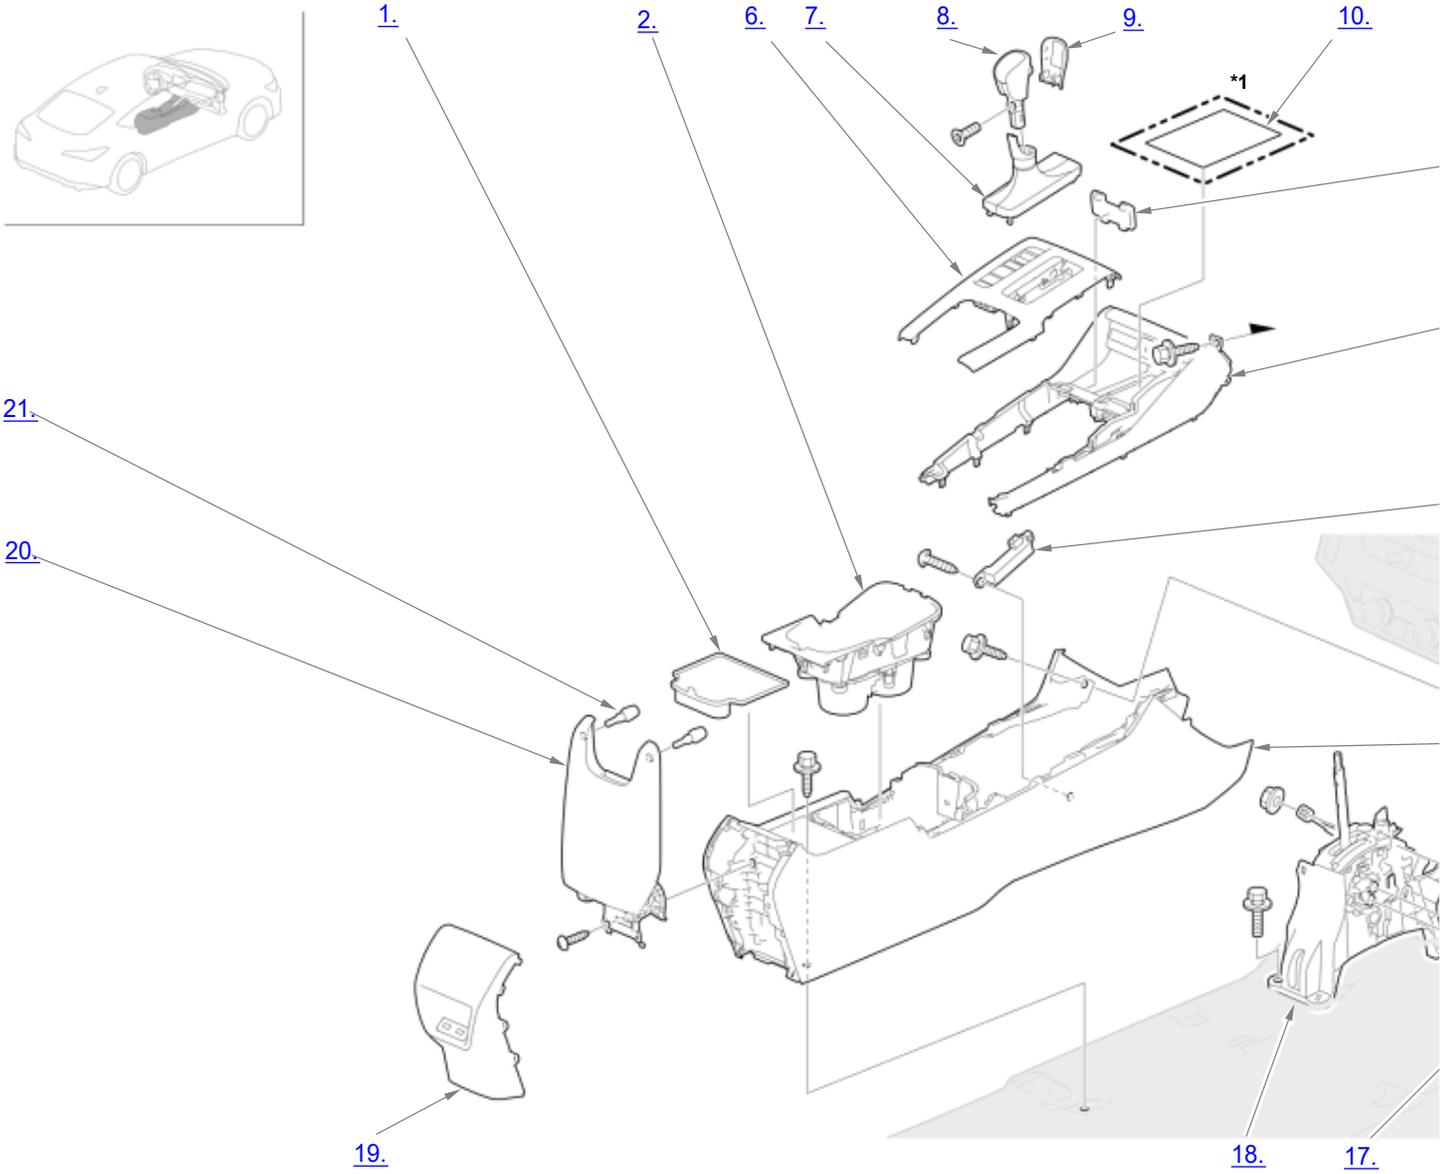


*1: Without wireless charger

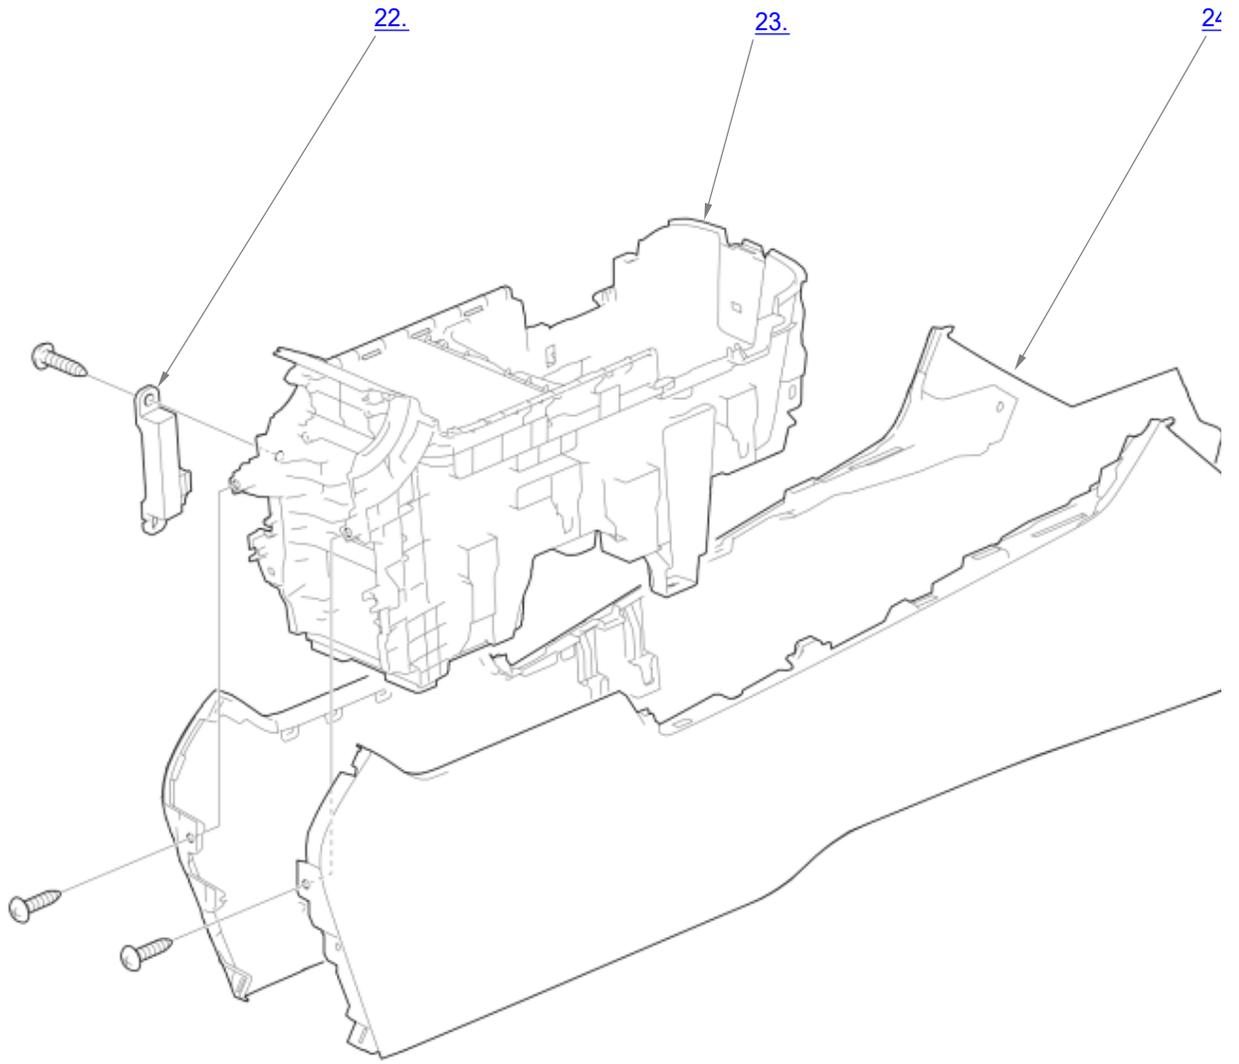

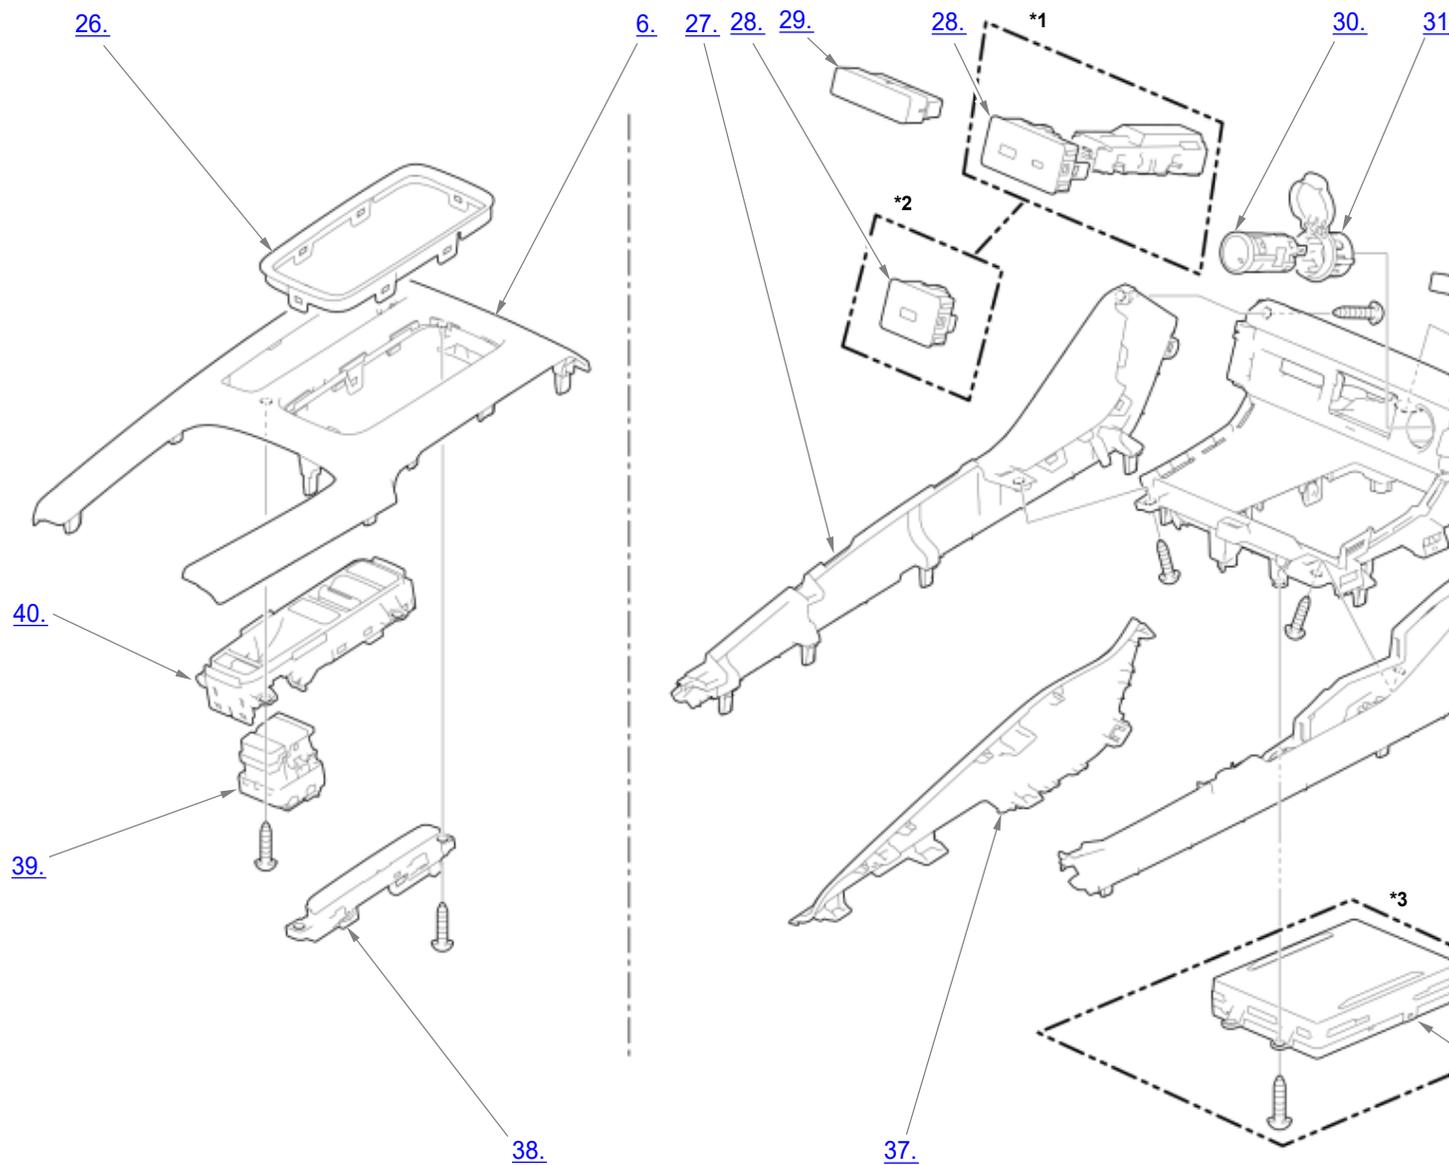

*1: Display audio type (9-inch screen)
 *2: Color audio type (7-inch screen)
 *3: With wireless charger

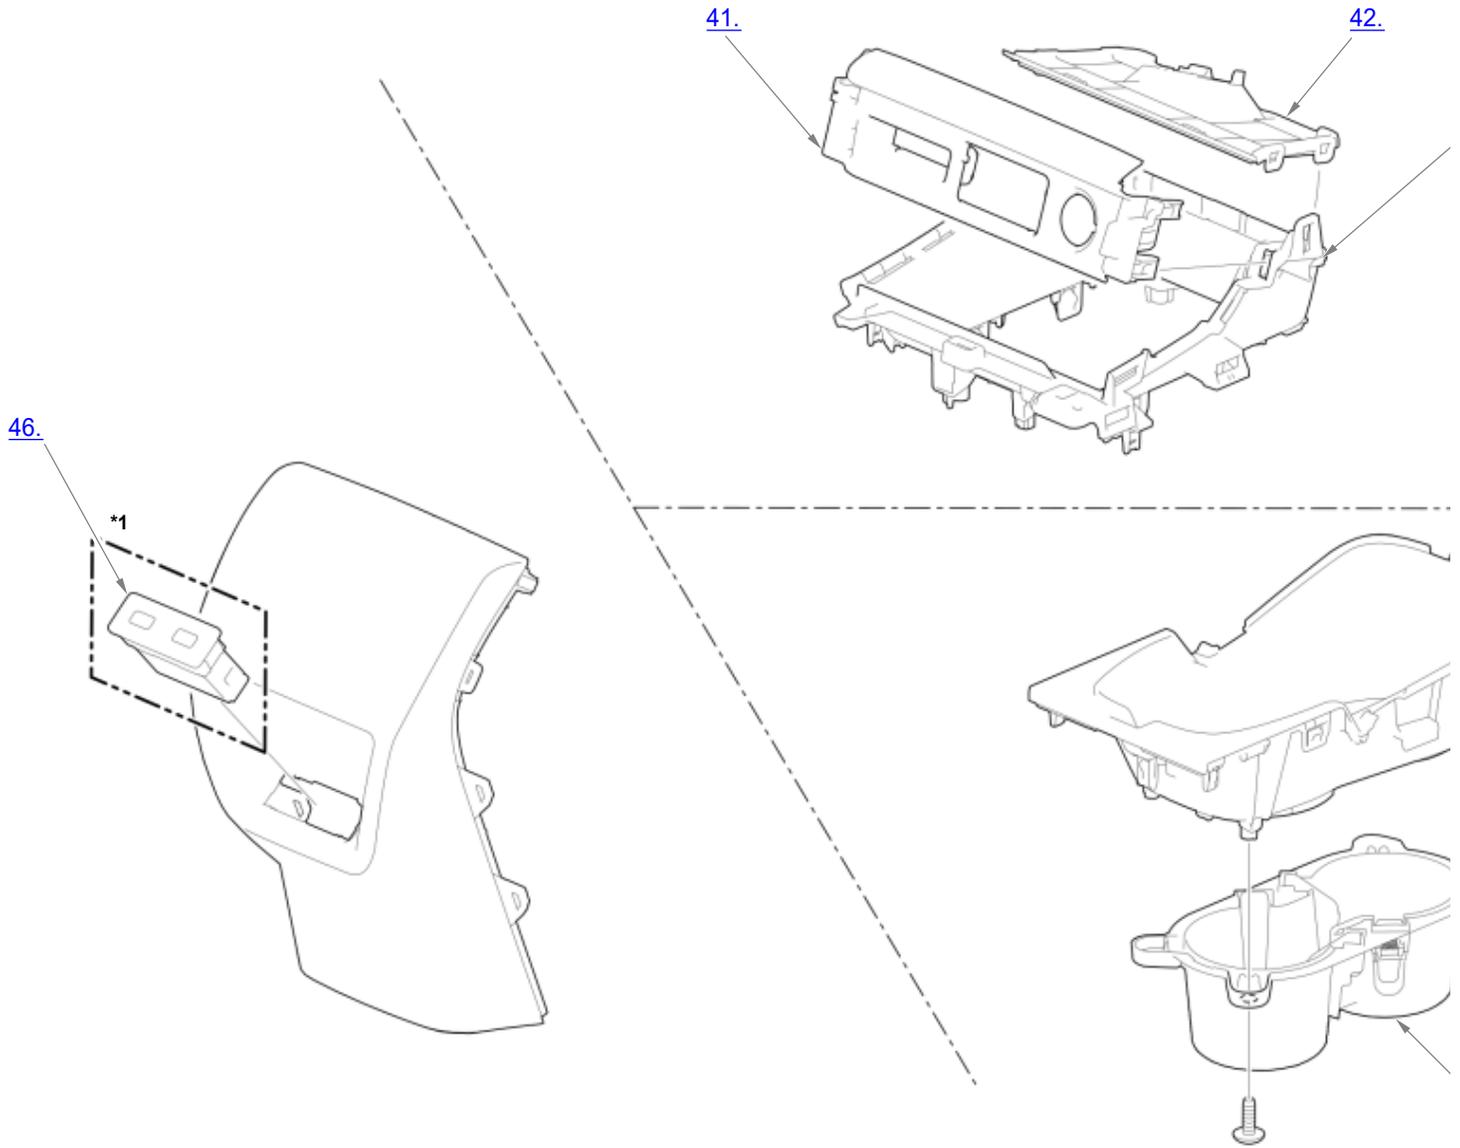

*1: Display audio type (9-inch screen)

1. Center Console Box Mat

2. Cup Holder Assembly

3. Center Console Panel Assembly

4. Shift Lock Release Lid

5. Center Console

6. Center Console Panel

7. Shift Lever Boot

8. Shift Lever Knob

9. Shift Lever Knob Cover

10.Center Console Tray Mat

11.Center Console Tray Assembly

12.Front Interior LF Antenna

13.Rear Heater Joint Duct

14.Shift Cable (Select Lever Side)

15.Shift Lock Stop/Shift Lock Stop Cushion

16.Shift Lock Solenoid

17.Shift Lock Release

18.Shift Lever Bracket Base

19.Center Console Rear Trim

20.Center Console Armrest

21.Center Console Armrest Stopper

22.Rear Interior LF Antenna

23.Center Console Box

24.Driver's Center Console Side Panel

25.Passenger's Center Console Side Panel

26.Shift Lever Molding

27.Driver's Center Console Side Trim

28.USB Holder

29.Front Passenger's Airbag Cut OFF Indicator

30.Center Console Accessory Power Socket

31.Housing

32.Center Console Light

33.Center Console Tray

34.Passenger's Lower Inner Garnish

35.Passenger's Center Console Side Trim

36.Wireless Charger

37.Passenger's Console Cover

38.Shift Position Indicator

39.Electric Parking Brake Switch/Automatic Brake Hold Switch

40.Drive Mode Switch/Idle Stop OFF Switch/ECON Switch

41.Jack Panel

42.Center Console Upper Tray

43.Center Console Lower Tray

44.Cup Holder Trim

45.Cup Holder

46.USB Charger Unit (Rear Console)