


Headliner Area

CAUTION

- SRS components are located in this area. Before doing repairs or service:
 - Review the SRS component locations.
 - Review the precautions and procedures.

How to use this manual.


1

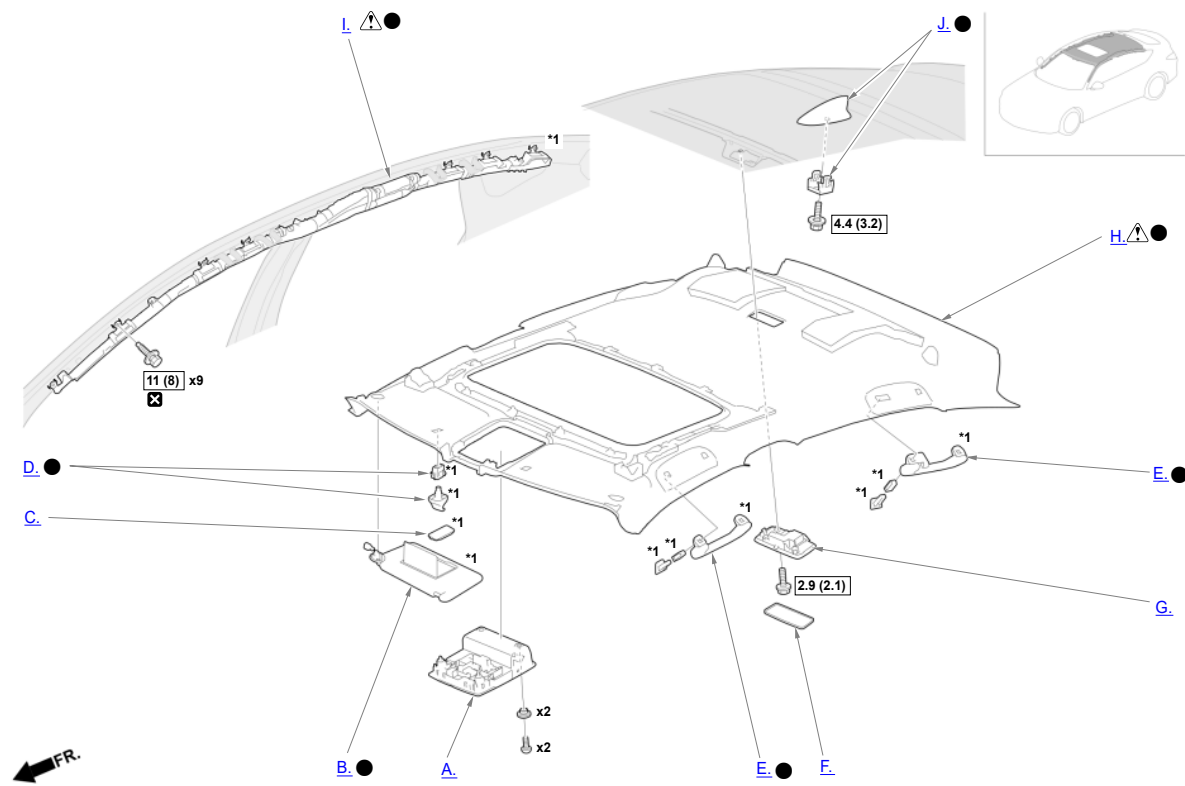

 : Torque, N·m (lbf·ft)	 : Replace	 : Warning/Caution	 : Inspection/Adjustment	 : Learning	 : SPL Tool	 : Required Removal
--	---	---	---	---	--	--

*1: Part(s) are shown for one side only as the procedure is the same for both sides.

2

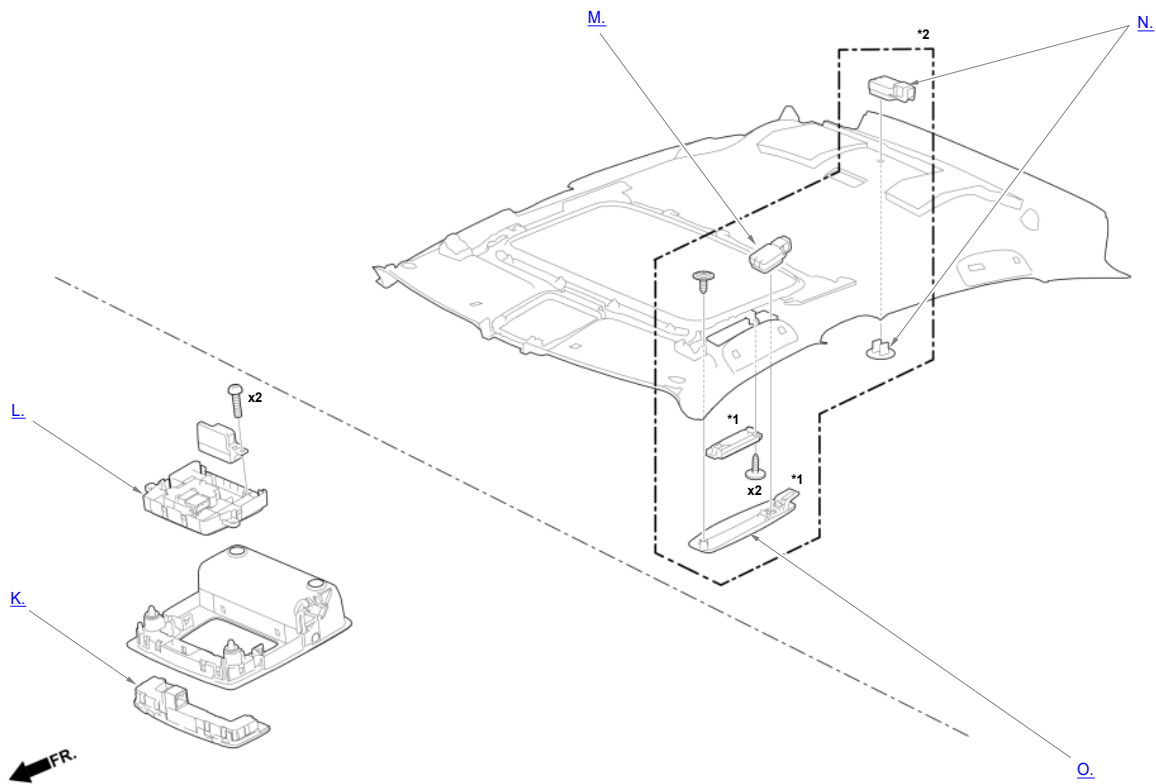

 : Torque, N·m (lbf·ft)	 : Replace	 : Warning/Caution	 : Inspection/Adjustment	 : Learning	 : SPL Tool	 : Required Removal
---	--	--	---	---	--	---

*1: Part(s) are shown for one side only as the procedure is the same for both sides.
 *2: Display audio type (9-inch screen)

A. -




B. -

■ Sub-Procedure

● Removal


- Refer to the figure.

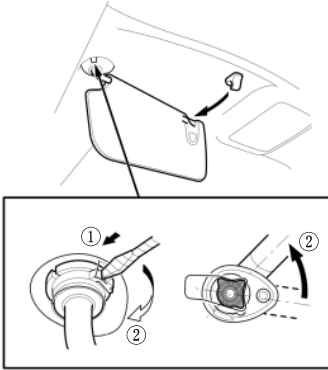

● Installation

- After inspecting the sunvisor, then install the sunvisor.

C. -

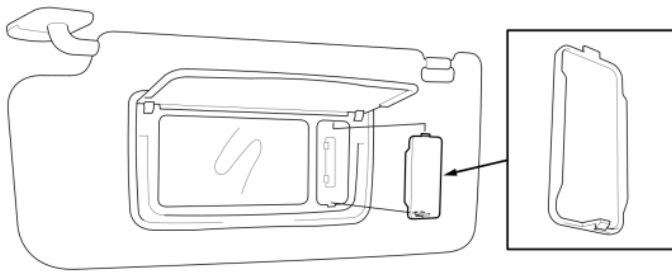

D. -

■ Sub-Procedure

Figure 1


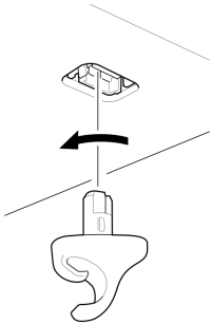


Figure 2

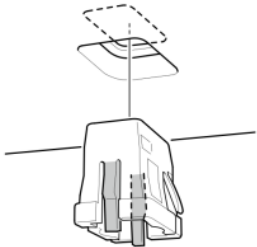

● Removal

- Refer to figure 1 and 2.

● Installation

- After inspecting the sunvisor holder, install the sunvisor holder.


E. -

■ Sub-Procedure

● Removal

- Refer to the figure.


Tool Details	
Name	
a	Pliers (Commercially Available)

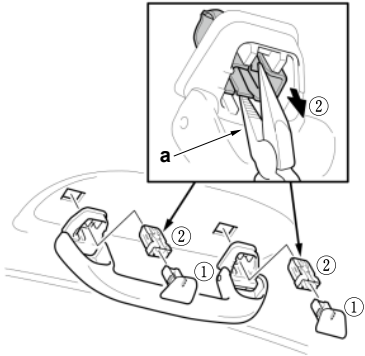


● Installation

- After inspecting the grab handle, install the grab handle.

F. -

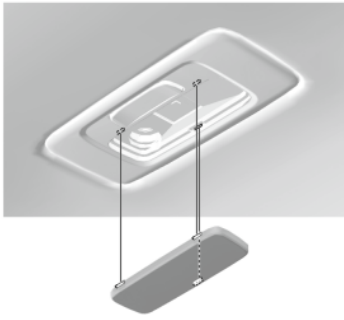

G. -

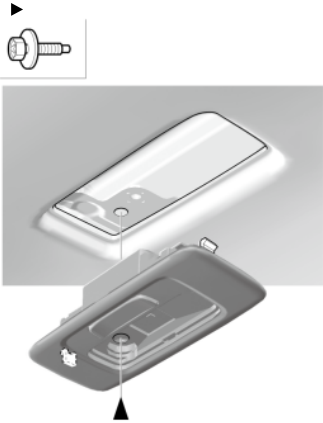

H. -

NOTE: Do not bend the headliner. Bending the headliner will crease and damage it.

■ Preconditions

- 12 Volt Battery Negative Terminal Disconnected
- Both Front Seat-Backs Full Reclined

■ Key Information

Do the following before starting your work.

Remove:

- Both Dashboard Side Lids
- Interior Trim Area Parts
 - Both Front Door Opening Seals (as needed)
 - Both Rear Door Opening Seals (as needed)
 - Both A-Pillar Trims
 - Both B-Pillar Upper Trims
 - Both C-Pillar Trims
 - Tailgate Weatherstrip (as needed)
- Center Console Area Parts
 - CVT: Shift Lever Bracket Base (as needed)
 - M/T: Shift Lever Housing Bracket (as needed)
- Camera Cover


■ Sub-Procedure

● Removal

1. Refer to figure 1.


NOTE: The positions and number of connectors vary depending on models.

Figure 1

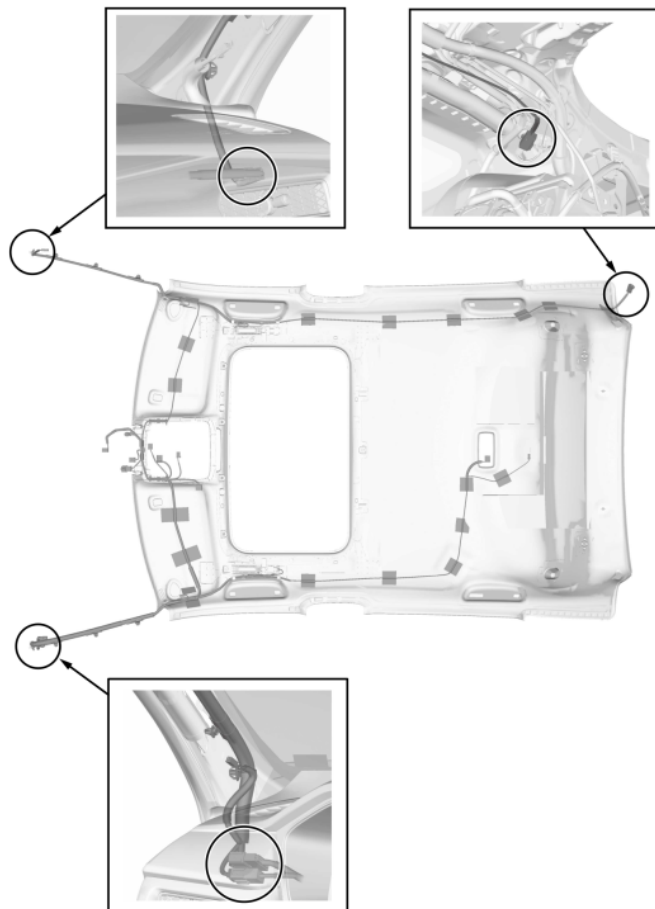


2. Refer to figure 2.

Figure 2

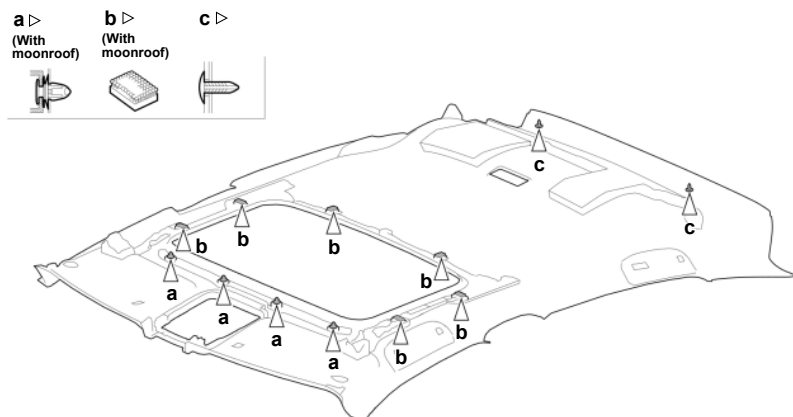

3. Refer to figure 3.

Figure 3

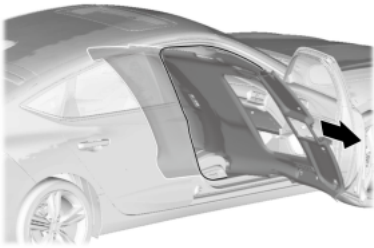

● Installation

- Refer to figure 4, 5 and 6.

NOTICE

When using a new headliner, check the headliner and the pillar trim overlap.

NOTE:

- After inspecting the headliner, then install the headliner.
- The positions and number of tapes change with models.
- Replace the tapes with new ones.

Figure 4 (Color audio type (7-inch Screen))

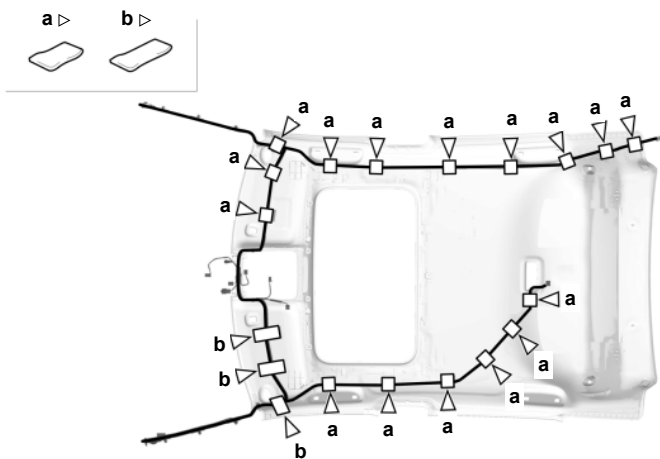


Figure 5 (Display audio type (9-inch Screen))


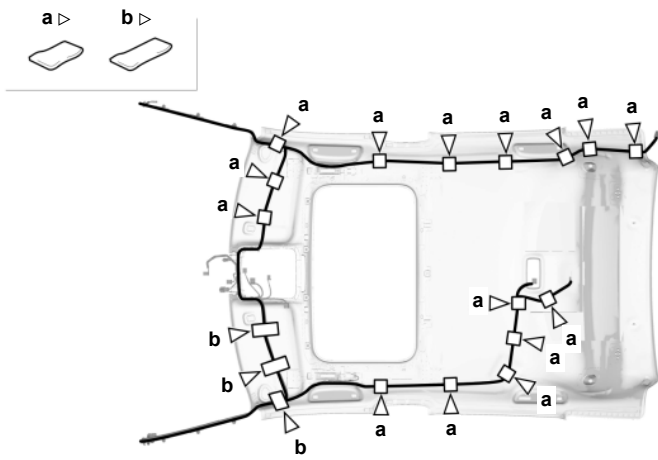


Figure 6 (Without moonroof)

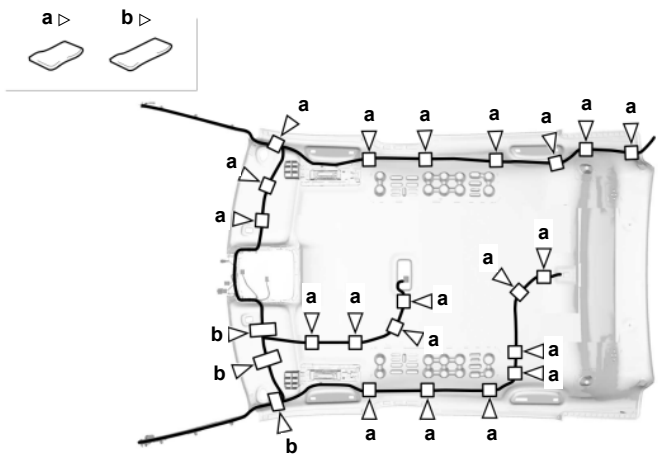

■ After Installation

- 12 Volt Battery Negative Terminal Reconnect

I. -

⚠ CAUTION

- Review the precautions and procedures before doing repairs or service.
- Wait at least 3 minutes, after disconnecting the 12 volt battery terminal.

NOTICE

If you are replacing the side curtain airbag after a deployment, refer to Component Replacement/Inspection After Deployment for a complete list of other parts that must also be replaced.


■ Preconditions

- 12 Volt Battery Negative Terminal Disconnected

■ Sub-Procedure

● Removal

- Refer to the figure.

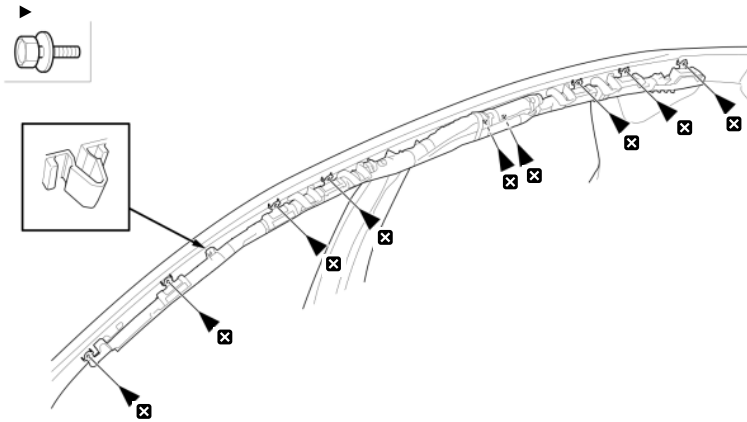

● Installation

NOTICE

- If the side curtain airbag is frayed, or has any other visible damage, replace it. Do not attempt to repair an airbag.
- When you install the side curtain airbag, make sure it is not twisted, and that it is not caught between the inflator bracket by the bracket bolts.
- Make sure that the side curtain airbag inflator retainer is installed properly. Otherwise the side curtain airbag could incorrectly deploy and cause damage or injuries.
- Assemble the wire harness of the side curtain airbag in order not to be caught.
- Apply light force to the inflator and the adapter pipe to make sure there is no excessive play or looseness.
- Before installing the headliner, make sure the SRS indicator works normally.

■ After Installation

1. 12 Volt Battery Negative Terminal Reconnect
2. Turn the vehicle to the ON mode, and check that the SRS indicator comes on for about 6 seconds and then goes off.


J. -

■ Sub-Procedure

● Removal

- Refer to the figure.

NOTE: When removing the capture washer, replacing with a new one is recommended.

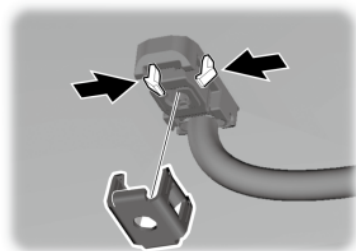


■ After Installation


NOTE: In case of reusing the capture washer, perform the shower test to confirm that there is no water leakage.

- Water Leaks Check

K. -

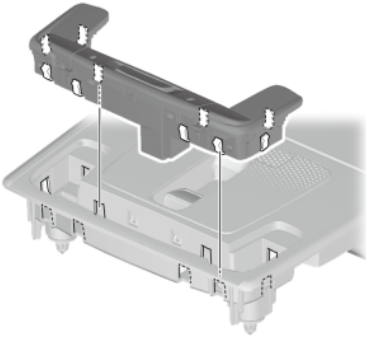

L. -

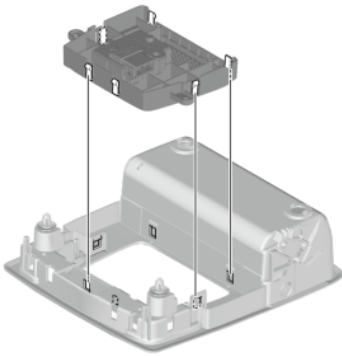


M. -

■ Sub-Procedure

● Removal

- Refer to the figure.

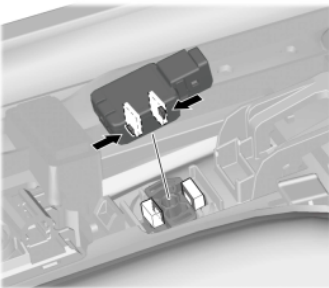


N. -

■ Sub-Procedure

● Removal

- Refer to the figure.

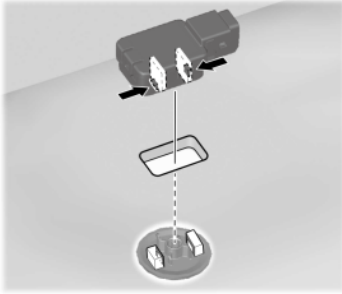


0. -


■ Sub-Procedure

● Removal

- Refer to the figure.

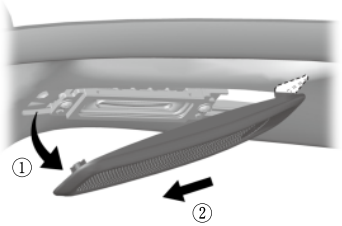


1

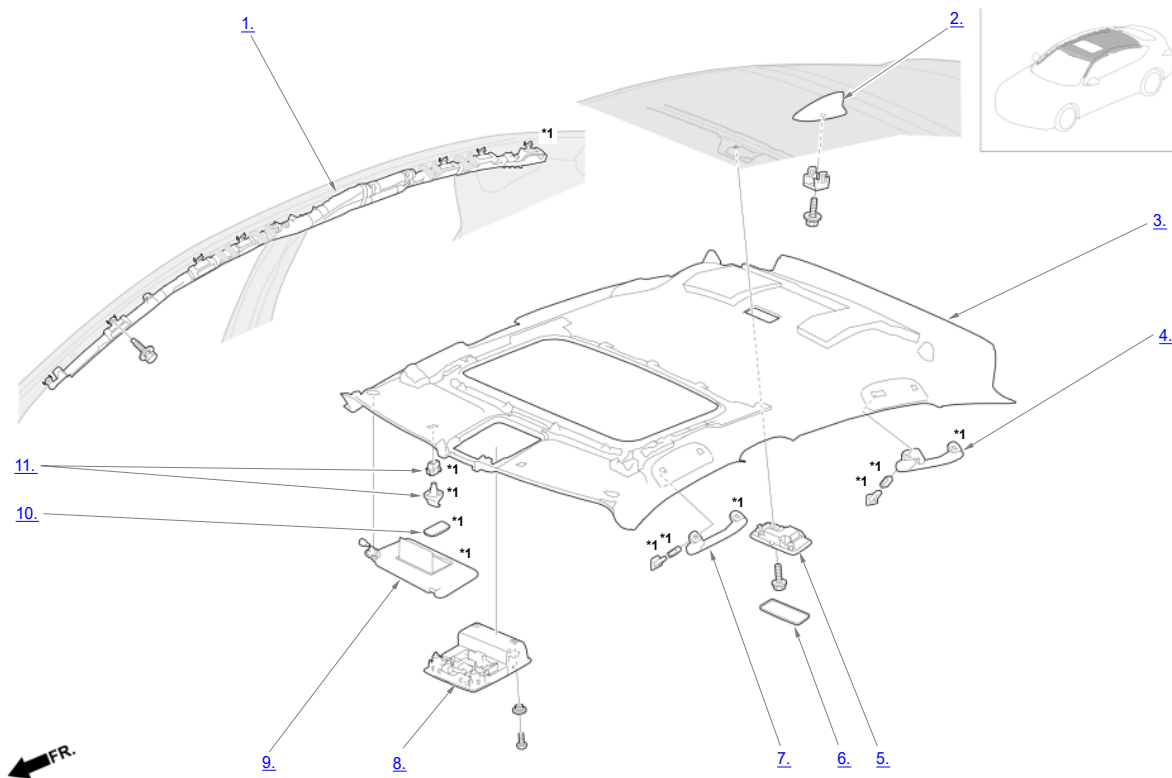

*1: Part(s) are shown for one side only as the procedure is the same for both sides.

2

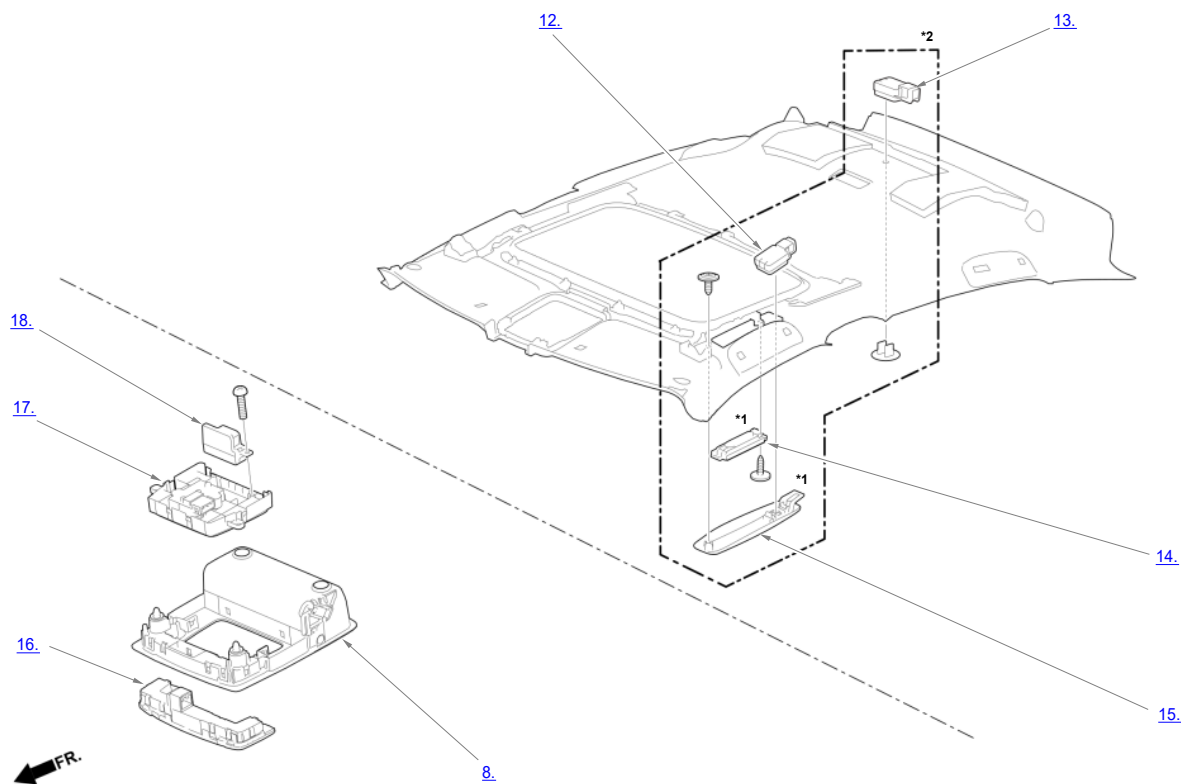

*1: Part(s) are shown for one side only as the procedure is the same for both sides.

*2: Display audio type (9-inch screen)

- 1. Side Curtain Airbag
- 2. Roof Antenna
- 3. Headliner
- 4. Rear Grab Handle
- 5. Ceiling Light
- 6. Ceiling Light Lens
- 7. Front Grab Handle
- 8. **Roof Console**
- 9. Sunvisor
- 10.Vanity Mirror Light Lens
- 11.Sunvisor Holder
- 12.Middle ANC/Active Sound Control Microphone
- 13.Rear ANC/Active Sound Control Microphone
- 14.Roof Speaker
- 15.Roof Speaker **Grille**
- 16.Front Individual Map Light
- 17.Roof Module
- 18.Front HFL-ANC/Active Sound Control Microphone or HFL Microphone