


INTERIOR TRIM AREA





Interior Trim Area

How to use this manual.
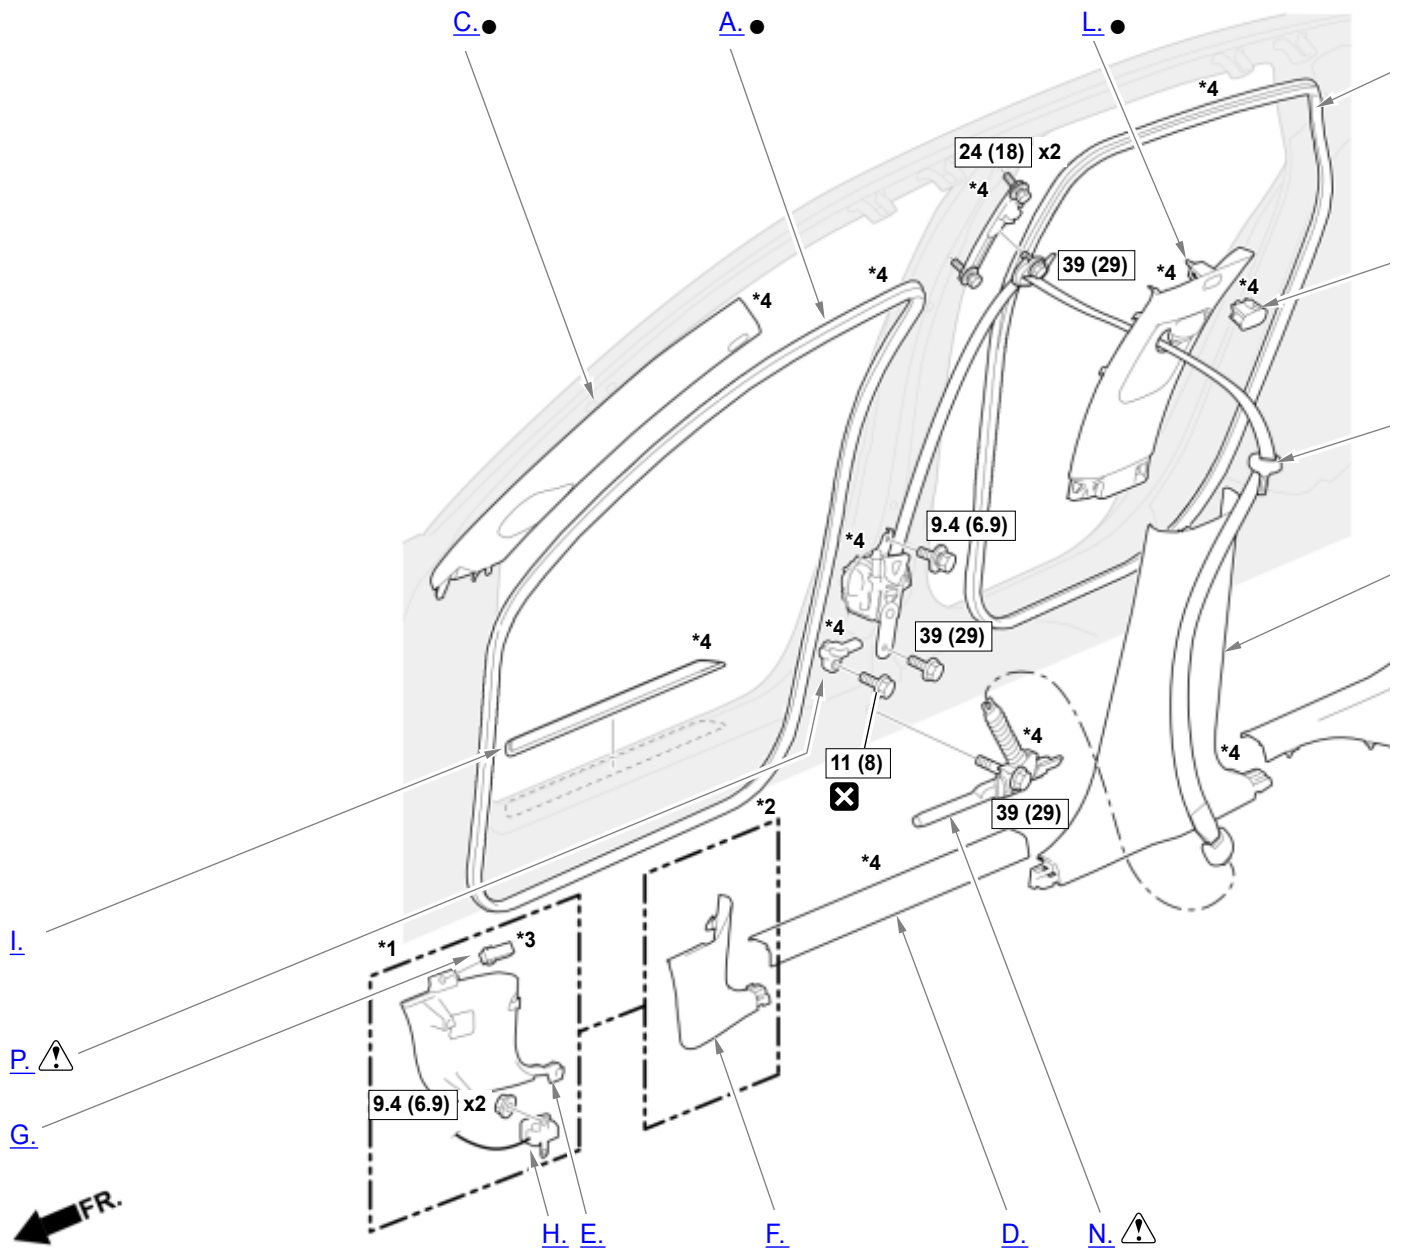
<b>⚠CAUTION</b>			
	<ul style="list-style-type: none"><li>SRS components are located in this area. Before doing repairs or service:</li></ul>		
	<ul style="list-style-type: none"><li>– Review the SRS component locations.</li></ul>		
	<ul style="list-style-type: none"><li>– Review the precautions and procedures.</li></ul>		

1




 :	 :	 :	 :	 :	 :	 :
Torque, N·m (lbf·ft)	Replace	Warning/Caution	Inspection/Adjustment	Learning	SPL Tool	Required Removal





\*1: Driver's side  
\*2: Passenger's side

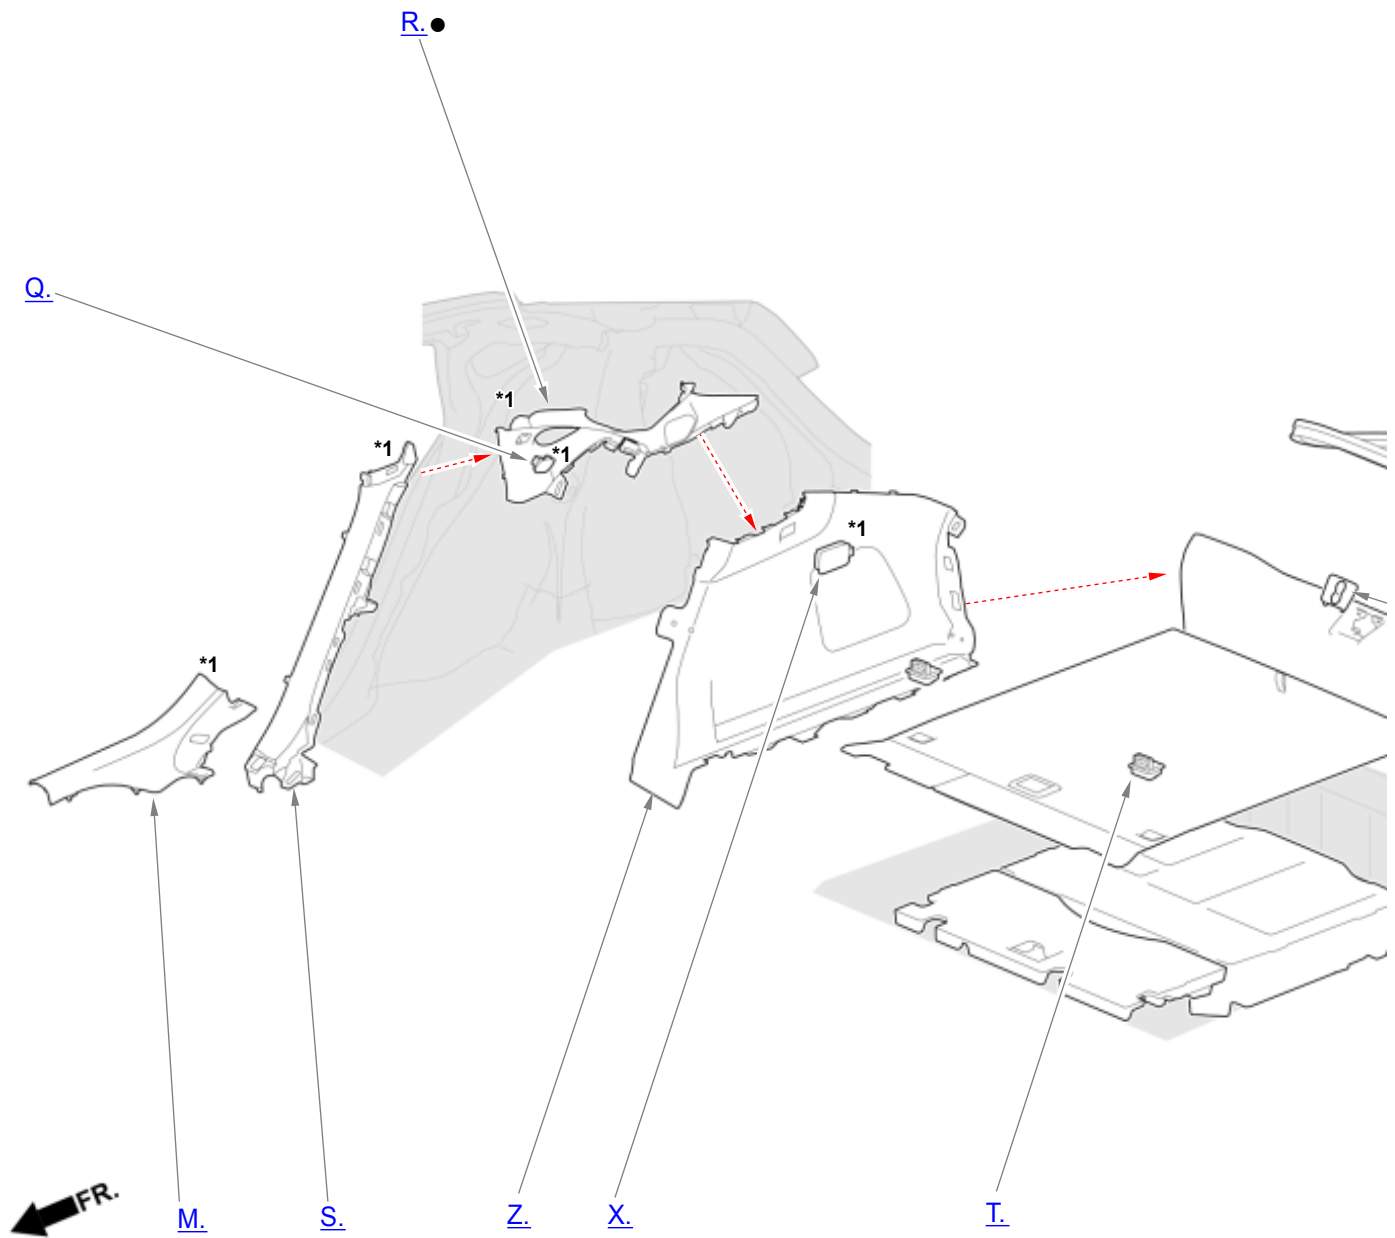\*3: With driver's footwell light  
\*4: Part(s) are shown for one side only as the procedure is the same for both sides.

2




--	--	--	--	--	--	--

 :	 :	 :	 :	 :	 :	 :
Torque, N·m (lbf·ft)	Replace	Warning/ Caution	Inspection/ Adjustment	Learning	SPL Tool	Required Removal

\*1: Part(s) are shown for one side only as the procedure is the same for both sides.

### 3

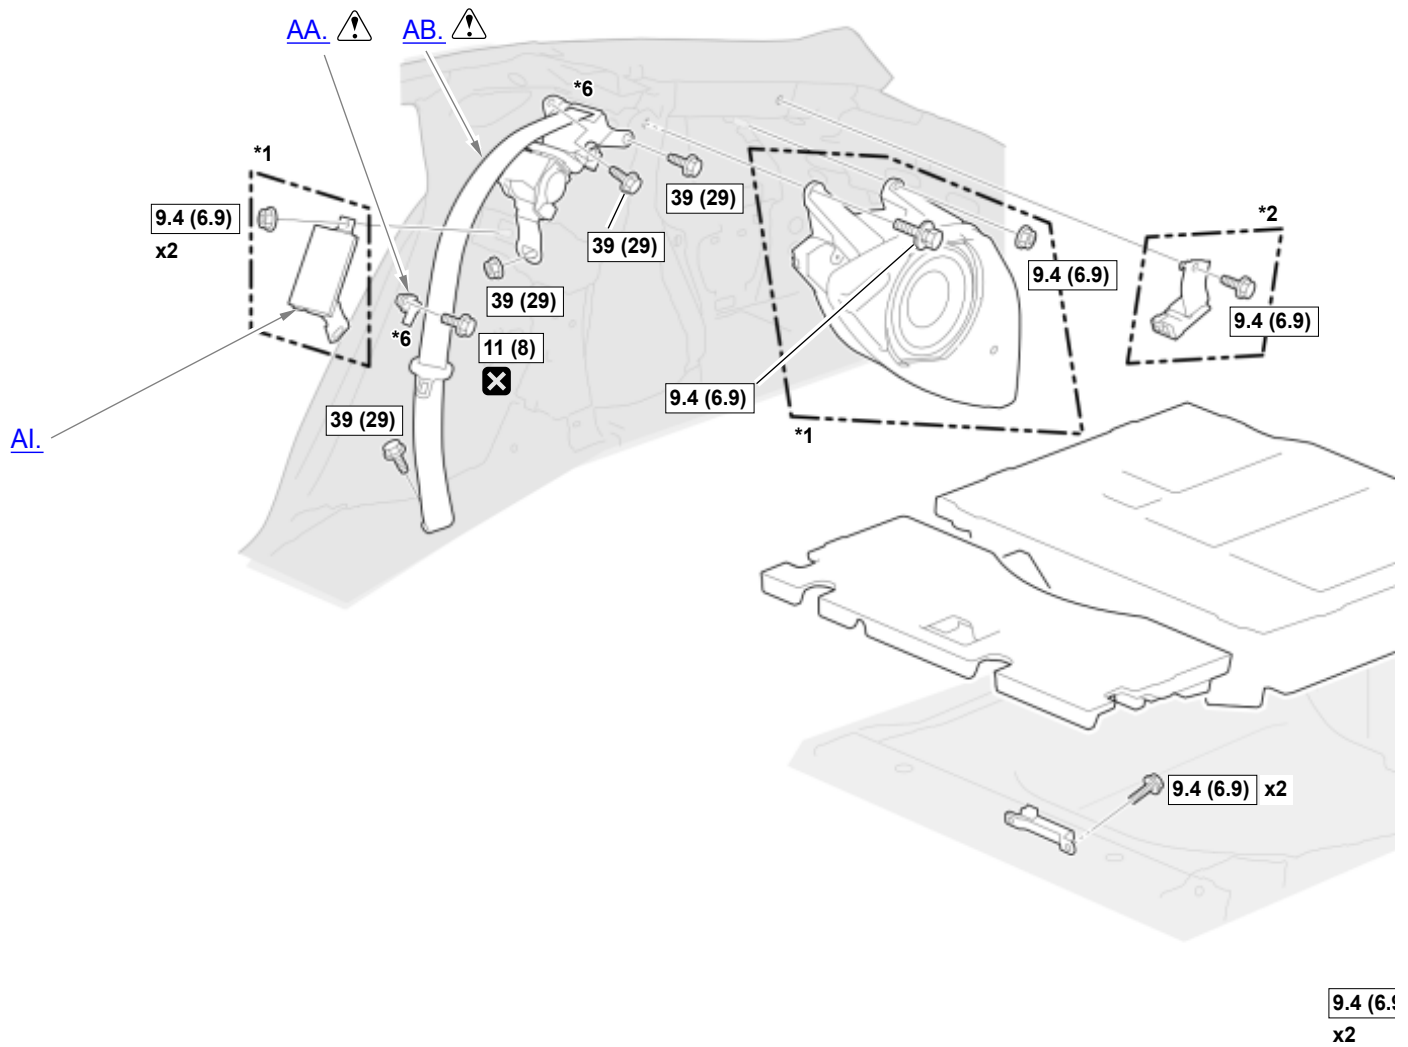

Torque, N·m (lbf·ft)	Replace	Warning/Caution	Inspection/Adjustment	Learning	SPL Tool	Required Removal

\*1: Display audio type (9-inch screen)  
 \*2: With 2-way transceiver

\*3: With rear seat heater control unit


\*4: With parking and back-up sensor control unit






\*5: With adaptive damper system

\*6: Part(s) are shown for one side only as the procedure is the same for both sides.

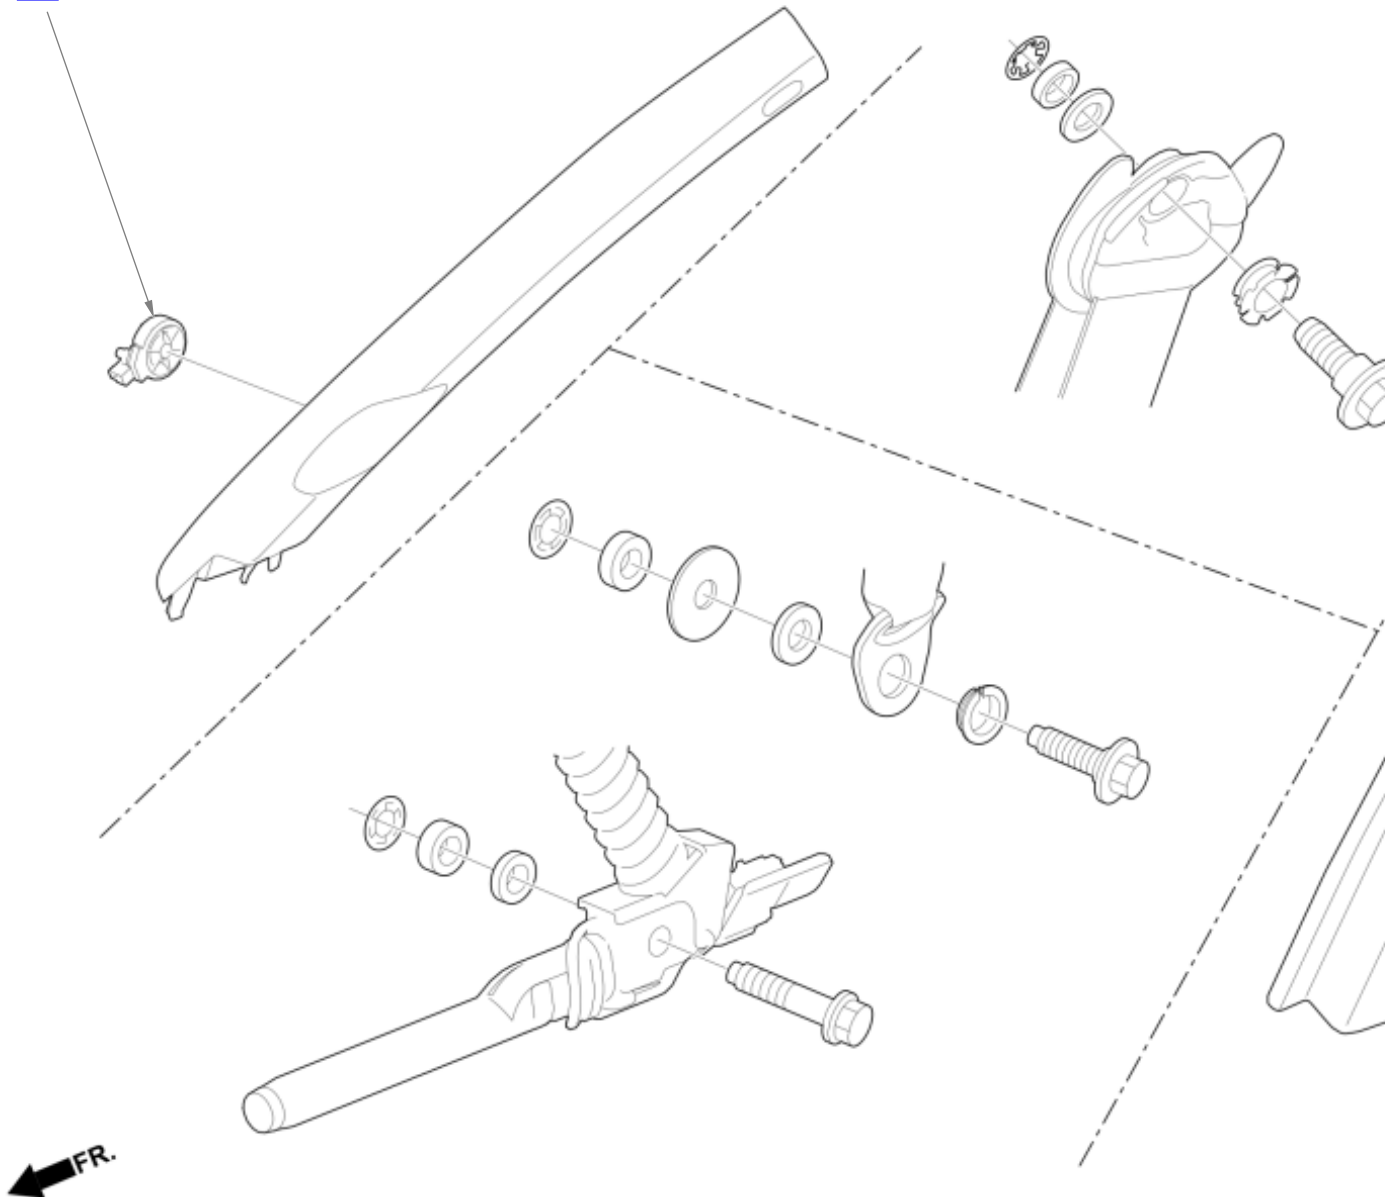
## 4

[AF.](#)



 :	 :	 :	 :	 :	 :	 :
Torque, N·m (lbf·ft)	Replace	Warning/Caution	Inspection/Adjustment	Learning	SPL Tool	Required Removal

5

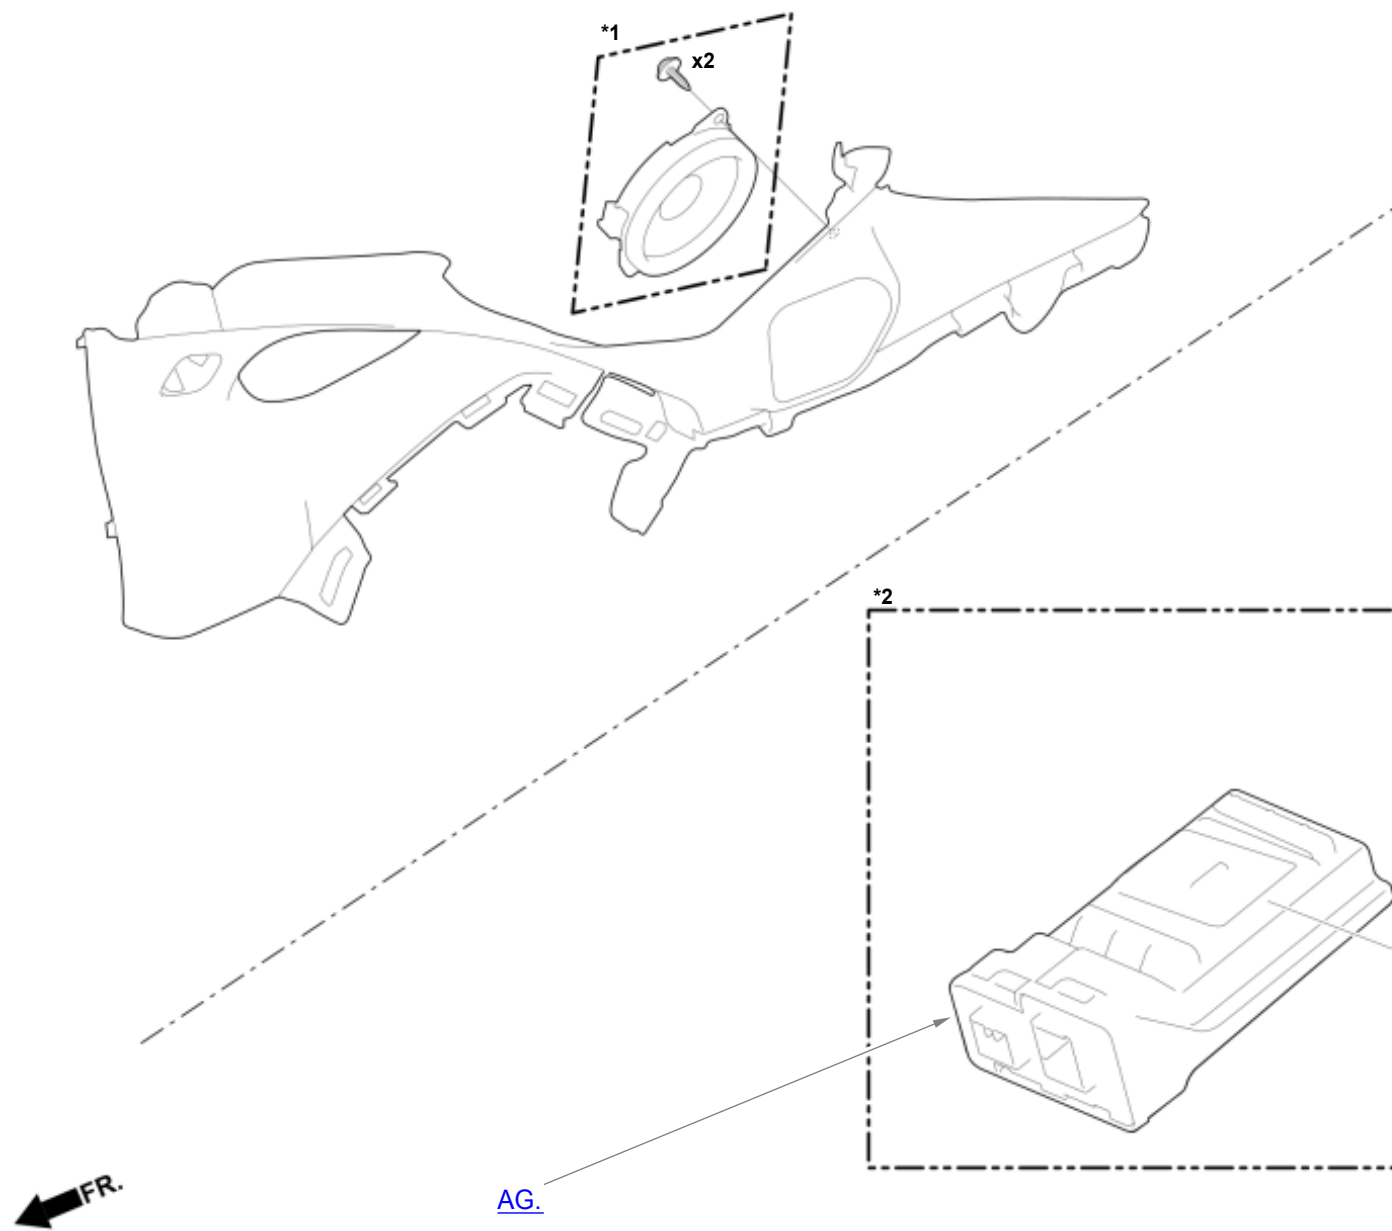


<div> <div></div> <div>:</div> </div> <div>Torque, N·m (lbf·ft)</div>	<div> <div>×</div> <div>:</div> </div> <div>Replace</div>	<div> <div>⚠</div> <div>:</div> </div> <div>Warning/Caution</div>	<div> <div>●</div> <div>:</div> </div> <div>Inspection/Adjustment</div>	<div> <div>★</div> <div>:</div> </div> <div>Learning</div>	<div> <div>■</div> <div>:</div> </div> <div>SPL Tool</div>	<div> <div>←</div> <div>:</div> </div> <div>Required Removal</div>
---	---	---	---	--	--	--








\*1: Display audio type (9-inch screen)

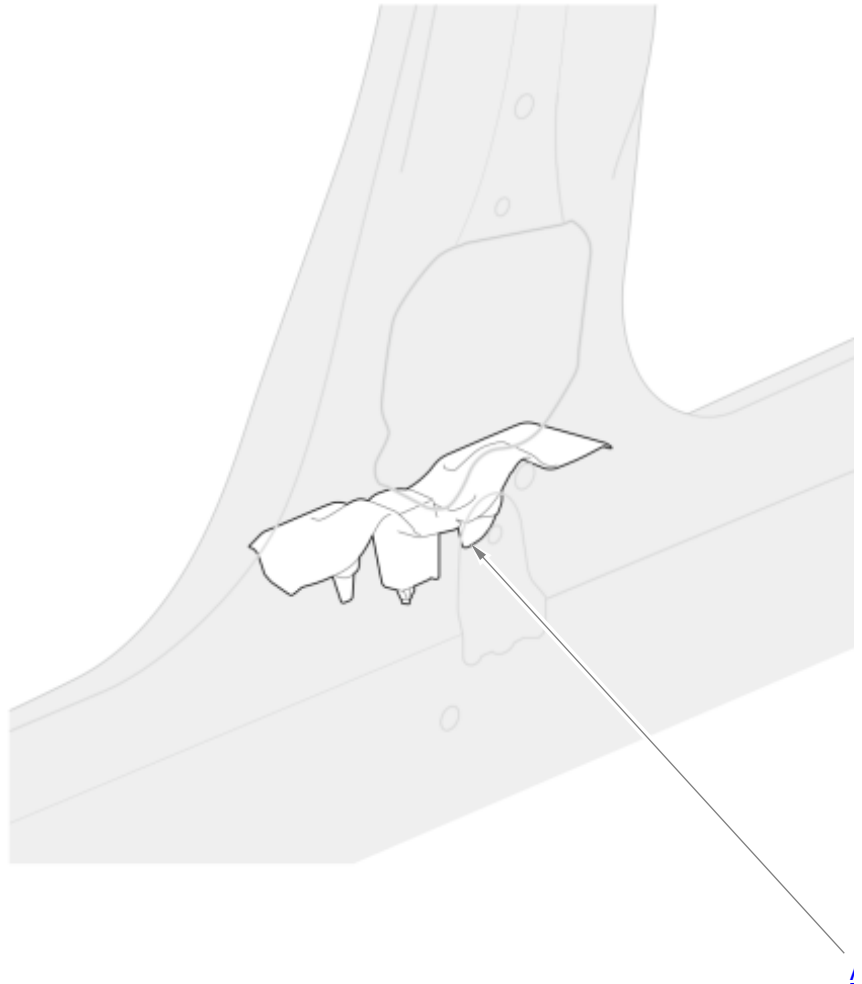\*2: With 2-way transceiver

6





 :	 :	 :	 :	 :	 :	 :
Torque, N·m (lbf·ft)	Replace	Warning/Caution	Inspection/Adjustment	Learning	SPL Tool	Required Removal


\*1: Display audio type (9-inch screen)  
\*2: With 2-way transceiver

A.

## ■ Sub-Procedure

### ● Installation

- Refer to the figure.

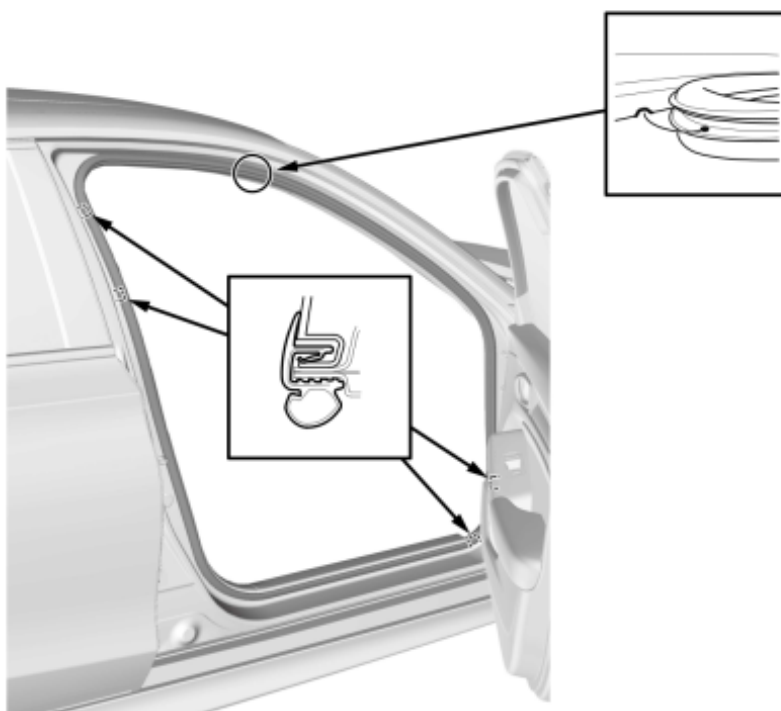

## ■ After Installation


- Water Leaks Check

B.

## ■ Sub-Procedure

## ● Installation

- Refer to the figure.

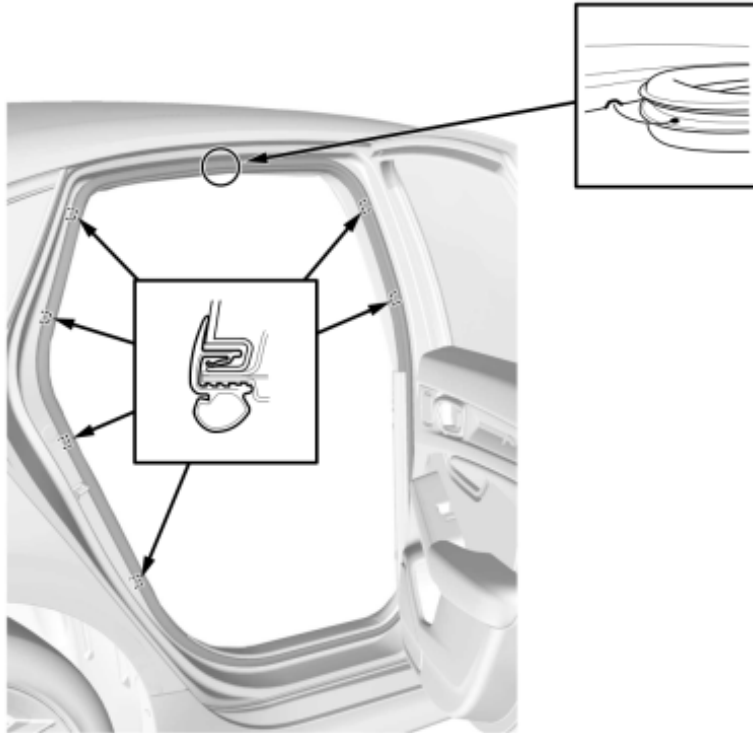

## ■ After Installation

- Water Leaks Check

C.

## ■ Sub-Procedure


## ● Removal

- Refer to figure 1, 2, and 3.


NOTE:

- Replace the upper clip (a) with a new one.
- The clips will stay in the body.


**Figure 1**

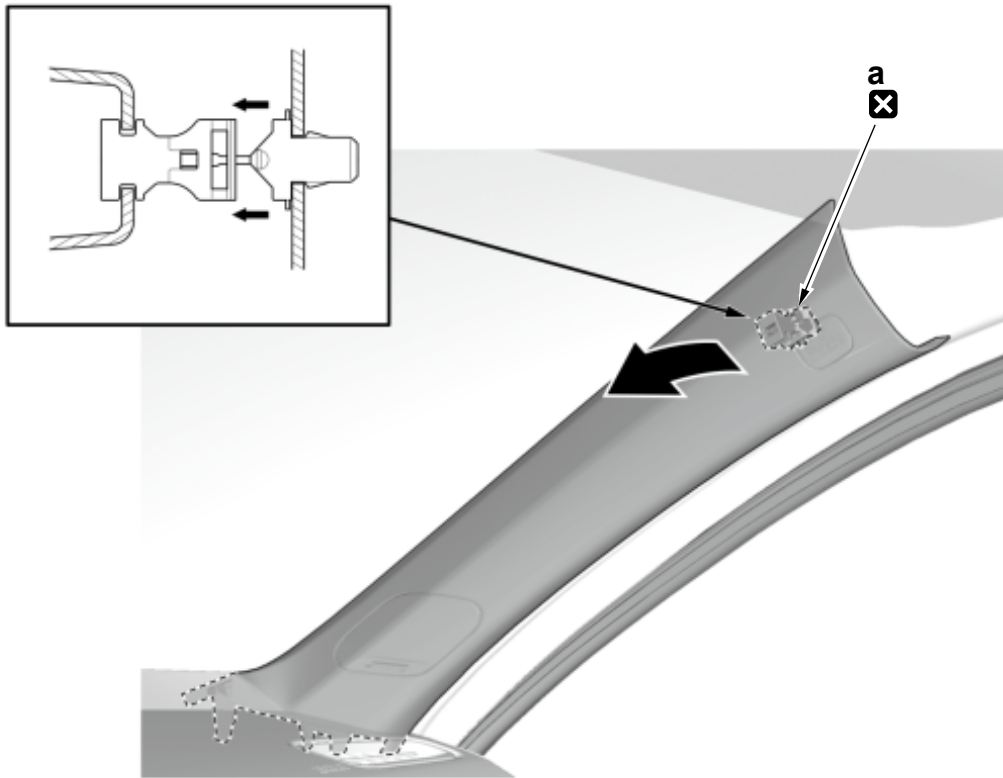

**Figure 2**

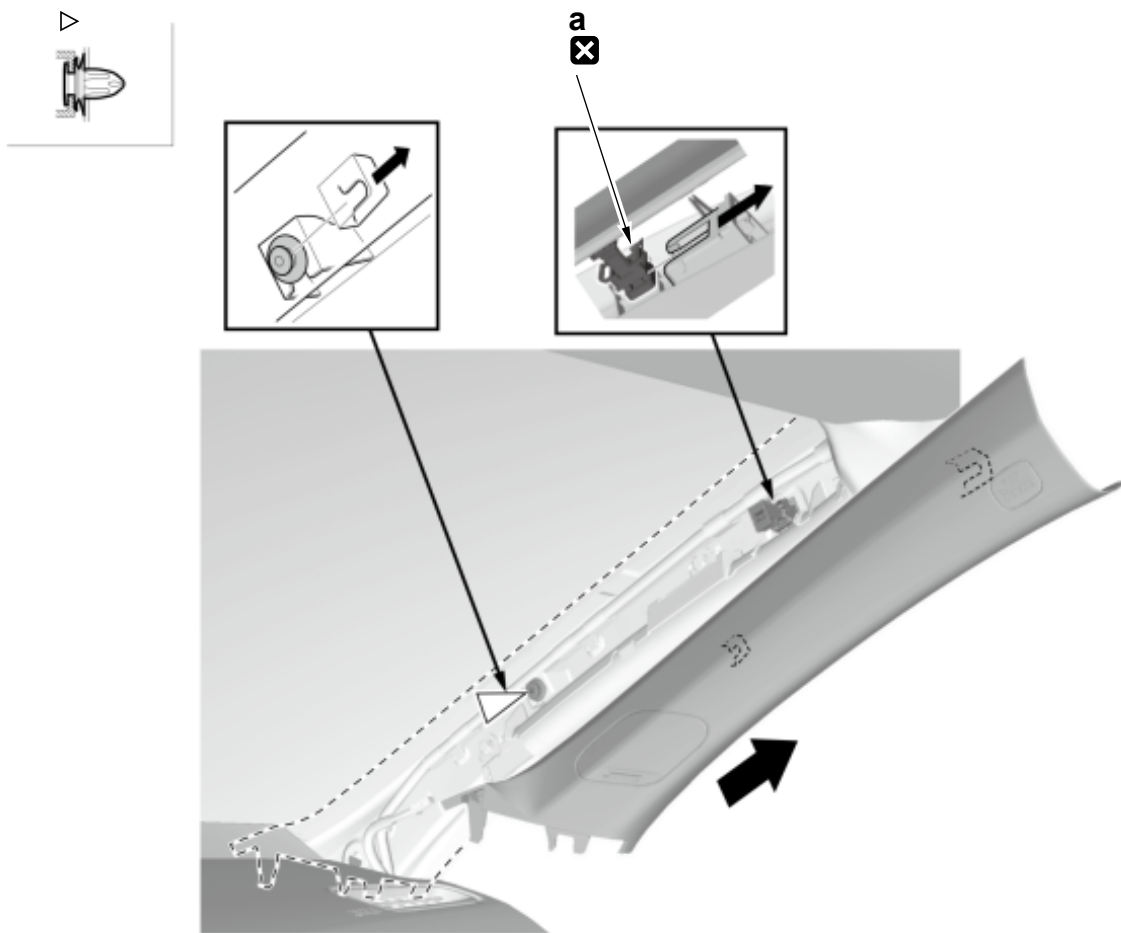


**Figure 3**

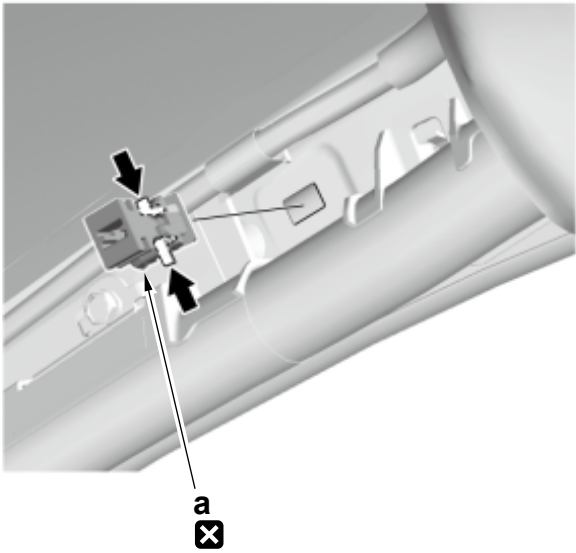


## ● Installation

- |  |  |  |
|--|--|--|
|  | • Before installing the A-pillar trim, install the clips to the A-pillar trim. |  |
|  | • After inspecting the A-pillar trim, install the A-pillar trim.               |  |

D. -

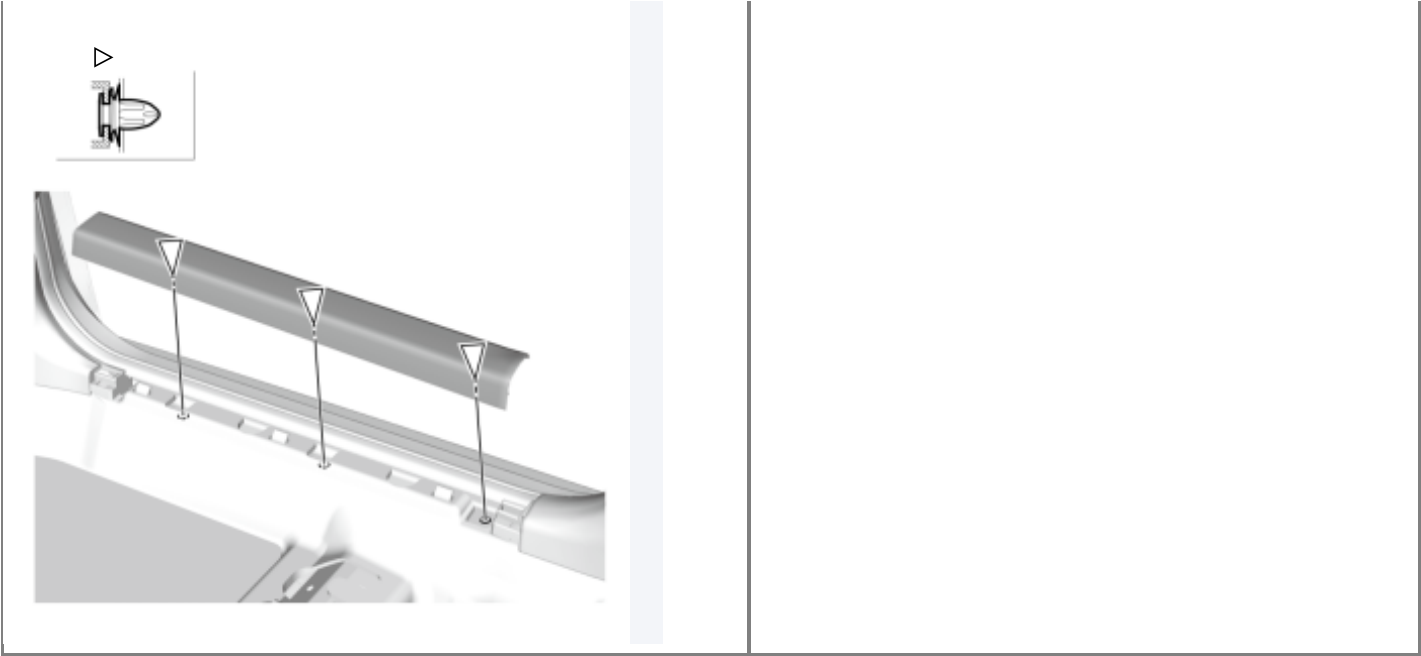


E.

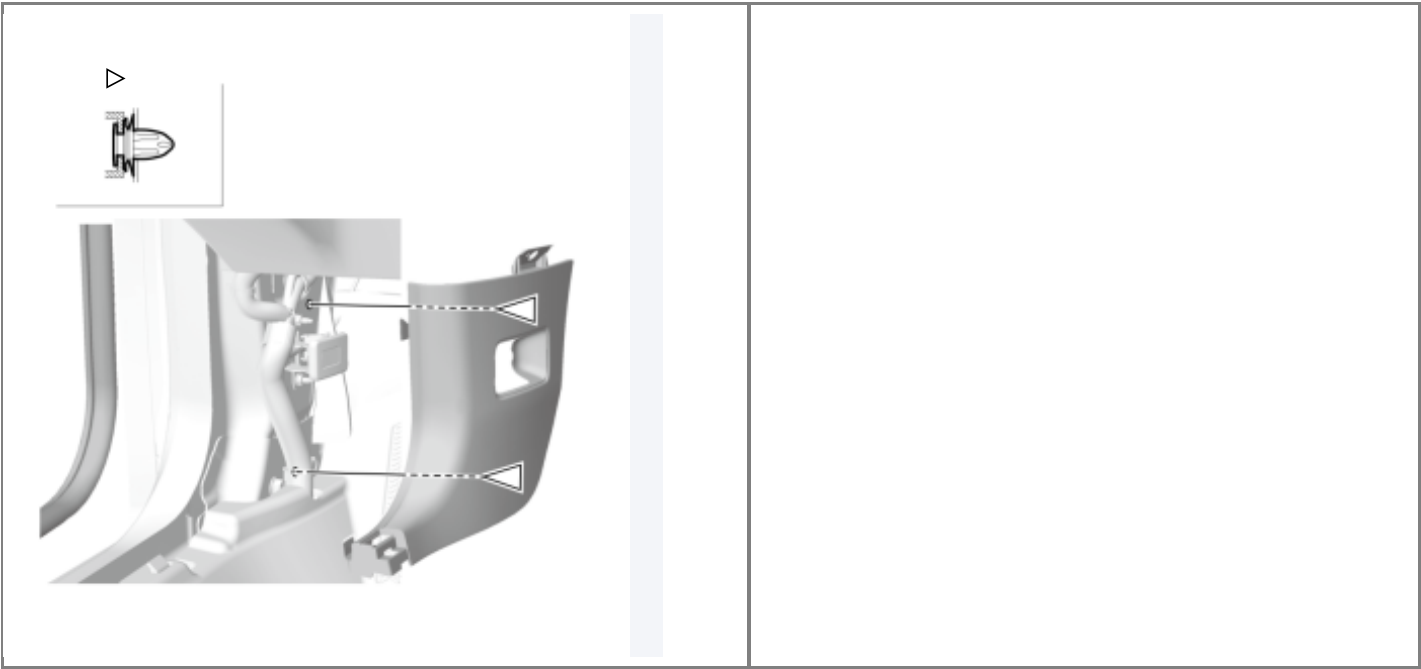


F.



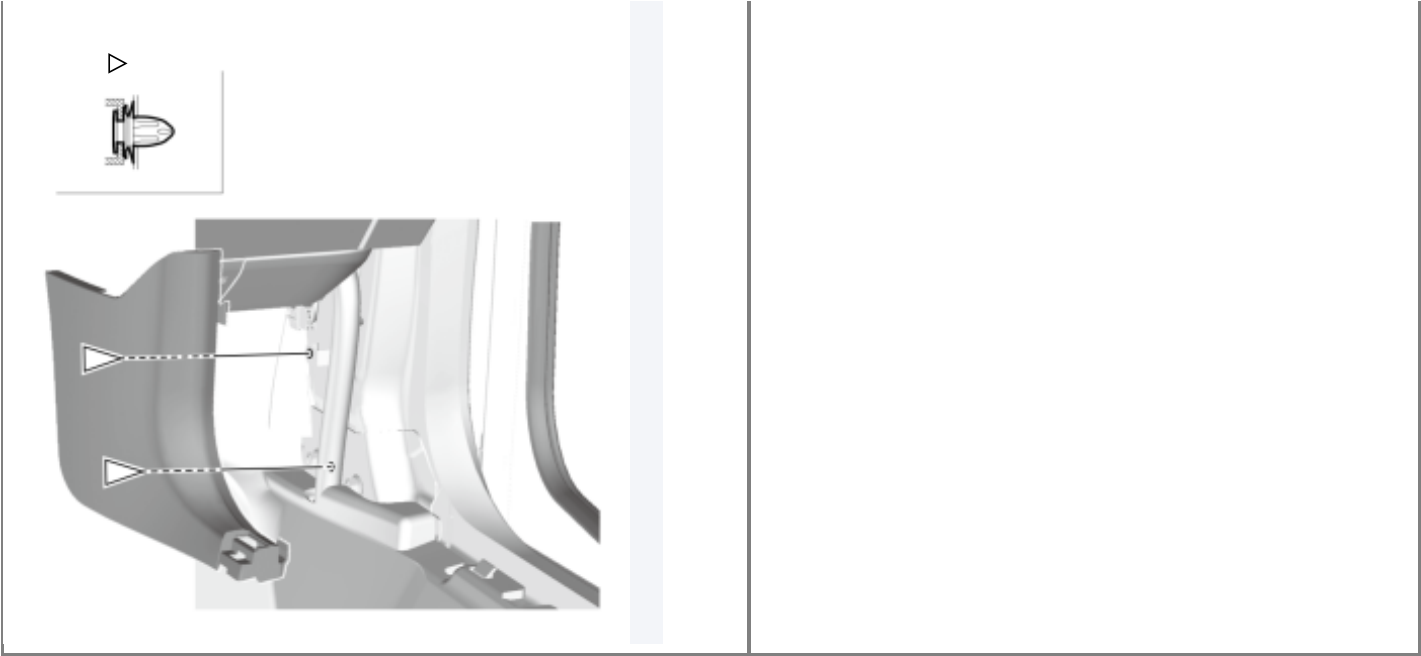

<b>G.</b>
-----------

	<b>■ Sub-Procedure</b>
--	------------------------

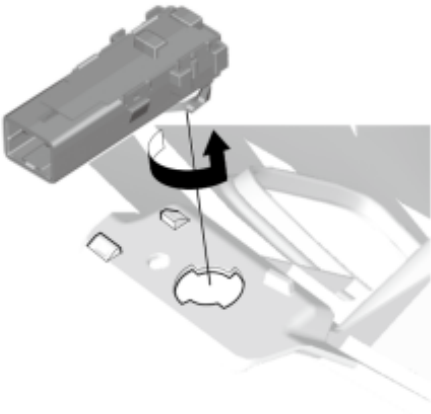
	<b>● Removal</b>
	<ul style="list-style-type: none"><li>• Refer to the figure.</li></ul>

<b>H.</b>
-----------

	<b>■ Sub-Procedure</b>
--	------------------------

--	--	--




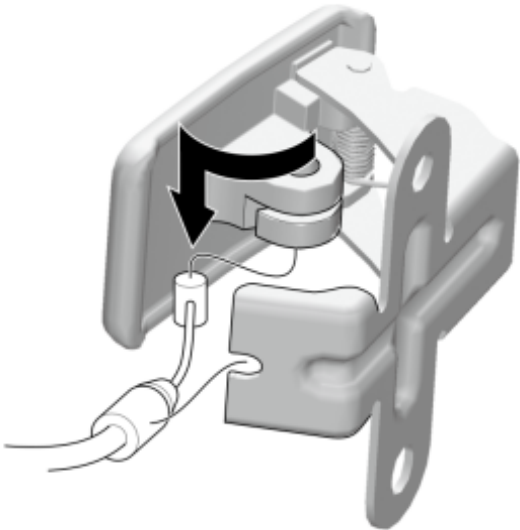

● Removal


• Refer to the figure.

I.

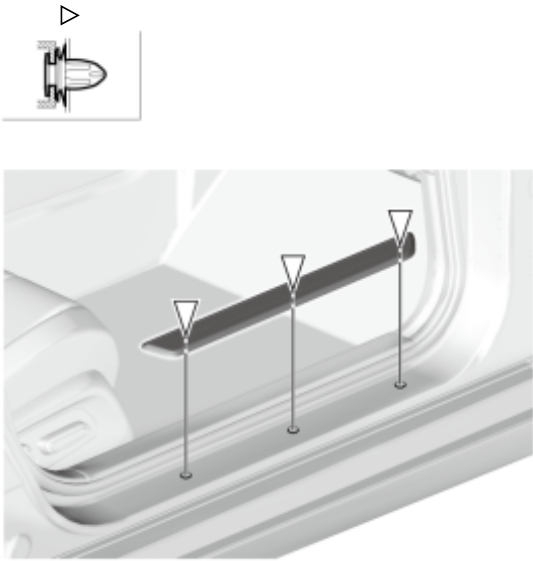

J.

■ Sub-Procedure

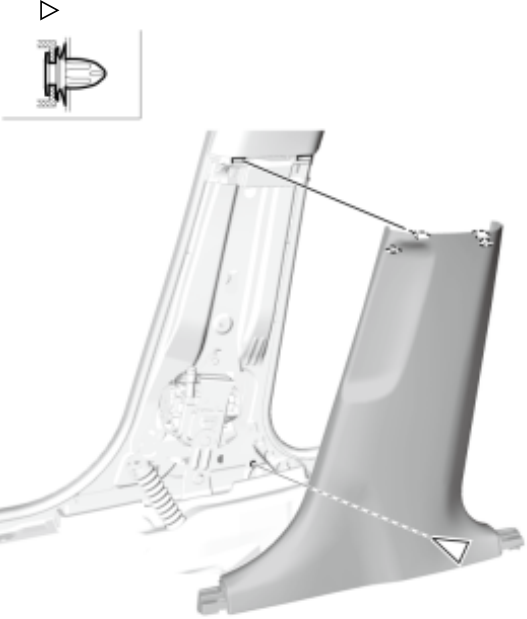
	<b>● Removal</b>	
		<ul style="list-style-type: none"> <li>Refer to the figure.</li> </ul>

	<b>● Installation</b>	
		<ul style="list-style-type: none"> <li>After inspecting the B-pillar lower trim then, install the B-pillar lower trim.</li> </ul>

<b>K.</b>
-----------

	<b>■ Sub-Procedure</b>	
--	------------------------	--




	<b>● Removal</b>	
		<ul style="list-style-type: none"> <li>Refer to the figure.</li> </ul>

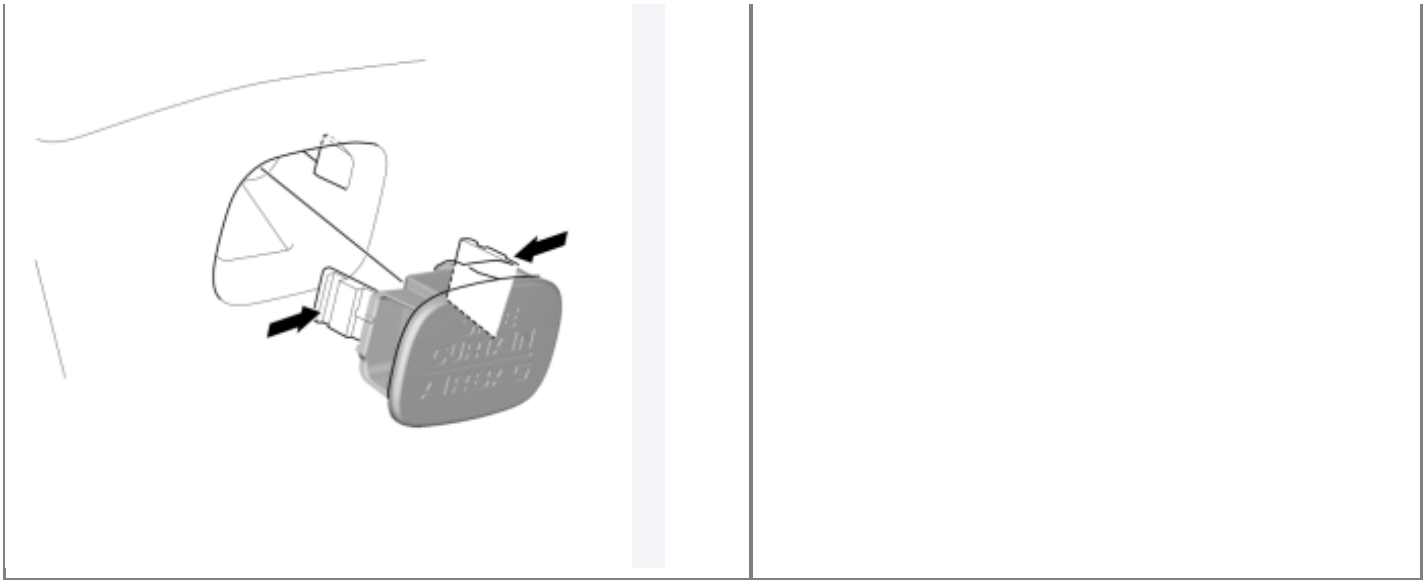

## ■ Sub-Procedure

### ● Removal

- Refer to the figure.

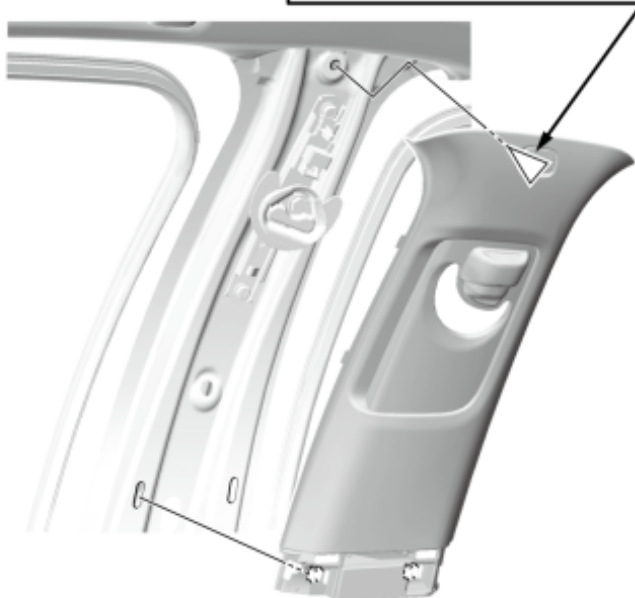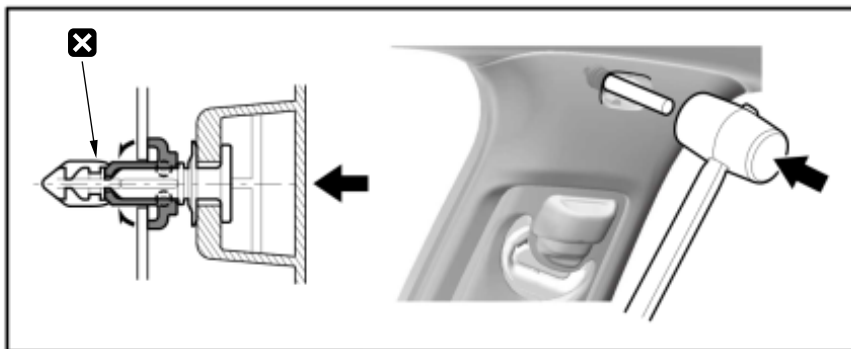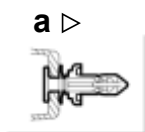

## ● Installation

1. Replace the upper clip (a) with a new one.
2. After inspecting the B-pillar upper trim then, install the B-pillar upper trim.

M.

## ■ Key Information

Do the following before starting your work.	
<b>Remove:</b>	
	• Rear Seat Cushion (as needed)
<div> <div></div> <div>Sub-Procedure</div> </div>	

<div> <div> <div>a ▷ (Yellow)</div> <div>b ▷ (Green)</div> </div> </div>	<div> <div>• Removal</div> </div>
	<div> <div>• Refer to the figure.</div> </div>

<div> <div>N.</div> </div>
----------------------------

	<div> <div>⚠CAUTION</div> </div>
	<div> <div> <div>• Review the precautions and procedures before doing repairs or service.</div> <div>• Wait at least 3 minutes, after disconnecting the 12 volt battery terminal.</div> </div> </div>

**NOTICE**

If you are replacing the front seat belt outer lap tensioner after a deployment, refer to Component Replacement/Inspection After Deployment for a complete list of other parts that must also be replaced.

**■ Preconditions**


- 12 Volt Battery Negative Terminal Disconnected

**■ Sub-Procedure**


**● Removal**

- Refer to figure 1 and 2.

**Figure 1**

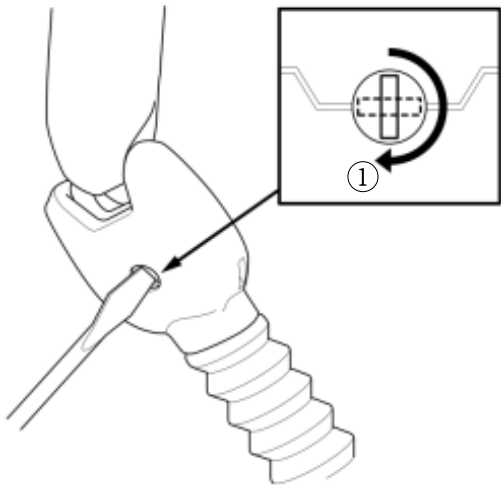

**Figure 2**

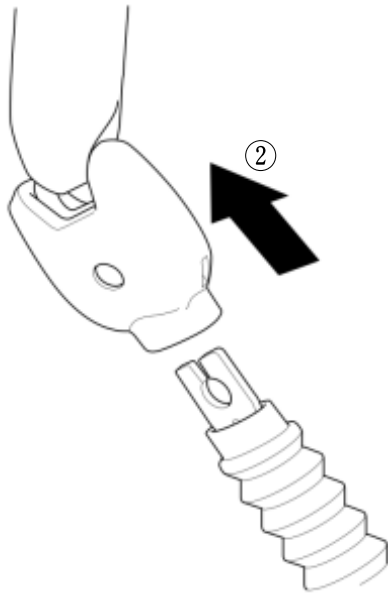

## ● Installation

### NOTICE

Before installing the B-pillar lower trim, make sure the SRS indicator works normally.

## ■ After Installation

- |    |   |
|----|---|
| 1. | 12 Volt Battery Negative Terminal Reconnect   |
| 2. | Turn the vehicle to the ON mode, and check that the SRS indicator comes on for about 6 seconds and then goes off. |

0.

**⚠ CAUTION**

•	SRS components are located in this area. Before doing repairs or service:	
–	Review the SRS component locations.	
–	Review the precautions and procedures.	

NOTE: If you are replacing the front seat belt after a deployment, refer to Component Replacement/Inspection After Deployment for a complete list of other parts that must also be replaced.

## ■ Preconditions

- 12 Volt Battery Negative Terminal Disconnected

## ■ Sub-Procedure

### ● Installation

#### NOTICE

Before installing the B-pillar lower trim, make sure the SRS indicator works normally.

## ■ After Installation

1. 12 Volt Battery Negative Terminal Reconnect
2. Turn the vehicle to the ON mode, and check that the SRS indicator comes on for about 6 seconds and then goes off.

P.

## ⚠ CAUTION

- Review the precautions and procedures before doing repairs or service.
- Wait at least 3 minutes, after disconnecting the 12 volt battery terminal.



## NOTICE

- If you are replacing the side impact sensor (first) after a deployment, refer to Component Replacement/Inspection After Deployment for a complete list of other parts that must also be replaced.
- Be careful not to bump (by impact wrench, hammer, etc.) the area around the side impact sensor.

## ■ Preconditions

- 12 Volt Battery Negative Terminal Disconnected

## ■ Sub-Procedure

### ● Installation

## NOTICE

Before installing the B-pillar lower trim, make sure the SRS indicator works normally.

## ■ After Installation


1. 12 Volt Battery Negative Terminal Reconnect
2. Turn the vehicle to the ON mode, and check that the SRS indicator comes on for about 6 seconds and then goes off.

Q.

## ■ Sub-Procedure

### ● Removal

- Refer to the figure.



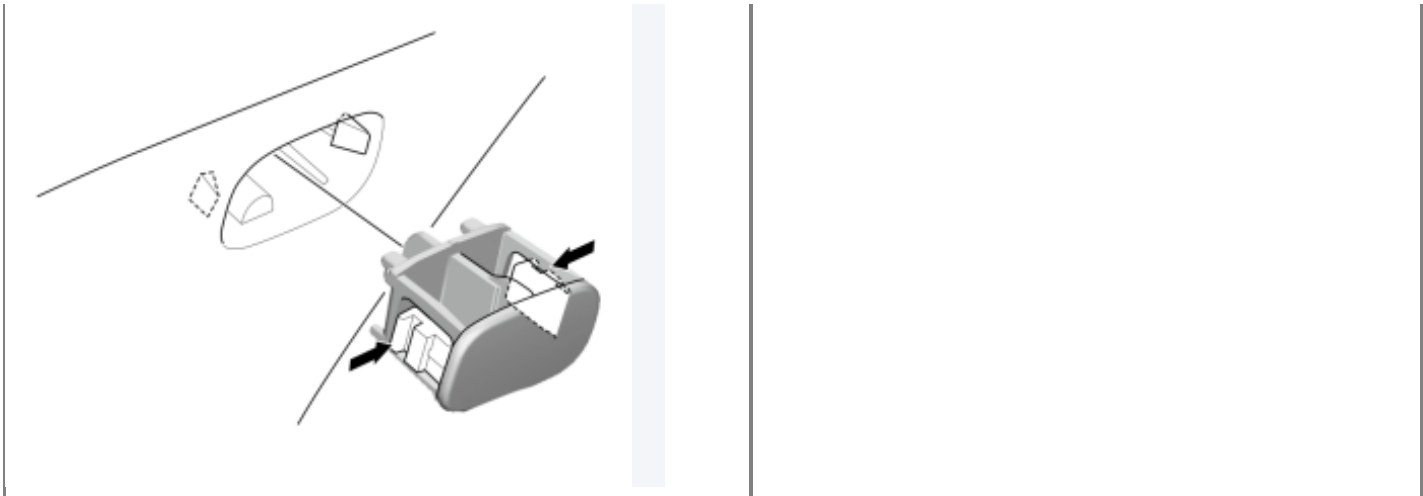


R.

## ■ Sub-Procedure

### ● Removal

- Refer to the figure.

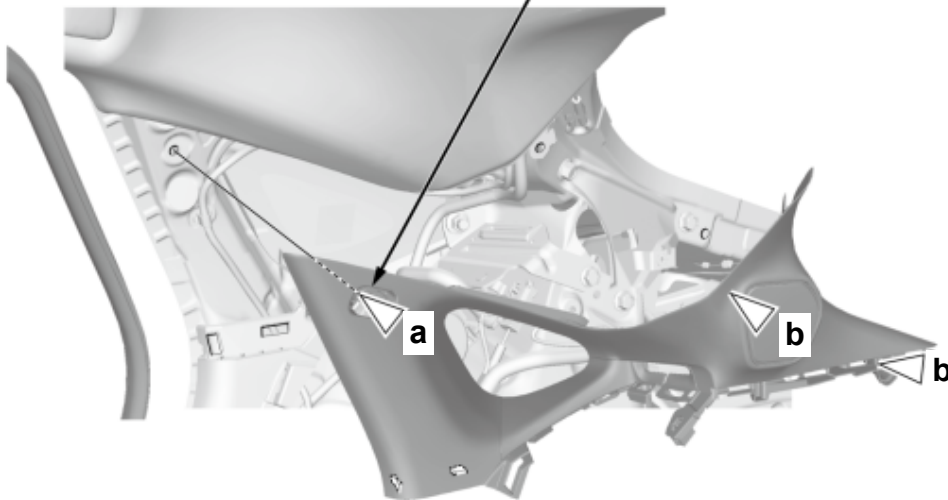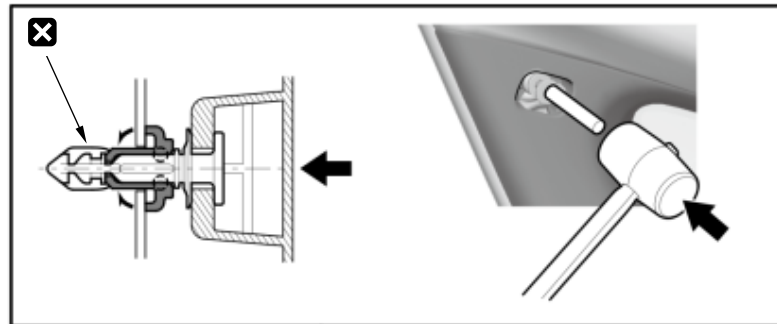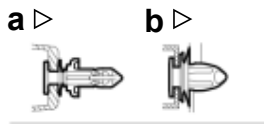

## ● Installation

1. Replace the upper clip (a) with a new one.
2. After inspecting the C-pillar trim, then install the C-pillar trim.

S. -

## ■ Key Information

Do the following before starting your work.


Remove:

- Rear Seat Side Bolster

■ Sub-Procedure

● Removal



- Refer to the figure.

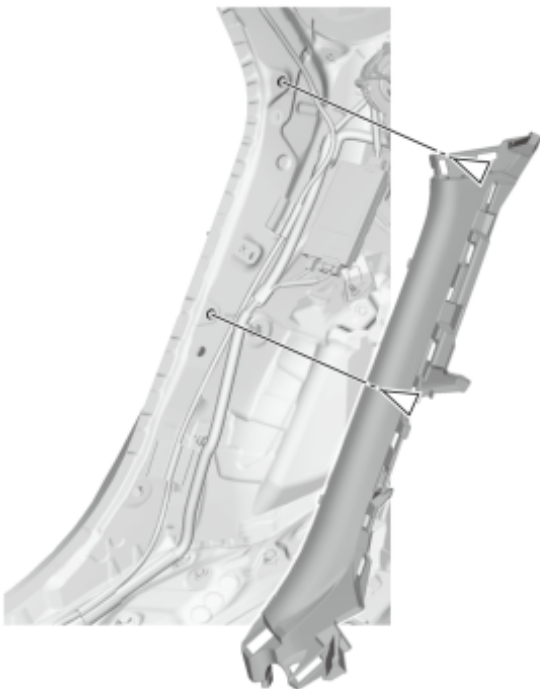

T.


■ Sub-Procedure

● Removal

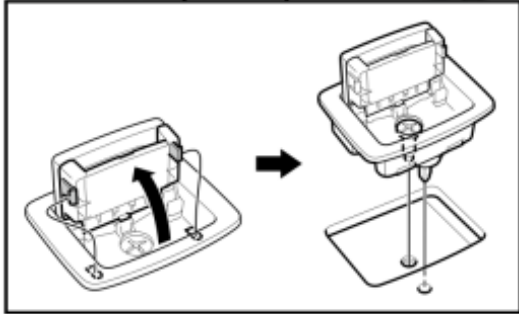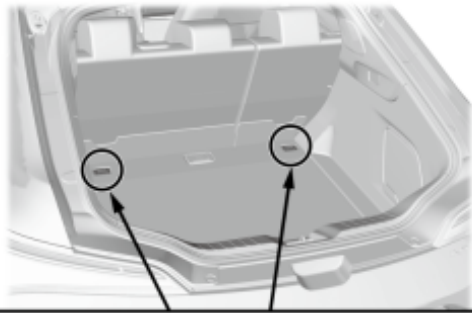

• Refer to the figure.

U.

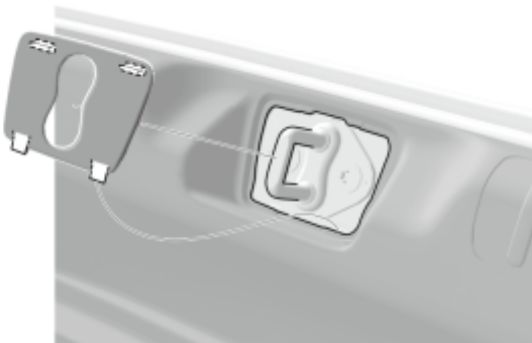

V.




W.

■ Sub-Procedure

● Installation

- Refer to the figure.


Installation Directions	
Position	Direction
a	Out side

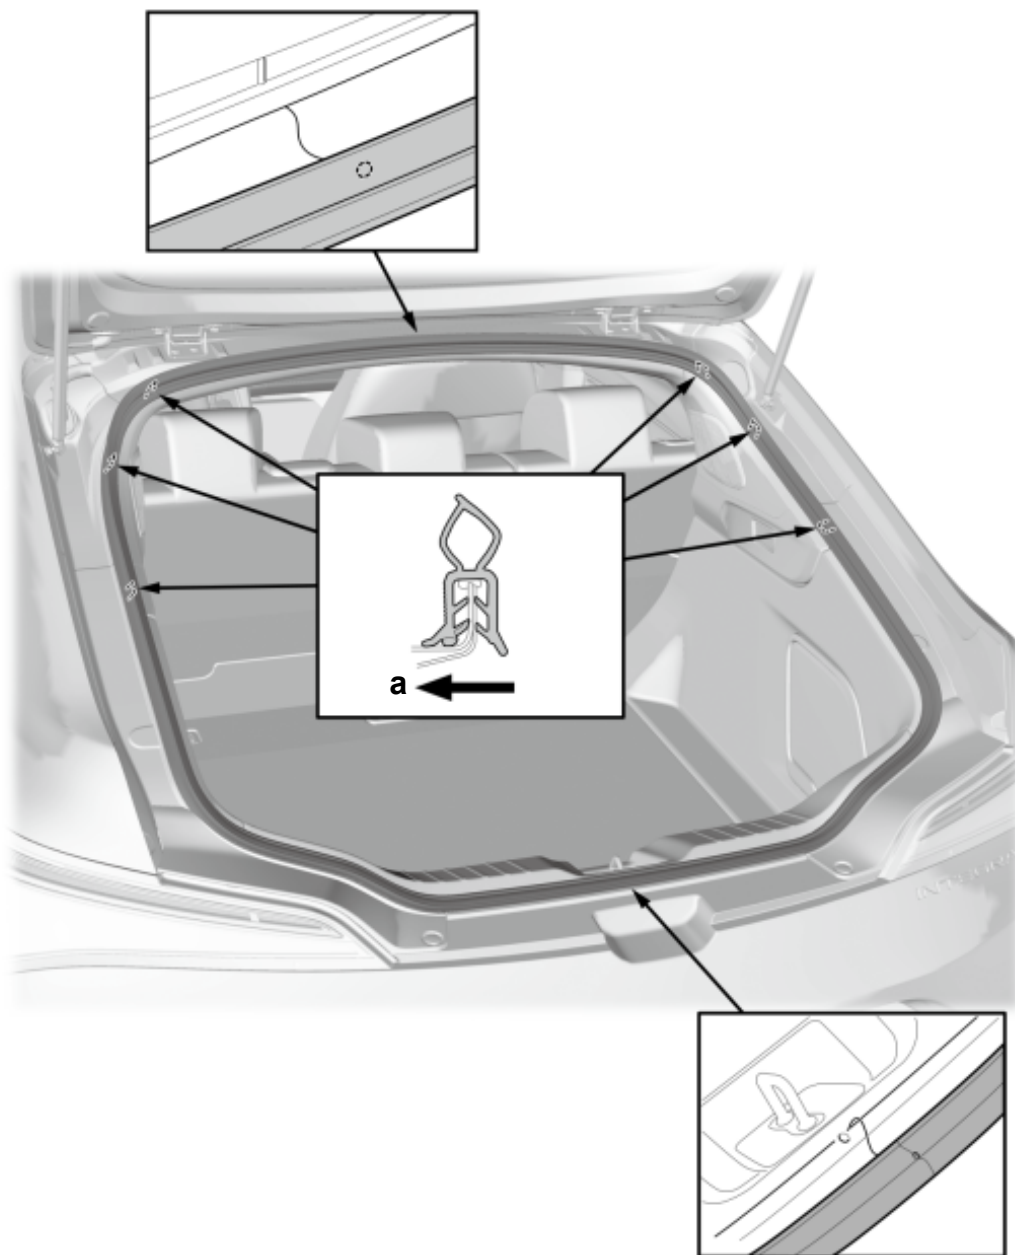

## ■ After Installation


- Water Leaks Check

Sub-Procedure

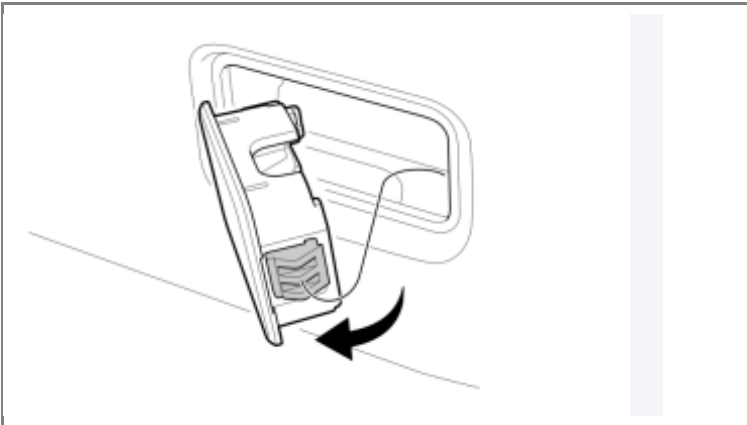

Removal

Refer to the figure.



Preconditions


Rear Seat-Back Folded Down

Sub-Procedure



## ● Removal

- Refer to the figure.

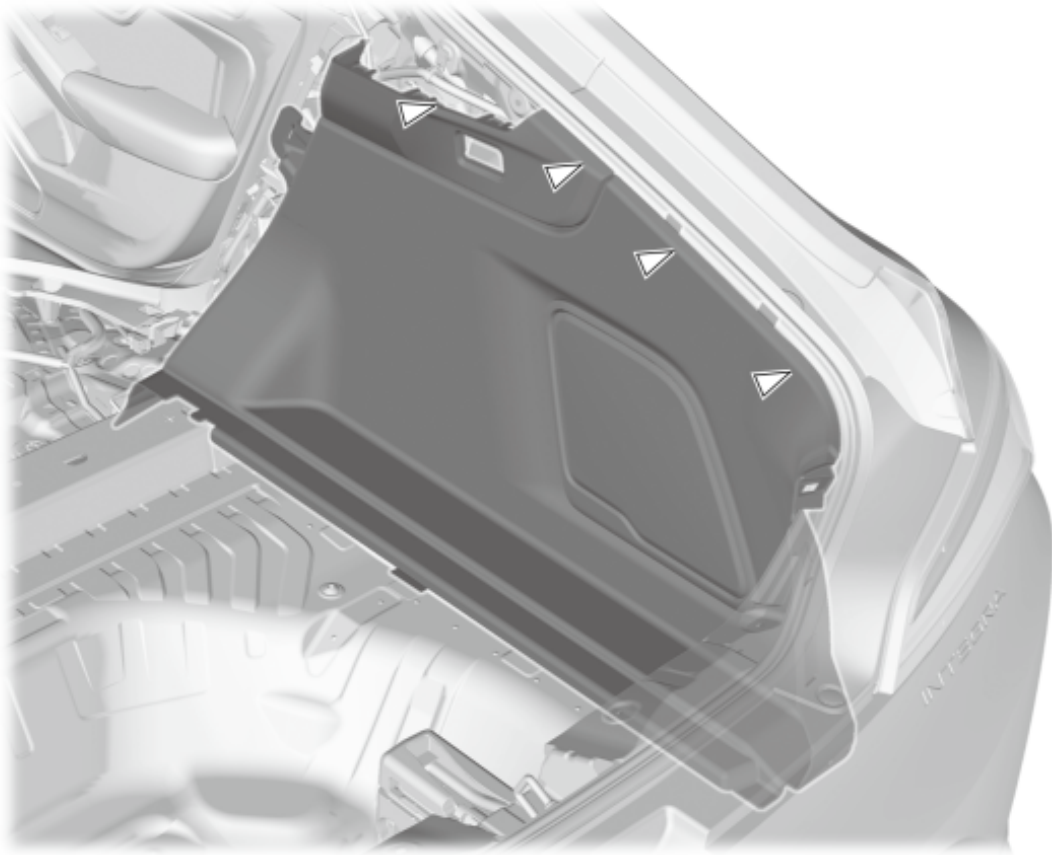

AA.

## ⚠ CAUTION

- Review the precautions and procedures before doing repairs or service.
- Wait at least 3 minutes, after disconnecting the 12 volt battery terminal.

## NOTICE

- If you are replacing the side impact sensor (second) after a deployment, refer to Component Replacement/Inspection After Deployment for a complete list of other parts that must also be replaced.
- Be careful not to bump (by impact wrench, hammer, etc.) the area around the side impact sensor.

### ■ Preconditions

- 12 Volt Battery Negative Terminal Disconnected

### ■ Sub-Procedure

#### ● Installation

## NOTICE

Before installing the rear seat side trim, make sure the SRS indicator works normally.

### ■ After Installation

1. 12 Volt Battery Negative Terminal Reconnect
2. Turn the vehicle to the ON mode, and check that the SRS indicator comes on for about 6 seconds and then goes off.

**⚠ CAUTION**

- SRS components are located in this area. Before doing repairs or service:
  - Review the SRS component locations.
  - Review the precautions and procedures.

NOTE: If you are replacing the rear seat belt after a deployment, refer to Component Replacement/Inspection After Deployment for a complete list of other parts that must also be replaced.

**■ Preconditions**


- 12 Volt Battery Negative Terminal Disconnected

**■ After Installation**

1. 12 Volt Battery Negative Terminal Reconnect
2. Turn the vehicle to the ON mode, and check that the SRS indicator comes on for about 6 seconds and then goes off.

**■ Sub-Procedure****• Removal**

- Refer to the figure.

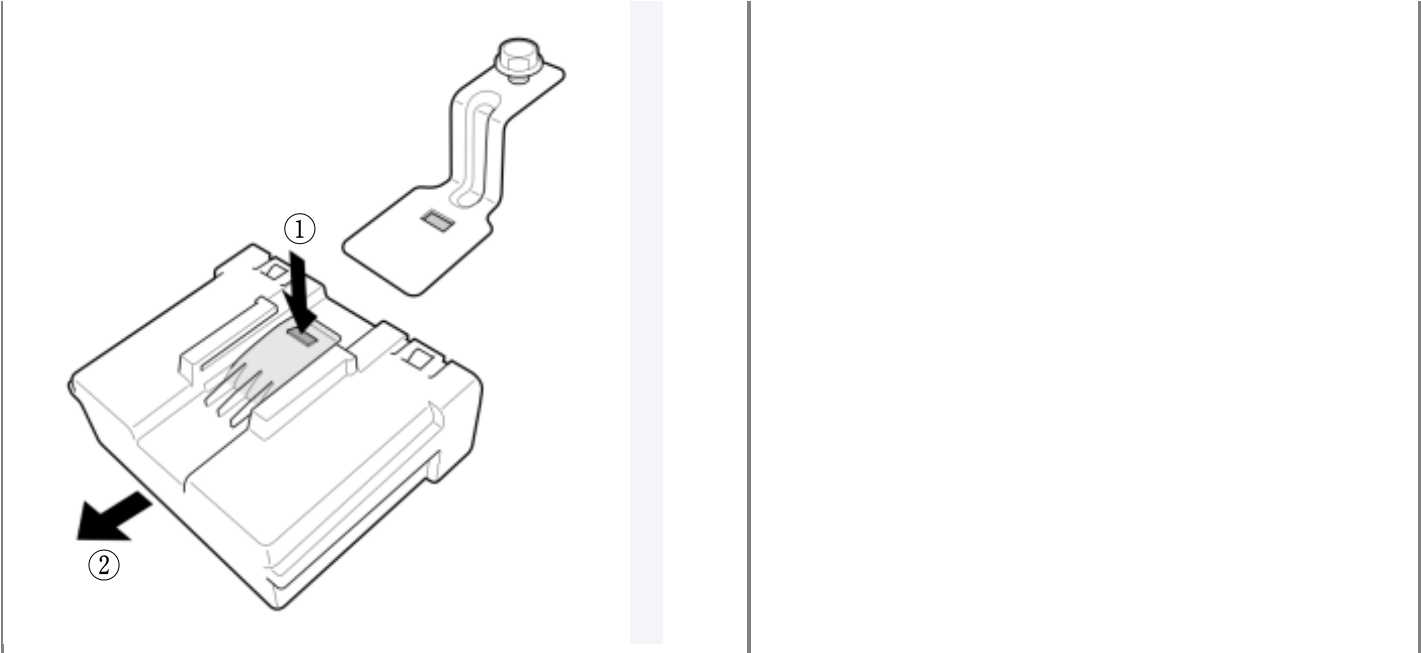


		<b>■ After Installation</b>	
			NOTE: If you are substituting a known-good parking and back-up sensor control unit, update the parking and back-up sensor control unit.

AD.


<b>■ Key Information</b>		
Do the following before starting your work.		
<b>Remove:</b>		
	•	Rear Seat Side Bolster
<b>■ After Installation</b>		
	•	Adaptive Damper Control Unit Update (If the adaptive damper control unit does not have the latest software)

AE.

<b>■ Key Information</b>	
Do the following before starting your work.	
<b>Remove:</b>	
	• Rear Seat Side Bolster
<b>■ Sub-Procedure</b>	

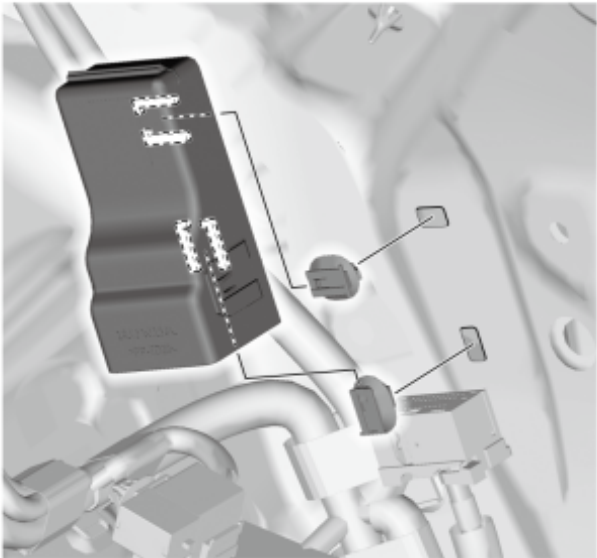	<b>● Removal</b>	
		• Refer to the figure.

--	--

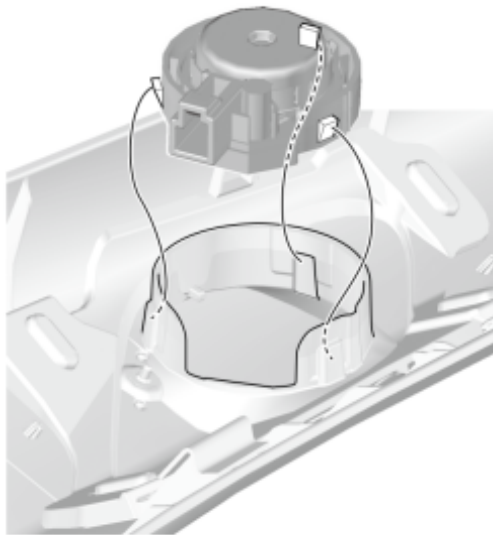


AG.


## ■ Sub-Procedure

### ● Removal

- Refer to the figure.

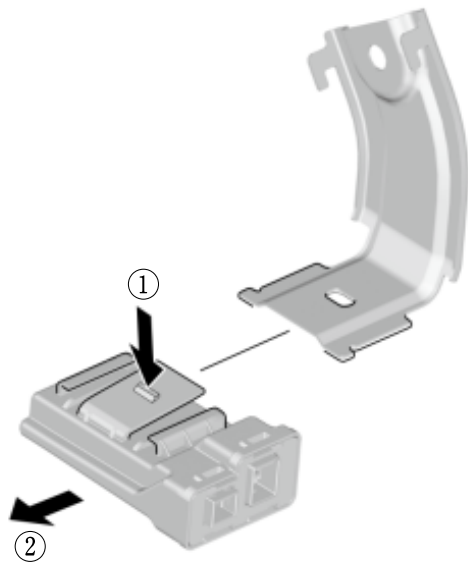

AH.

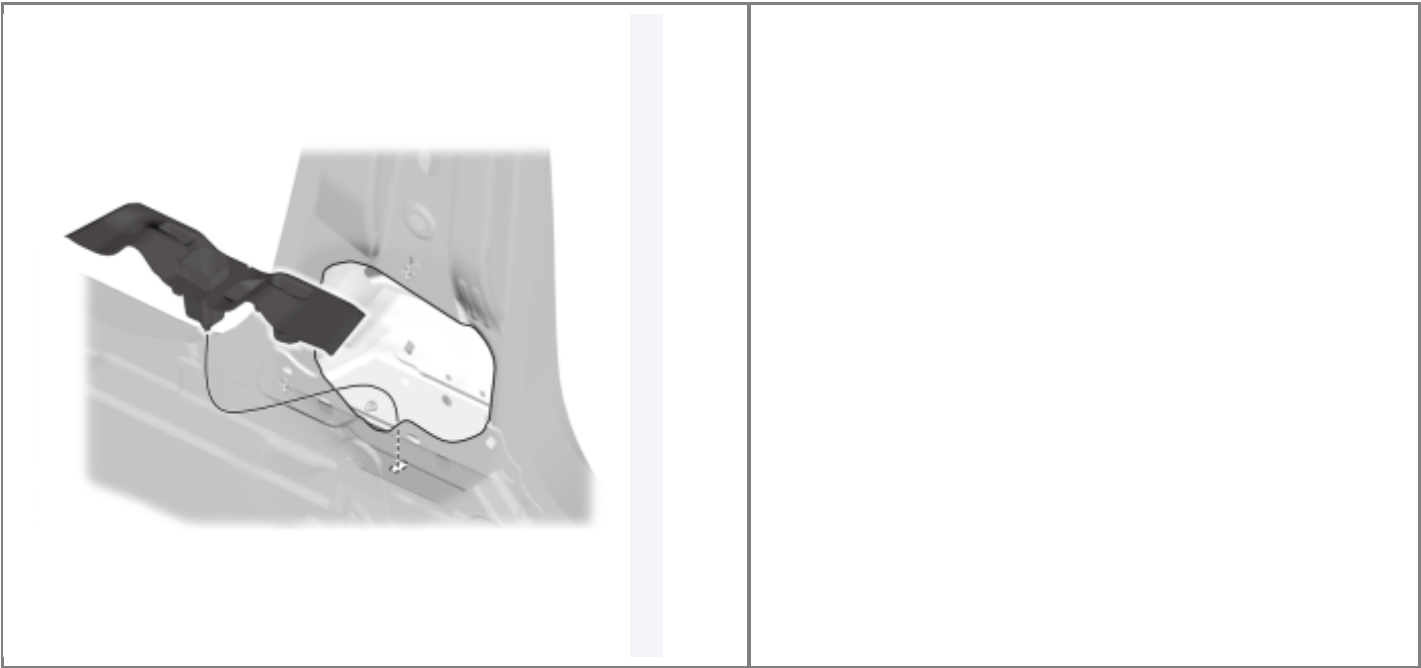

AI.


## ■ Key Information

Do the following before starting your work.

### Remove:

- Rear Seat Side Bolster

1

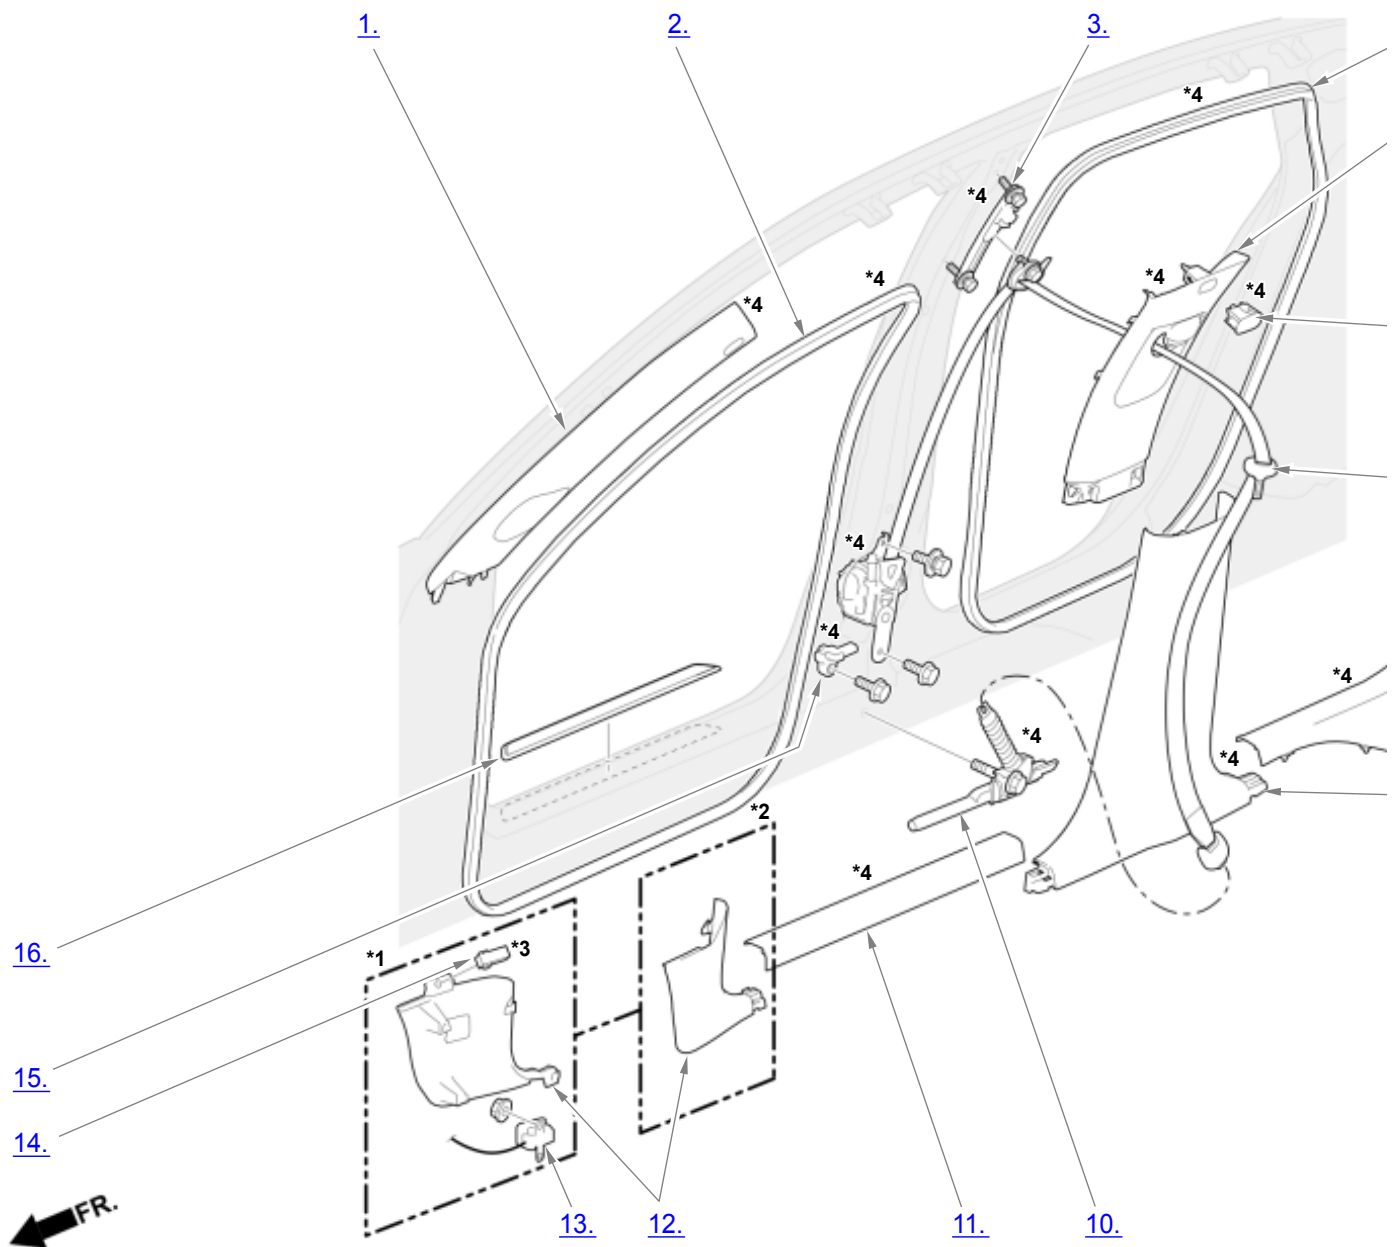

\*1: Driver's side


\*2: Passenger's side

\*3: With driver's footwell light

\*4: Part(s) are shown for one side only as the procedure is the same for both sides.

## 2



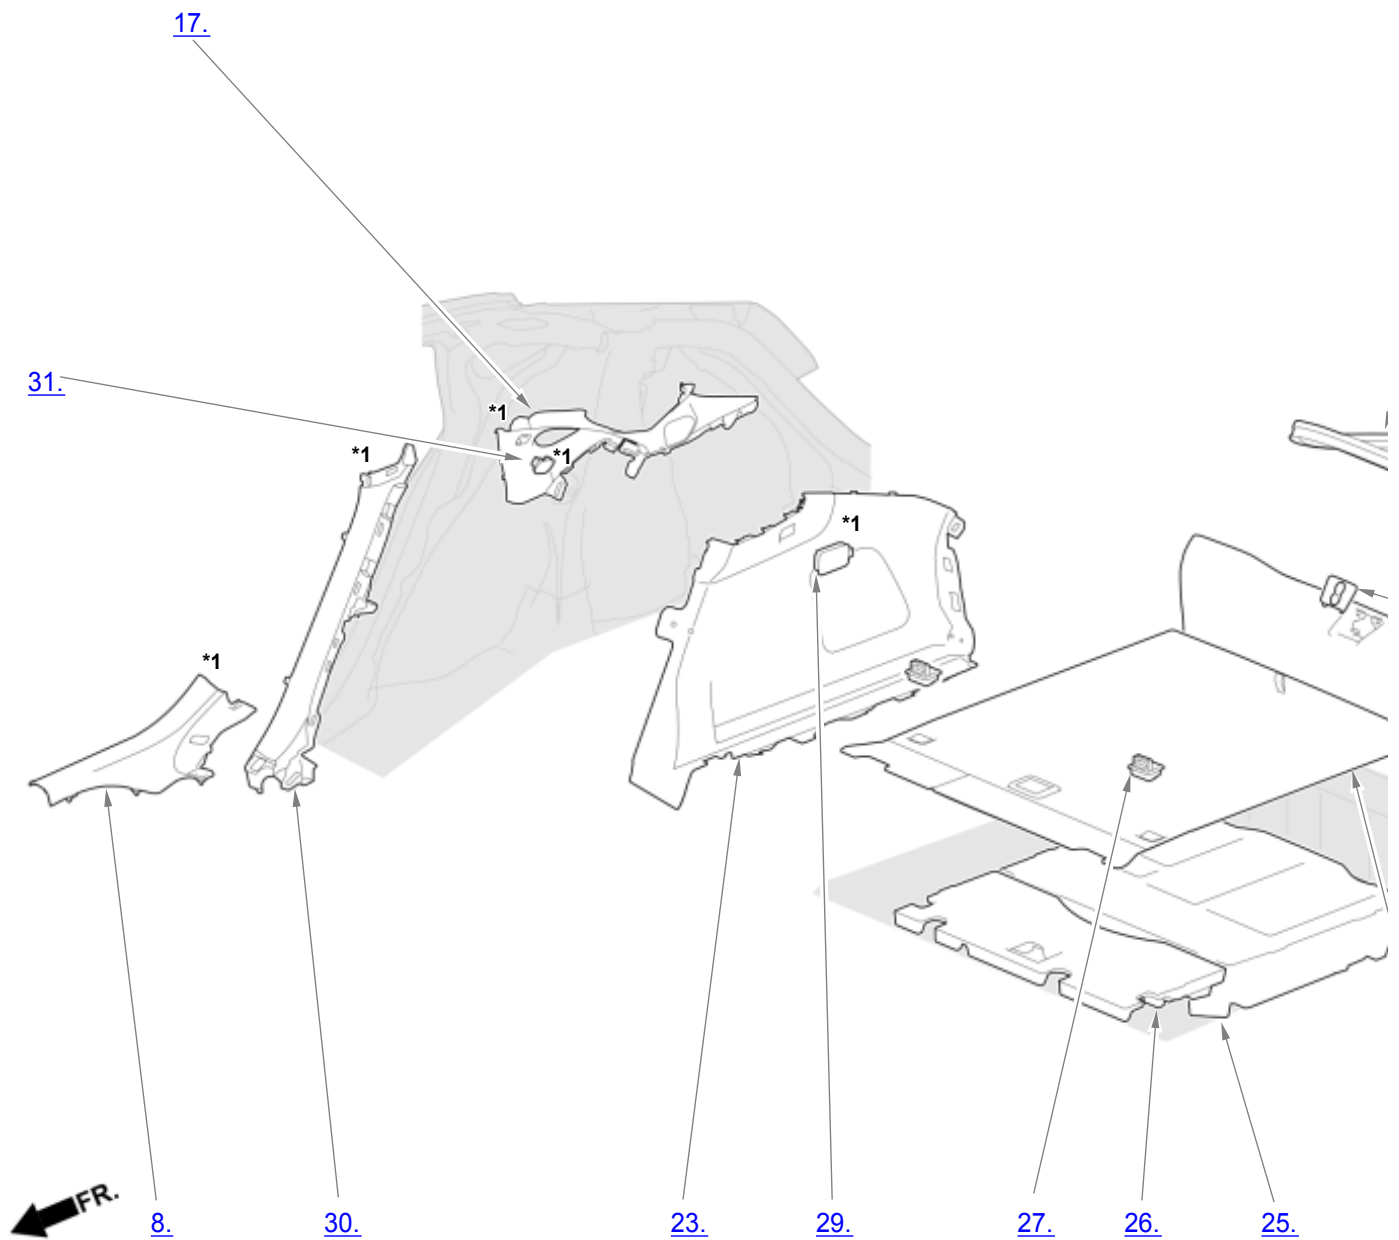


\*1: Part(s) are shown for one side only as the procedure is the same for both sides.


### 3



4

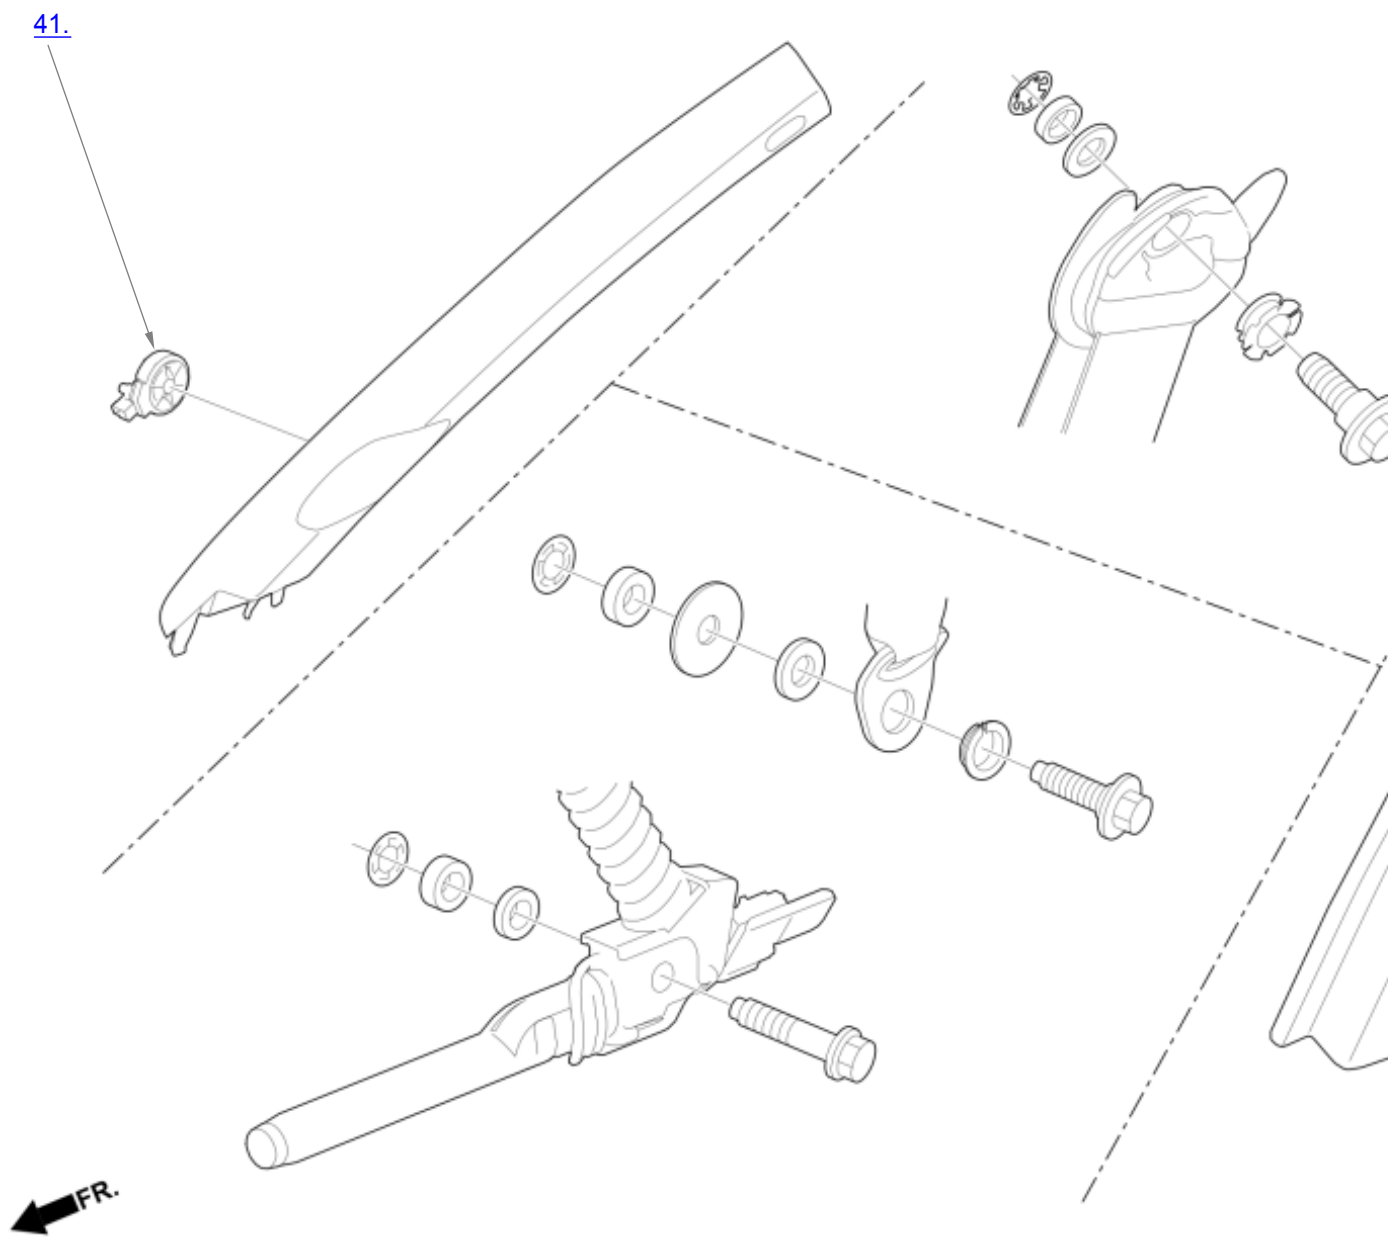


5

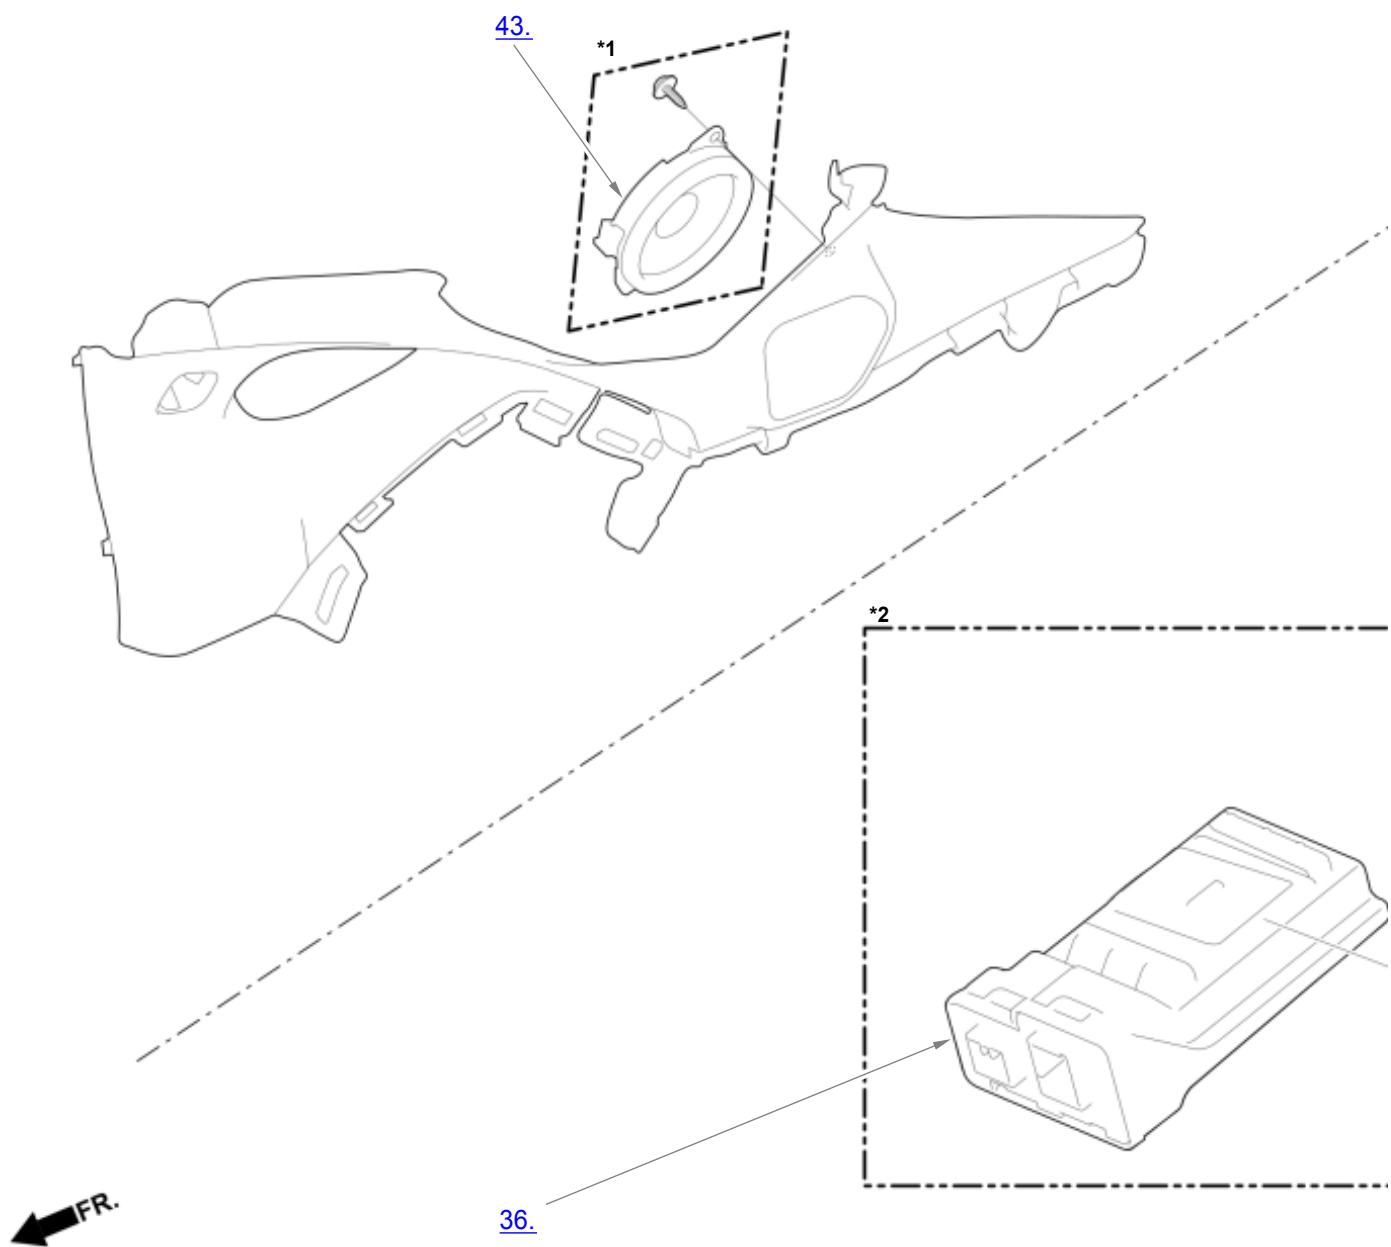

\*1: Display audio type (9-inch screen)  
 \*2: With 2-way transceiver

6

44.

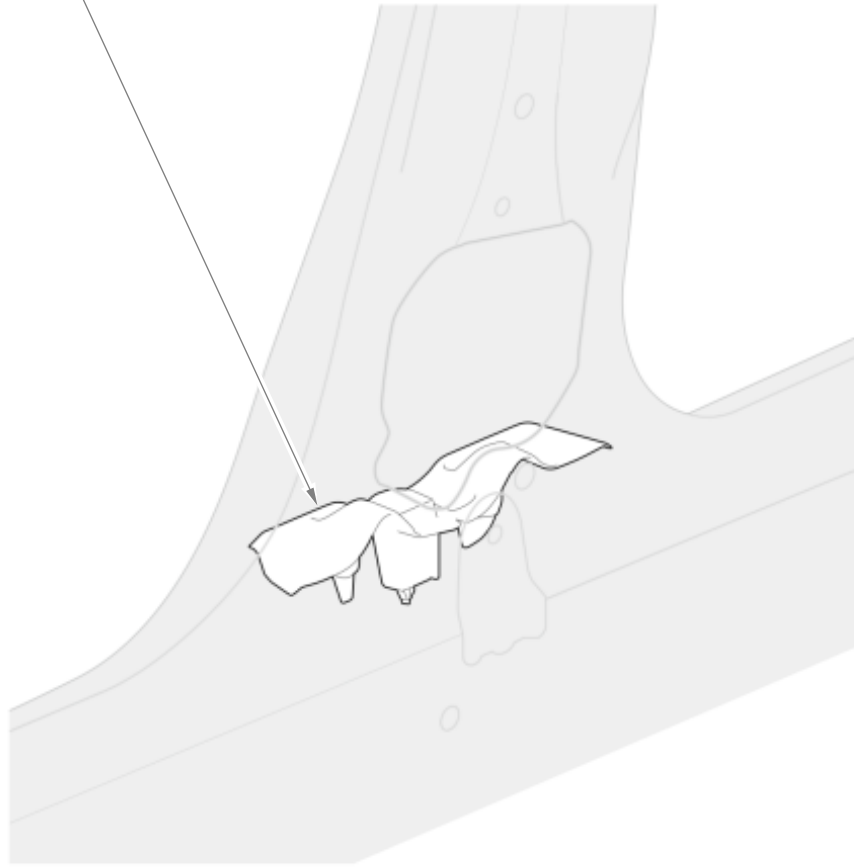

## 1. A-Pillar Trim

## 2. Front Door Opening Seal