


Tailgate - Inner Side Area

How to use this manual.

1

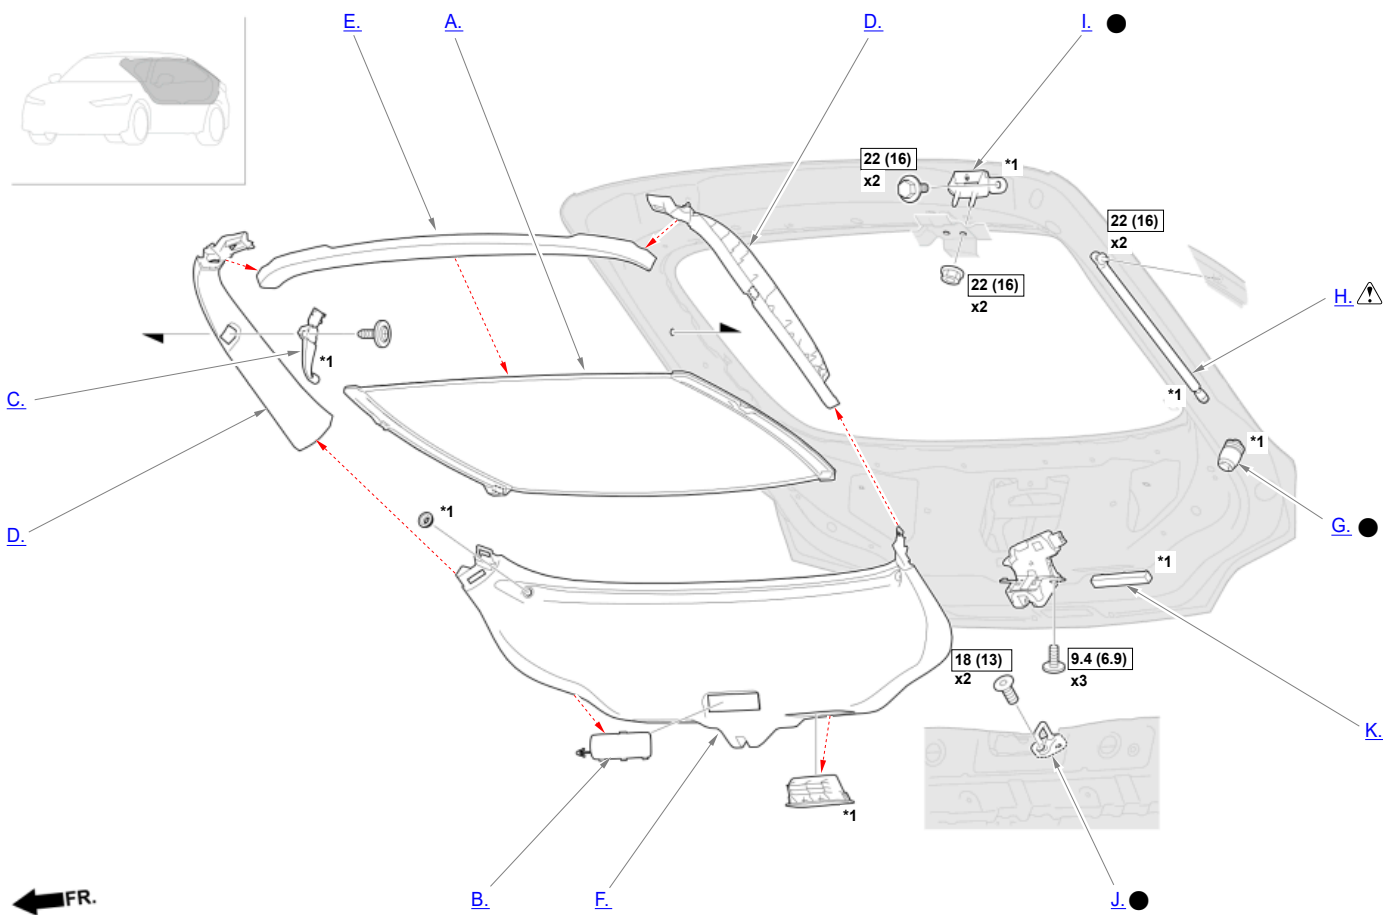


\*1: Part(s) are shown for one side only as the procedure is the same for both sides.

A. -

■ Sub-Procedure

● Removal

- Refer to the figure.

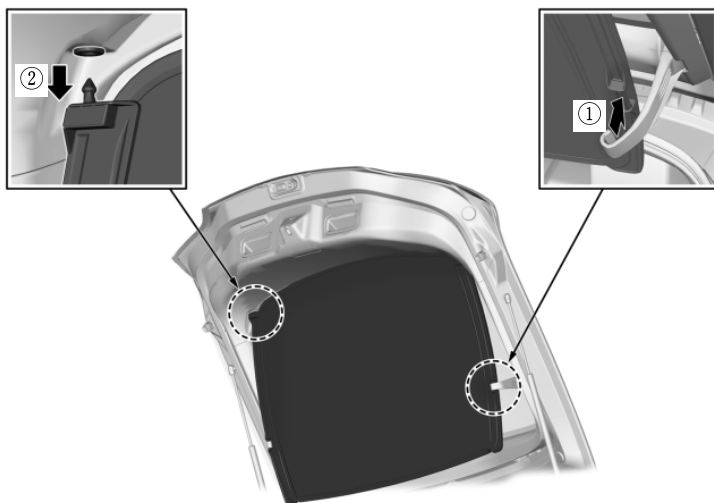


B. -

## ■ Sub-Procedure

### ● Removal

- Refer to the figure.

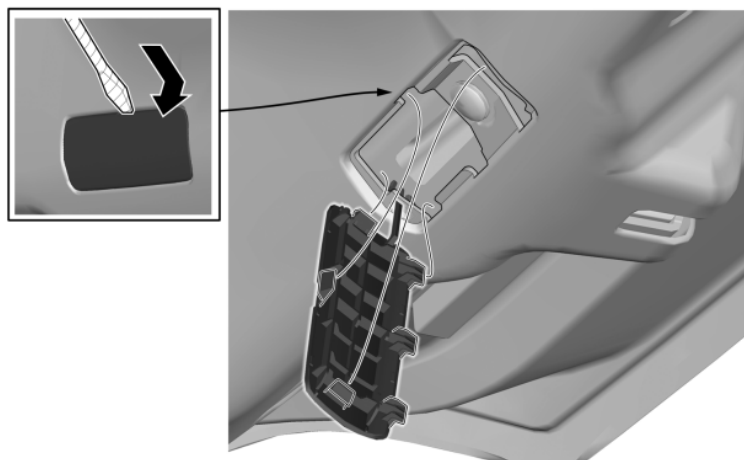


C. -


## ■ Sub-Procedure

### ● Removal


- Refer to the figure.

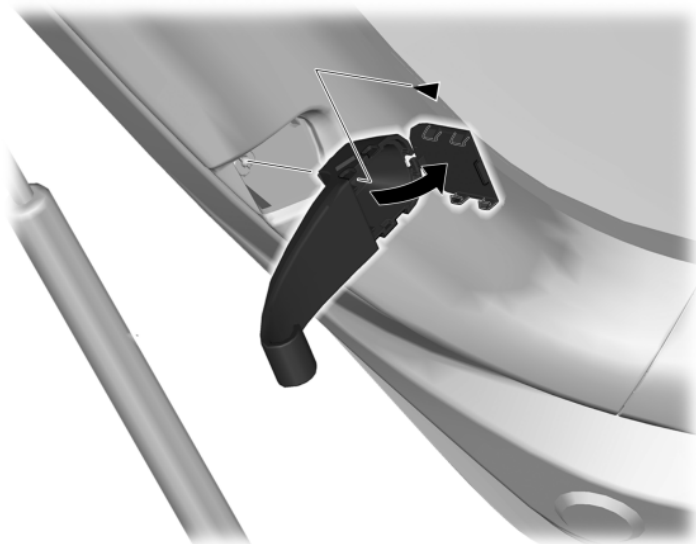



D. -

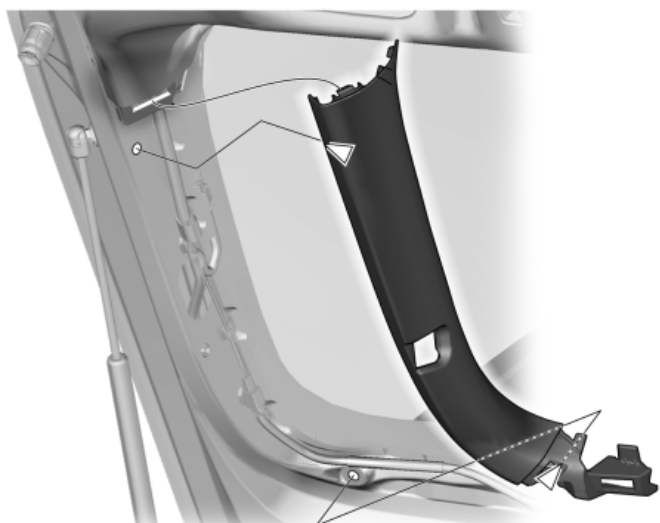

E. -

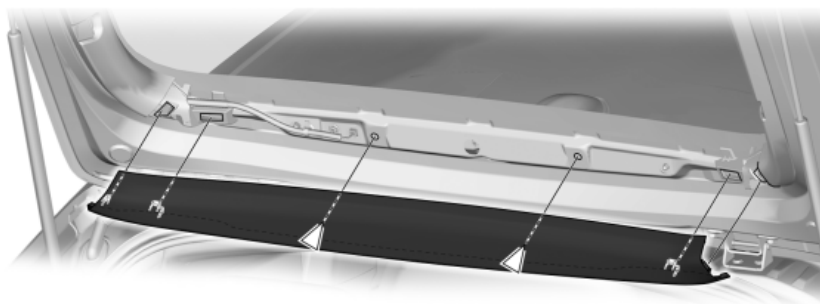

 F. -

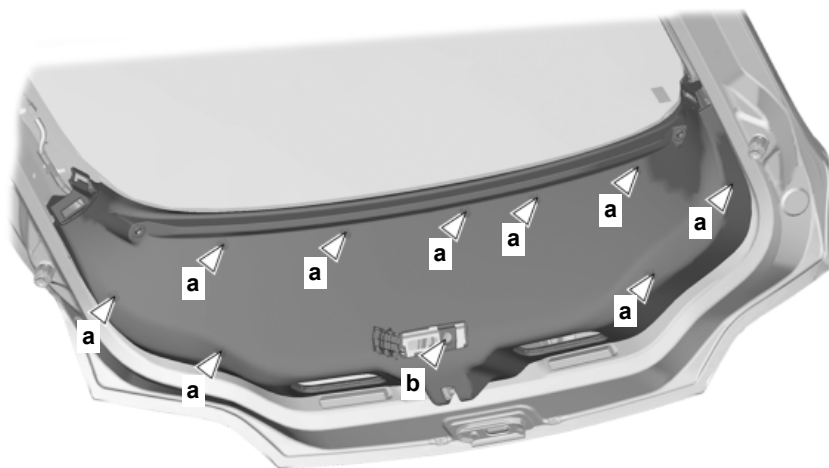

G. -

## ■ After Installation

- Tailgate Adjustment

H. -

## ■ Sub-Procedure

- Removal

### ⚠ CAUTION

The tailgate will have to be opened/closed by hand, and will not stay open on its own after the tailgate support strut (a) is removed.

### NOTICE

The tailgate support strut must be removed together with the ball stud (b).  
(If the tailgate support strut is removed at the joint (c) with the ball stud, replace it with a new one.)


NOTE: Have assistants hold the tailgate while removing it.

## ● Installation

- When installing a new one, attach the ball stud to the body and then push the tailgate support strut joint into the ball stud.

### NOTICE

Make sure that the joint is securely set. Do not pull the joints strongly.

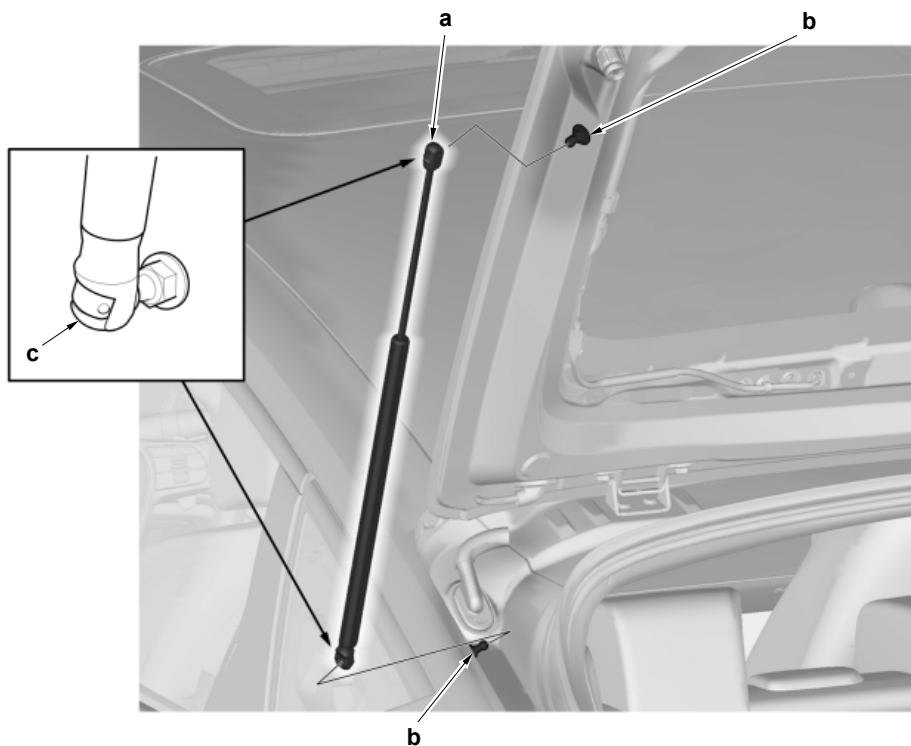

I. -

## ■ Key Information

Do the following before starting your work.

### Remove:

- Headliner (as needed)

## ■ After Installation

- Tailgate Adjustment

J. -

## ■ Key Information

Do the following before starting your work.

### Remove:

- Striker Cap

## ■ After Installation


- Tailgate Adjustment

K. -

## ■ Sub-Procedure

### ● Removal

- Refer to the figure.


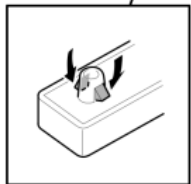


L. -

## ■ Sub-Procedure

### ● Removal

- Refer to the figure.

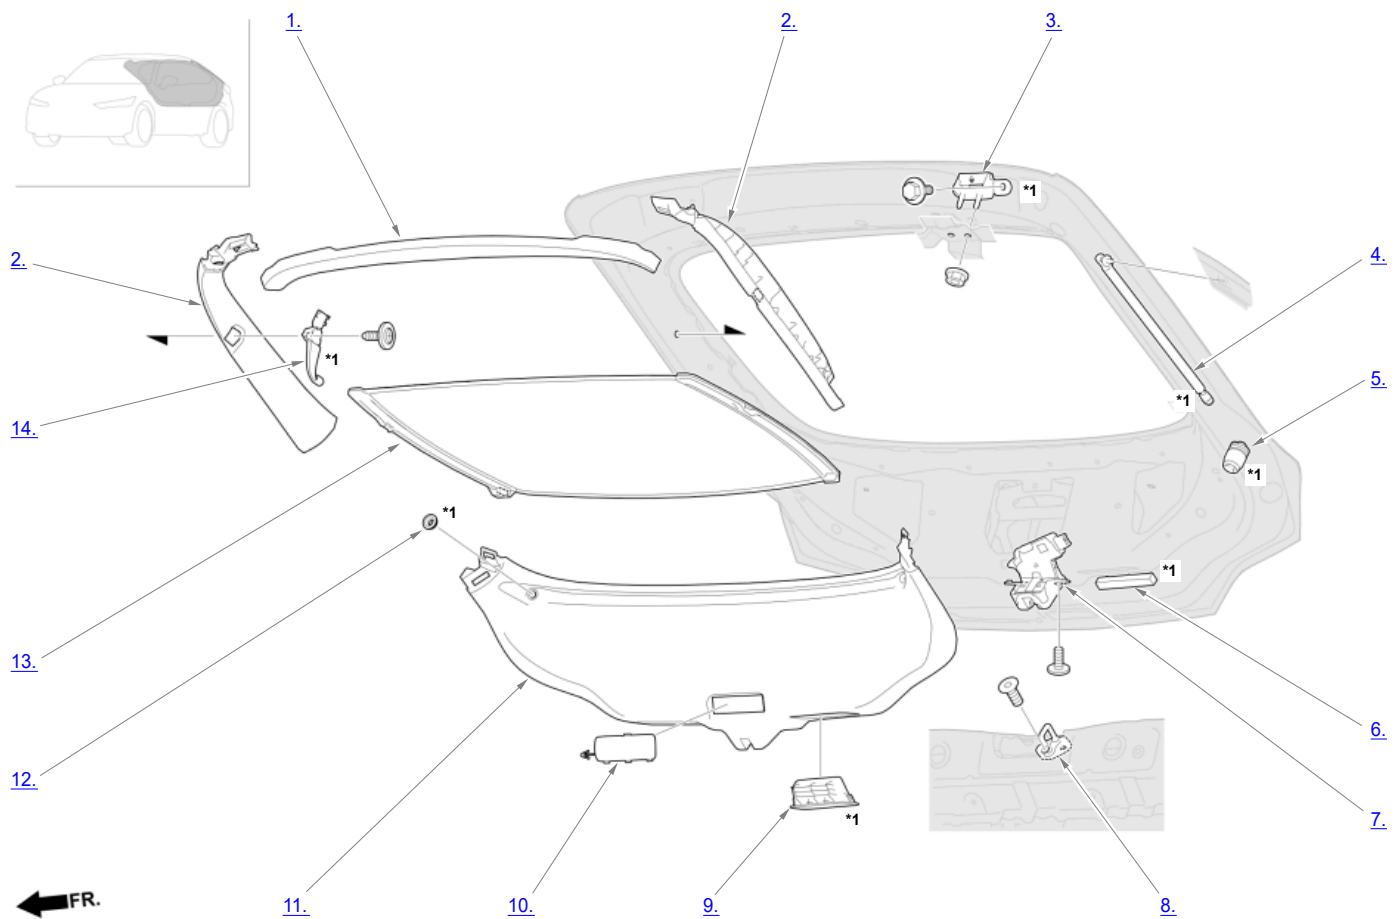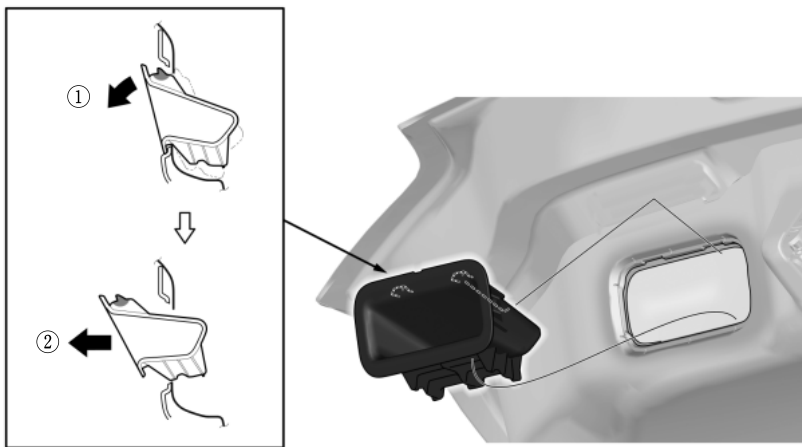

\*1: Part(s) are shown for one side only as the procedure is the same for both sides.

## 1. Tailgate Upper Trim