

VSA Sensor Neutral Position Memorization

Procedure

[How to use this manual.](#)

NOTICE

The VSA sensor neutral position must be learned whenever you do any of these actions:

- Updating or replacing the VSA modulator-control unit.
- Removing the steering wheel.
- Disconnecting the steering joint.
- Wheel alignment adjustment.
- Updating or replacing the SRS unit.

1. VSA Sensor Neutral Position - Memorize

■ Preconditions

- Set the steering wheel in the straight ahead position.
- Vehicle on Level Ground
- [HDS Connected](#)

■ Procedure

NOTICE

Do not press the brake pedal during this procedure.

- Select the following menu buttons on the HDS screen in sequence.
 - ① ABS/VSA (System Selection Menu)
 - ② ADJUSTMENT
 - ③ ALL SENSOR