



# INSTALLATION INSTRUCTIONS

## Accessory

### DOOR MIRROR COVERS

## Application

### 2023 INTEGRA MODEL SERIES


## Publications No.

VERSION 1

## Issue Date

MAY 2022

## GENERAL VIEW

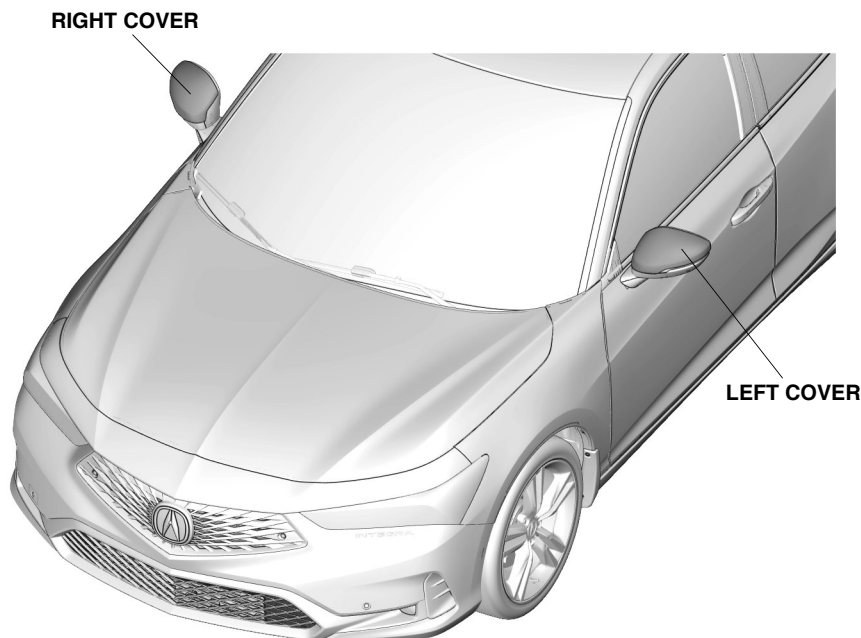

QL61101AT

## FOR YOUR SAFETY (Read carefully.)

### Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of following symbols:

\*All symbols are not used in all installation instructions.

#### DANGER

You will be killed or seriously hurt if you do not follow the instructions.

#### WARNING

You can be killed or seriously hurt if you do not follow the instructions.

#### CAUTION

You can be hurt if you do not follow the instructions.

#### NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

#### NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.


## Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

\*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.  
(instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the client.  
(Do not reuse.)

## Safety: General

- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.






## Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.

- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

# PARTS LIST

Door Mirror Cover Kit  
(P/N 08R06-3S5-200)  
(P/N 08R06-3S5-200A)  
(\*: The part differs depending on the kit.)

<p>*Right cover (P/N 08R06-3S5-200)</p> 	<p>*Left cover (P/N 08R06-3S5-200)</p> 	<p>*Right cover (P/N 08R06-3S5-200A)</p> 	<p>*Left cover (P/N 08R06-3S5-200A)</p> 
<p>Alcohol wipe</p> 			

# REQUIRED TOOLS AND SUPPLIES



- Masking tape
  - Ruler
- The following tool is available through the Acura Tool and Equipment Program:  
Rubber Roller (T/N MHLE54D)

## INSTALLATION

1. Choose one of these options.

• With door mirror side turn signal light	Go to step 2
• Without door mirror side turn signal light	Go to step 17


2. Place the left cover to check the alignment.

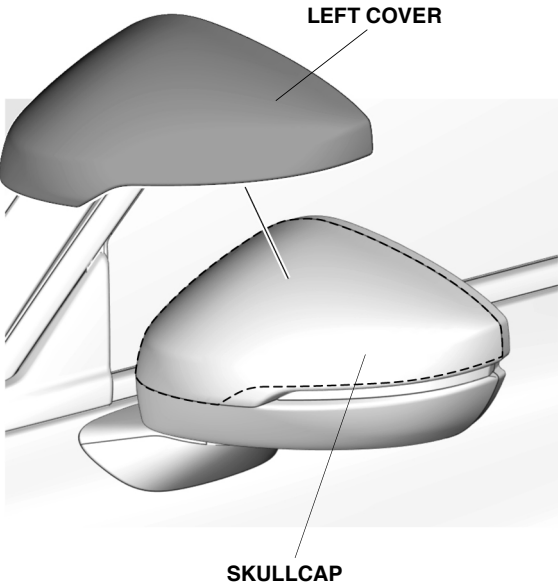

QL61122AT

3. Remove the left cover.  
4. Clean the left skullcap.


<b>NOTICE</b>
Allow to dry thoroughly.

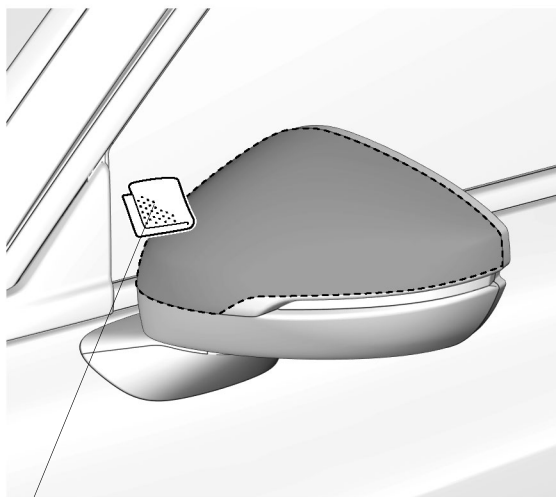

**ALCOHOL WIPE**

QL61120BT


5. Temporarily attach the adhesive backings.

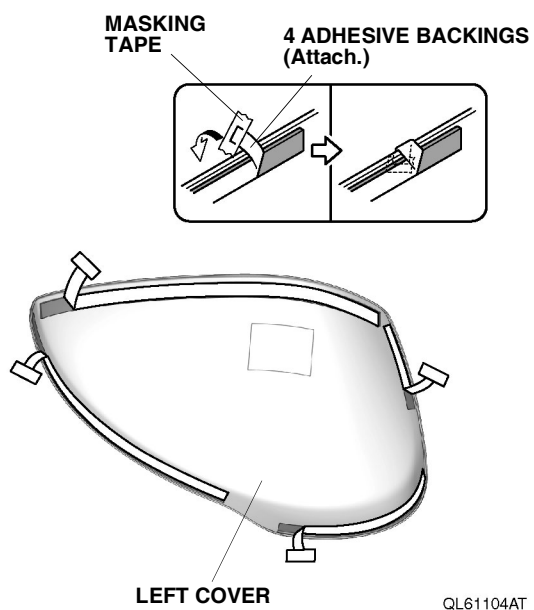



**LEFT COVER**

QL61104AT

6. Loosely install the left cover.

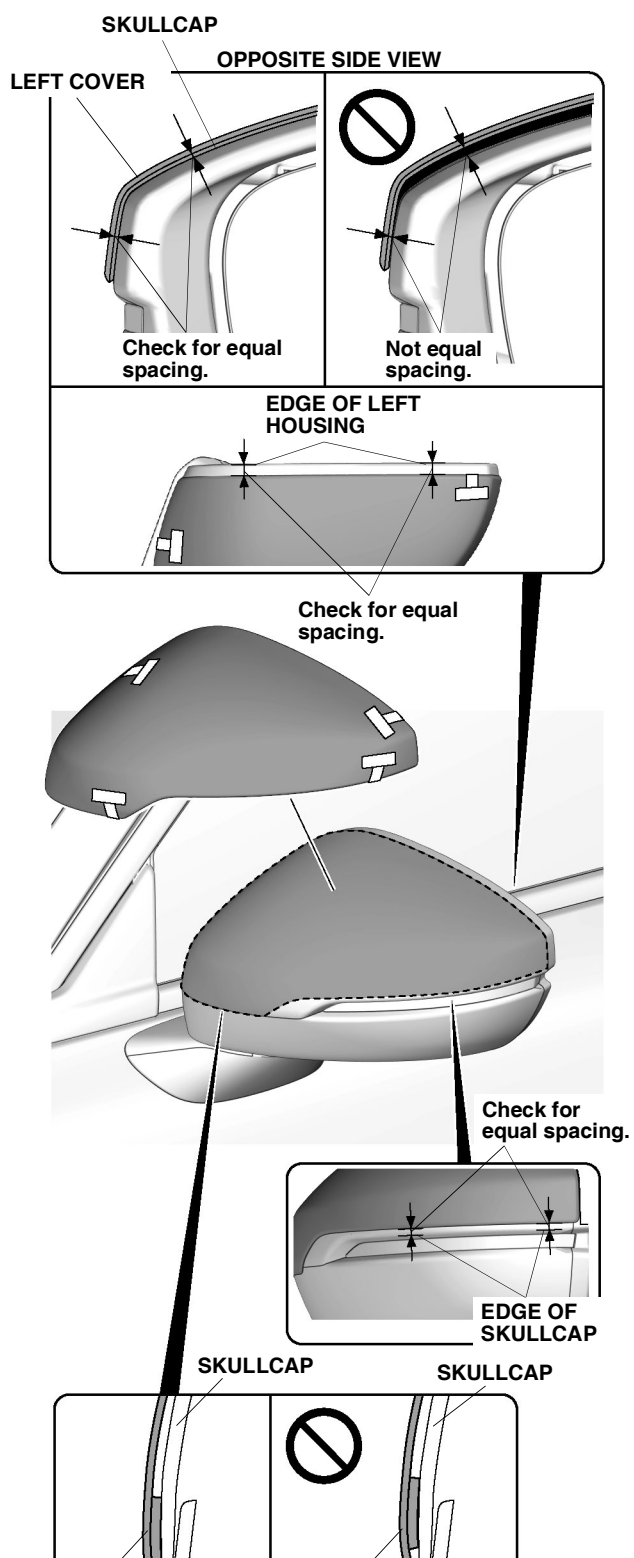

7. Temporarily secure the left cover.

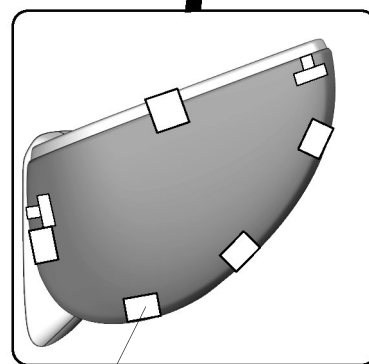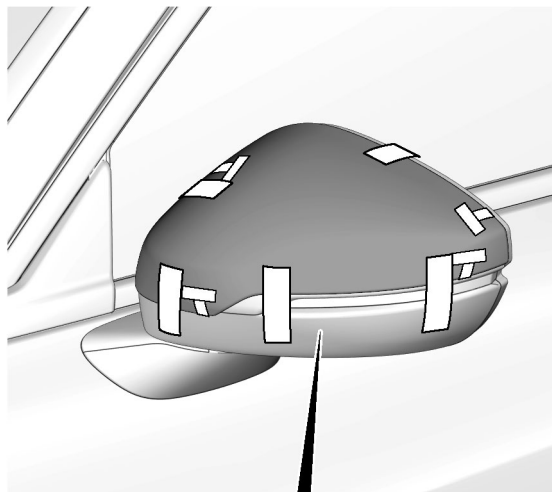


**MASKING  
TAPE**

QL61106BT


8. Secure the left cover.

### NOTE

- Install in the order shown.
- Check the position of the double-sided adhesive tape and make sure to press firmly.

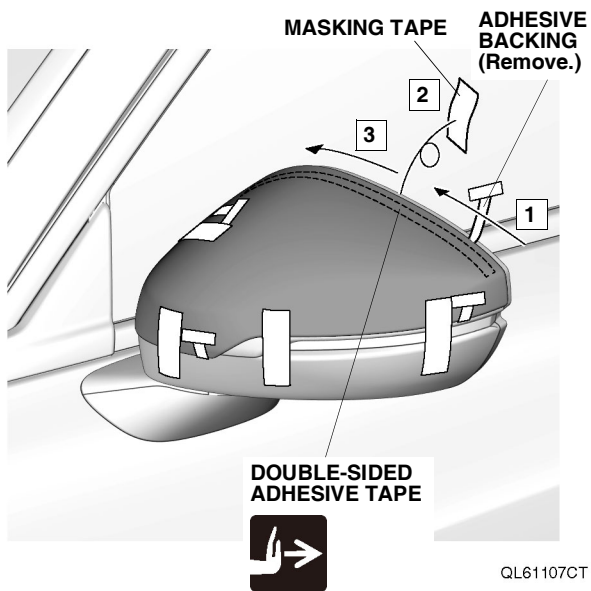


9. Secure the left cover.

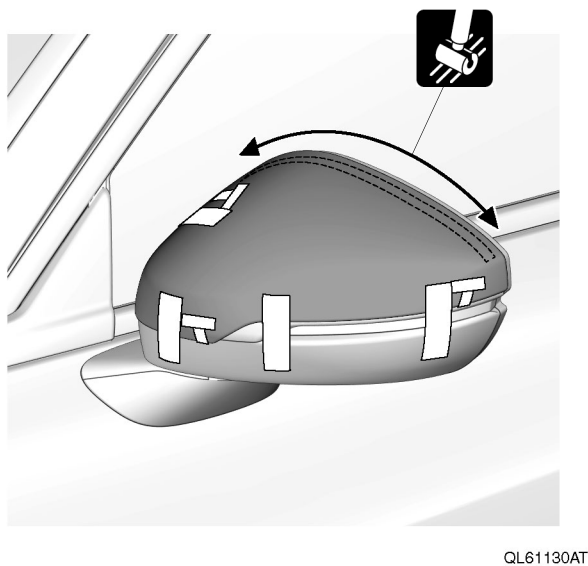


10. Secure the left cover.

#### NOTE

- Install in the order shown.
- Check the position of the double-sided adhesive tape and make sure to press firmly.

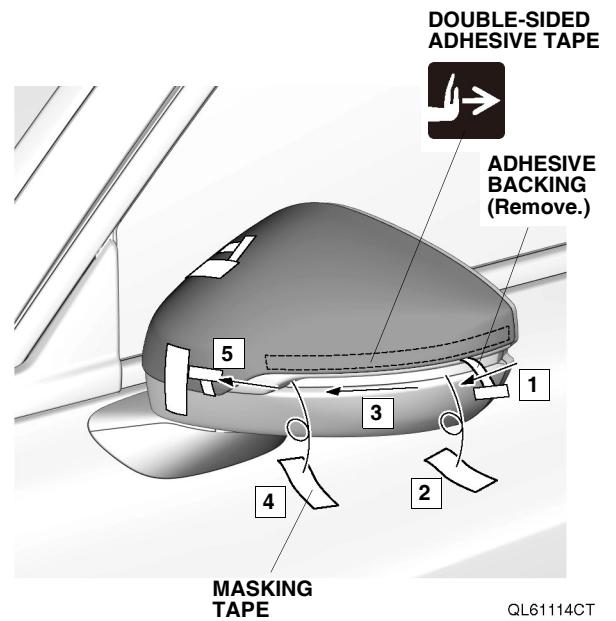


11. Secure the left cover.

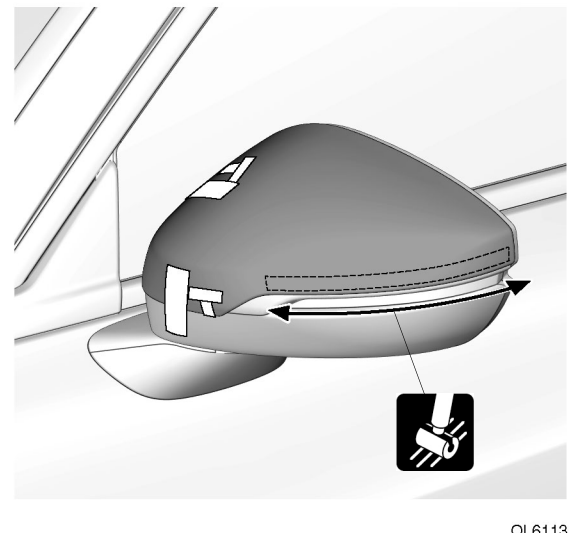


12. Secure the left cover.

## NOTE

- Install in the order shown.
- Check the position of the double-sided adhesive tape and make sure to press firmly.

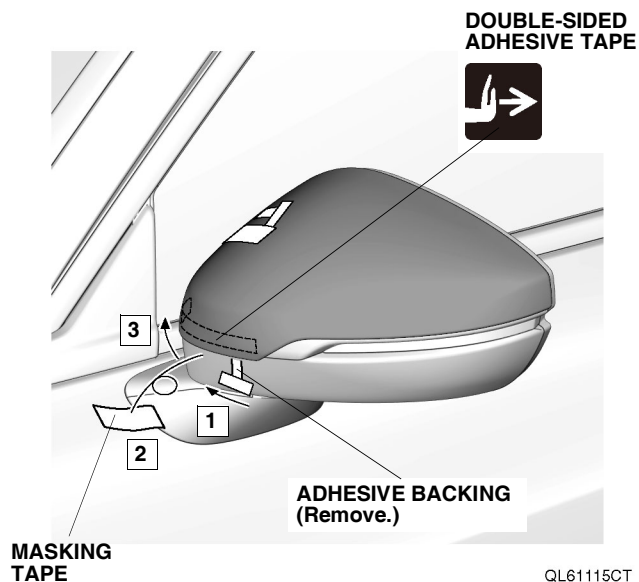


13. Secure the left cover.

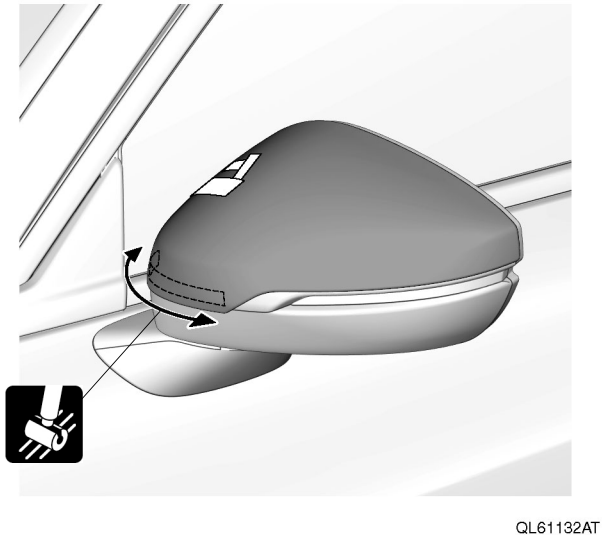


## NOTE


- Install in the order shown.
- Check the position of the double-sided adhesive tape and make sure to press firmly.

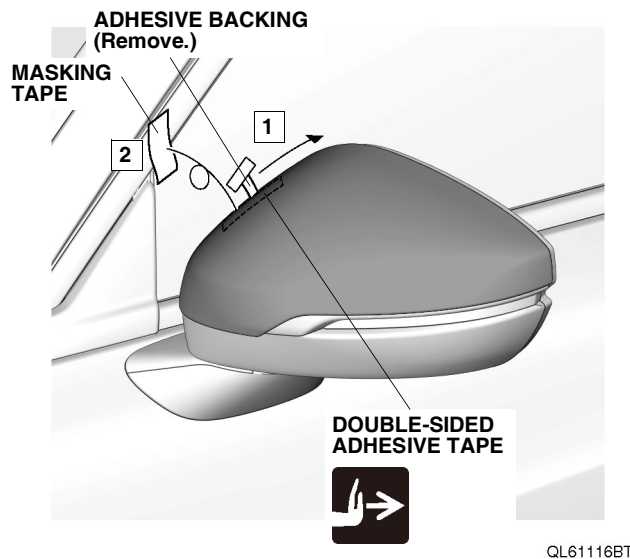

15. Secure the left cover.

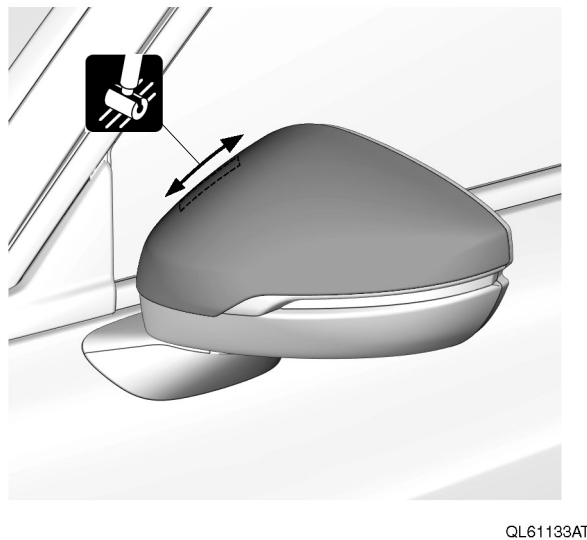


16. Repeat the same procedures on the other side.

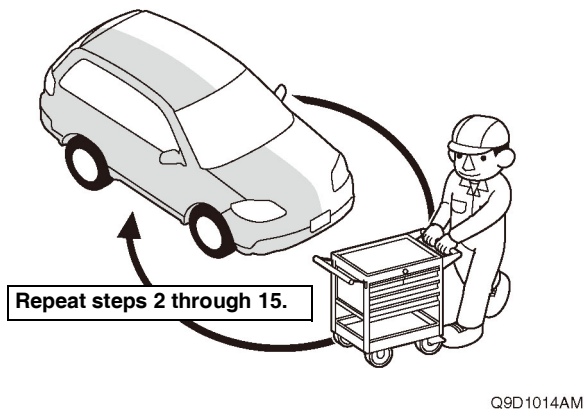

Go to step 30


17. Place the left cover to check the alignment.

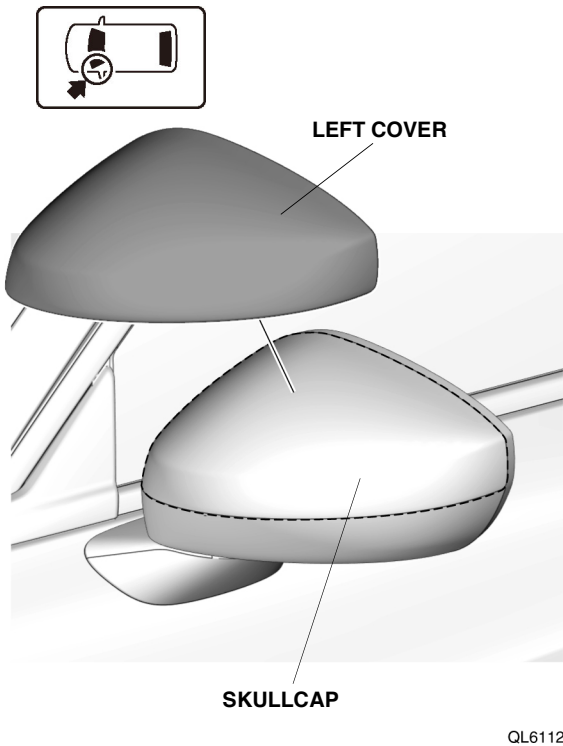

18. Remove the left cover.

19. Clean the left skullcap.


<b>NOTICE</b>
Allow to dry thoroughly.

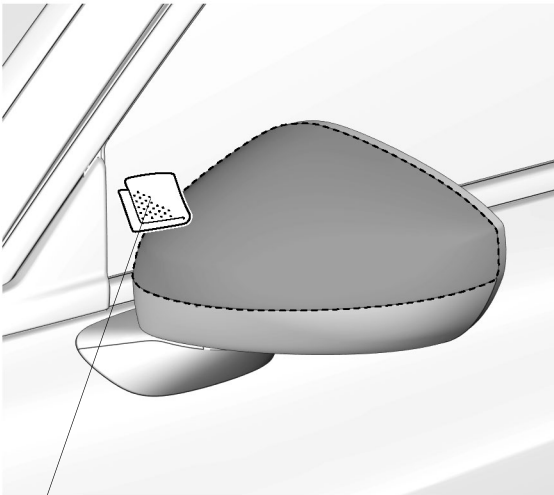


ALCOHOL WIPE

QL61121BT



20. Temporarily attach the adhesive backings.

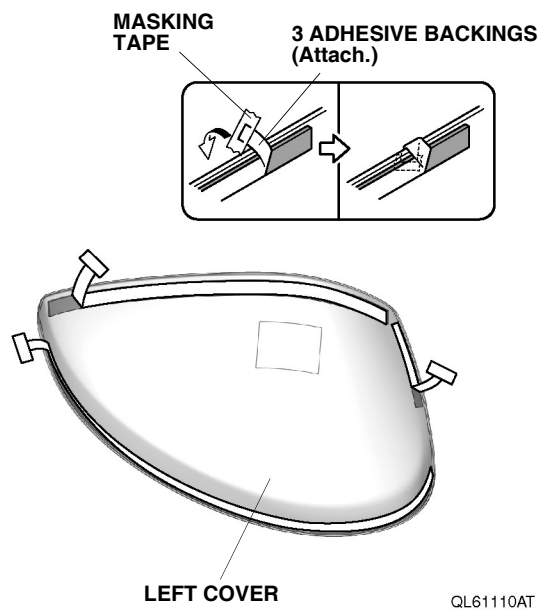

21. Loosely install the left cover.

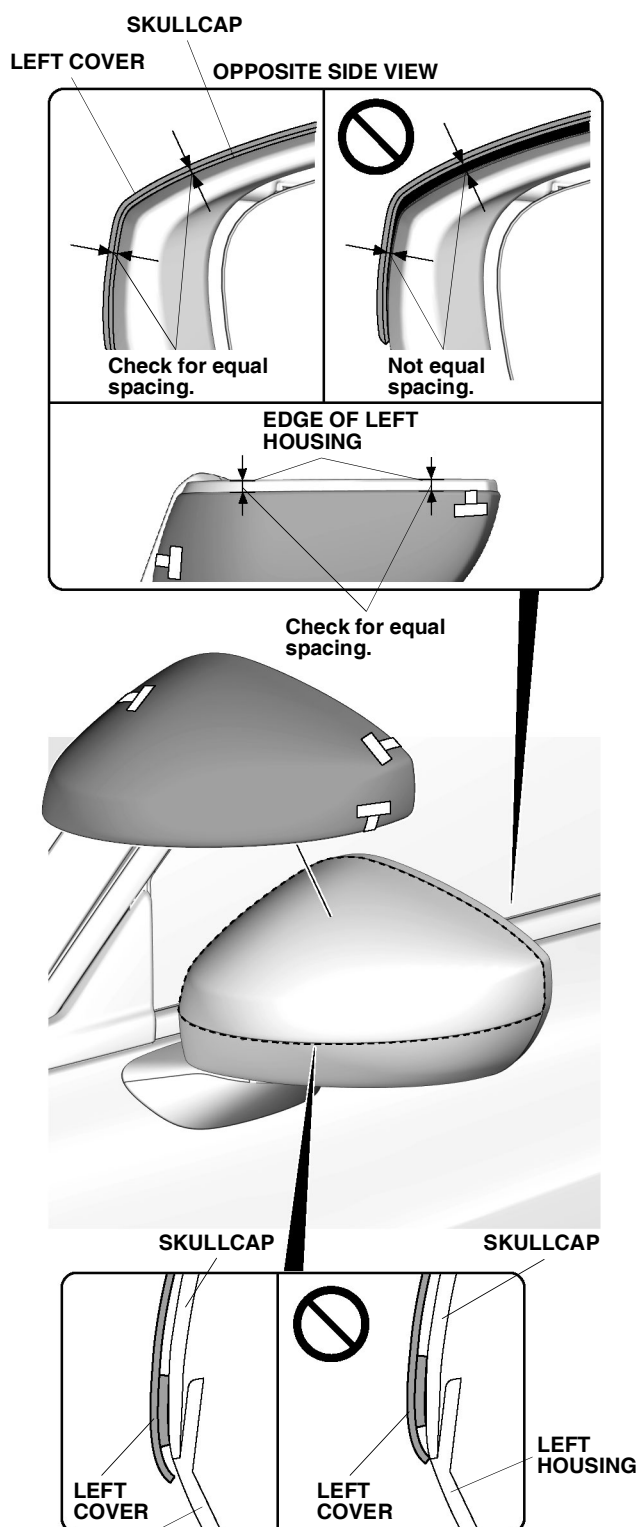

22. Temporarily secure the left cover.

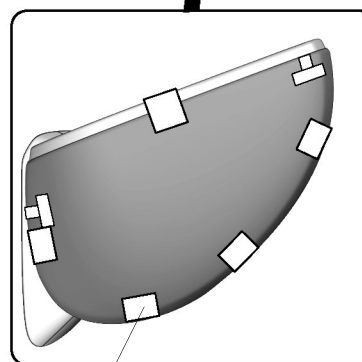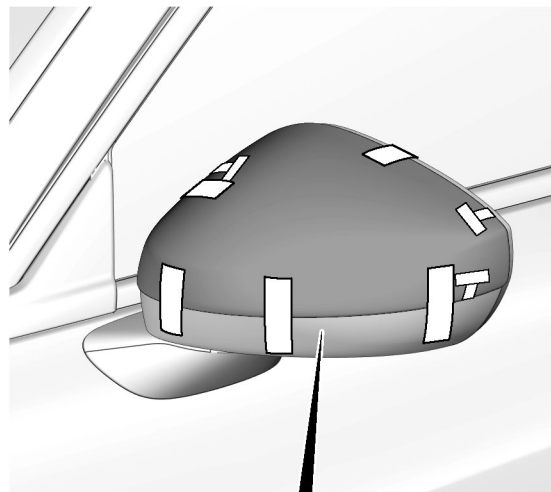




MASKING  
TAPE

QL61112BT

23. Secure the left cover.

#### NOTE

- Install in the order shown.
- Check the position of the double-sided adhesive tape and make sure to press firmly.

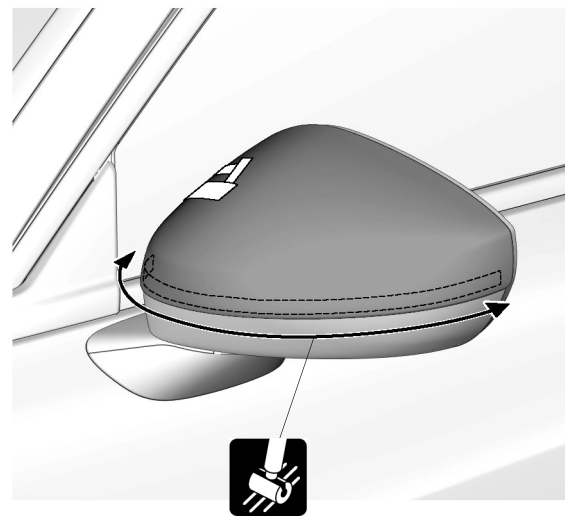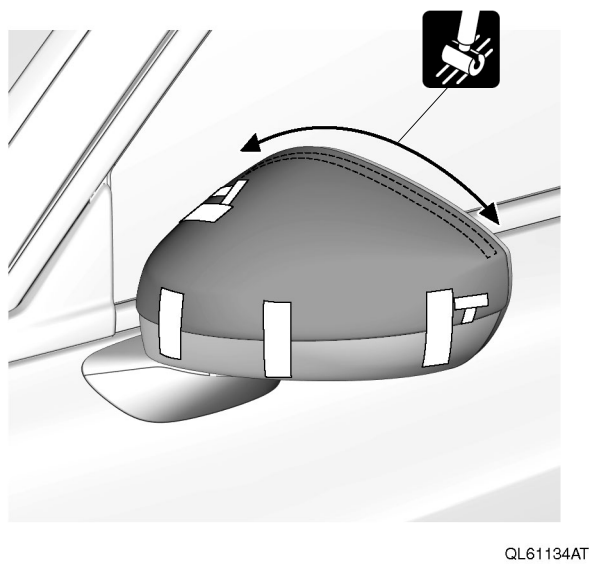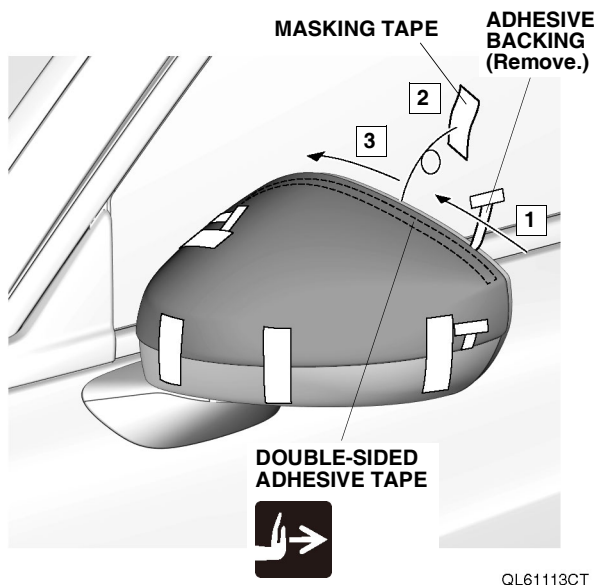


#### NOTE


- Install in the order shown.
- Check the position of the double-sided adhesive tape and make sure to press firmly.

#### NOTE


- Install in the order shown.
- Check the position of the double-sided adhesive tape and make sure to press firmly.

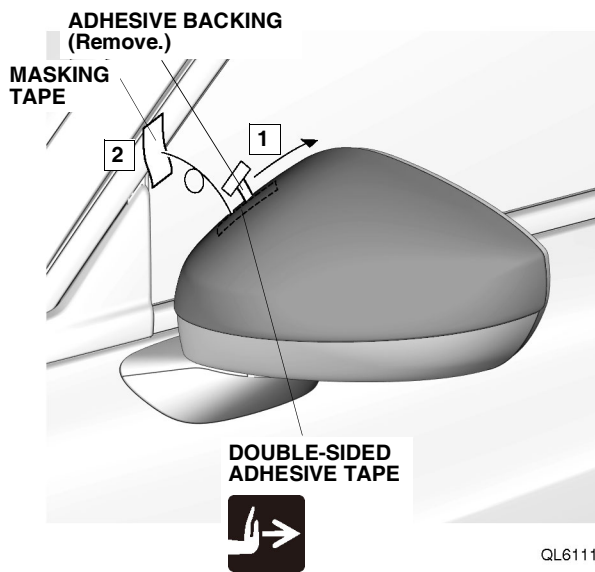

28. Secure the left cover.

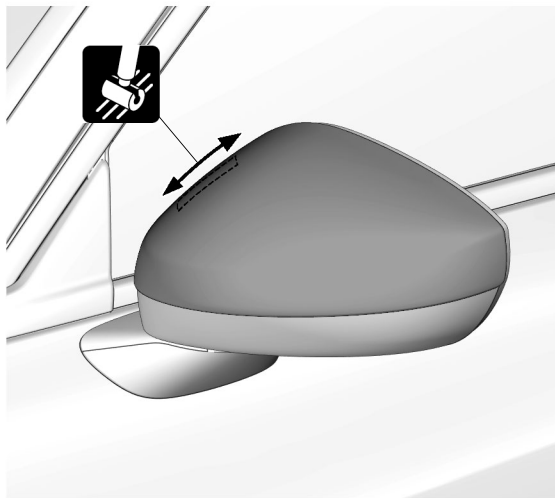

29. Repeat the same procedures on the other side.

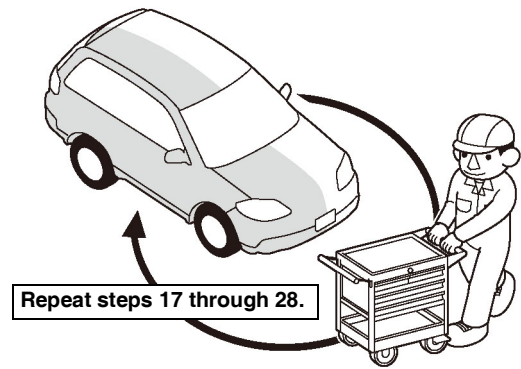

30. Check that all parts are installed properly.