



INSTALLATION INSTRUCTIONS

Accessory

Type S EMBLEM

Application

2024 INTEGRA Type S
MODEL SERIES


Publications No.

VERSION 1

Issue Date

JUN 2023

GENERAL VIEW

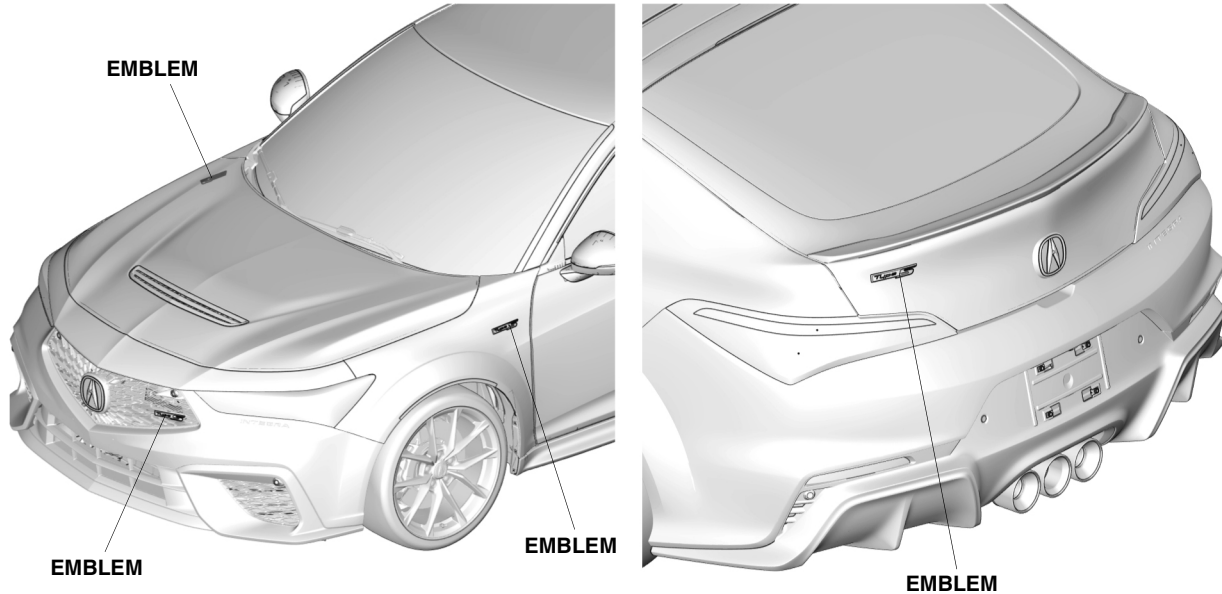

QM80201AK

FOR YOUR SAFETY (Read carefully.)

Warning Symbols

Safety: Your safety, and the safety of others, is important. To help you make informed decisions about service procedures, we have provided safety messages where appropriate. Of course, it is not practical or possible to warn you about all the hazards associated with servicing a vehicle - you must use your own good judgment.

You will find important safety messages preceded by one of the following symbols:

*All symbols are not used in all installation instructions.

 **DANGER**

You will be killed or seriously hurt if you do not follow the instructions.

 **WARNING**

You can be killed or seriously hurt if you do not follow the instructions.

 **CAUTION**

You can be hurt if you do not follow the instructions.

NOTICE

Gives advice to prevent damage to the product, vehicle, the environment or other property.

NOTE

Gives helpful information or instructions to be followed when installing this product.




Indicates a prohibited action.


Procedure and Location Icons

These icons indicate the work location and the worker's point of view.

*All icons are not used in all installation instructions.



The location on the vehicle.



The location in the vehicle.
(Instrument panel.)



Wear eye protection.



Wear heavy gloves.



Use an assistant.



Place the part on a blanket.



Work perpendicular.



Remove any burrs.



Use touch-up paint and allow to dry.



Tighten to the specified torque.



Apply firm pressure while rolling, especially at the ends, to set the adhesive.



Press firmly.



Clean with isopropyl alcohol.



Return the original part to the client.
(Do not reuse.)

Safety: General



- Be careful not to damage the vehicle or the parts.
- The illustrations may differ slightly from the actual accessory.

Safety: Accessory

- Always use the parts and tools specified in the installation instructions.
- Do not install the accessory on a dirty surface or in direct sunlight.
- Make sure the ambient air temperature is 60°F (15°C) or above when installing accessories that use adhesive material.
- When pressing the accessory firmly with the palm of your hand, be careful not to damage it or the vehicle.
- When applying adhesive material, make sure it is lined up properly before attaching. Once the adhesive material touches the surface, do not try to remove it. If you do, you could damage the part.
- Do not wash the vehicle for 24 hours to allow the adhesive to cure.

PARTS LIST

Type S Emblem Kit (P/N 08F20-TYB-200A)

Emblems (4)	Alcohol wipes (4)
	


REQUIRED TOOLS AND SUPPLIES

- Masking tape
- Nylon string

The following tool is available through the Acura Tool and Equipment Program:
Rubber Roller (T/N MHLE54D)


INSTALLATION

1. Attach the masking tape.

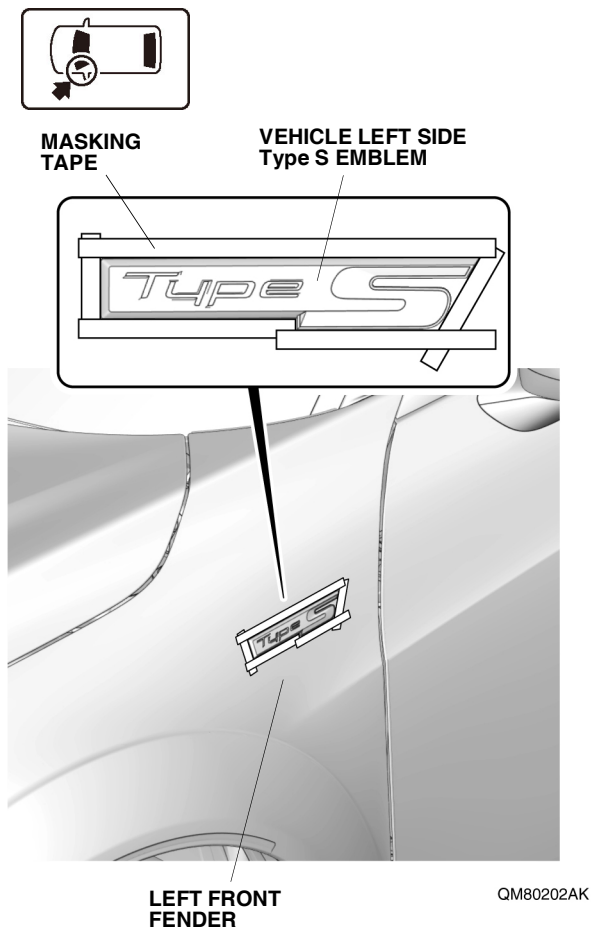


2. Remove the vehicle left side Type S emblem.

NOTE
<ul style="list-style-type: none">• Do not damage the vehicle body when removing the vehicle left side Type S emblem with the nylon string.• Make sure to thoroughly remove the adhesive tape from the vehicle body.

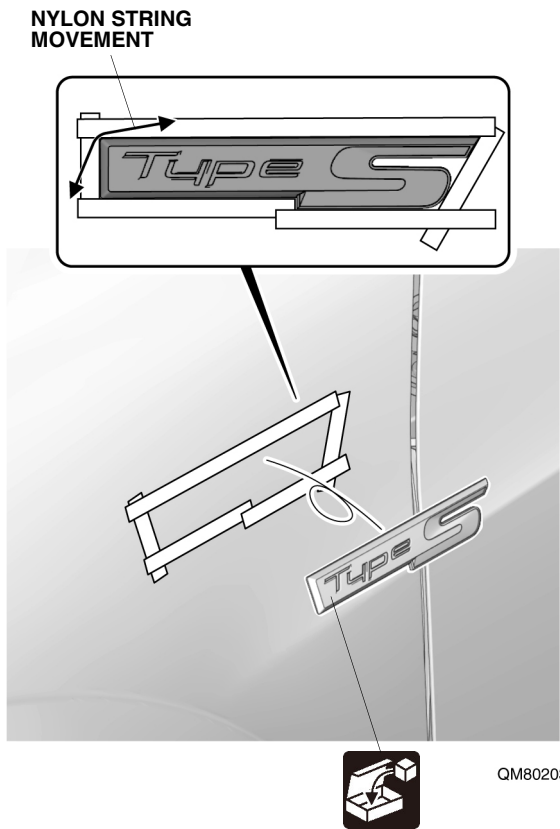

3. Clean the attaching area.


NOTICE
Allow to dry thoroughly.

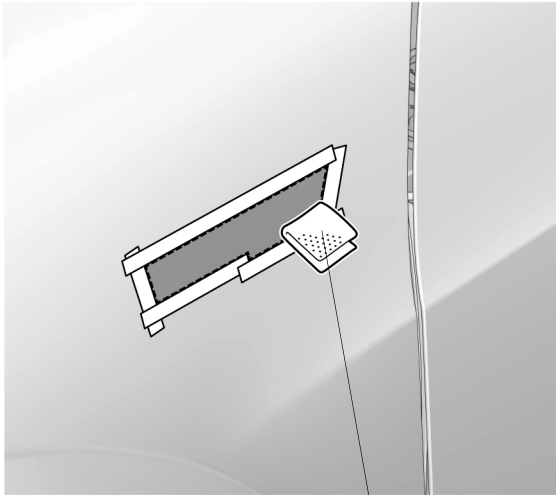

ALCOHOL WIPE QM80204AK

4. Attach the emblem.

NOTICE
Check the position of double-sided adhesive tapes and make sure to press firmly.

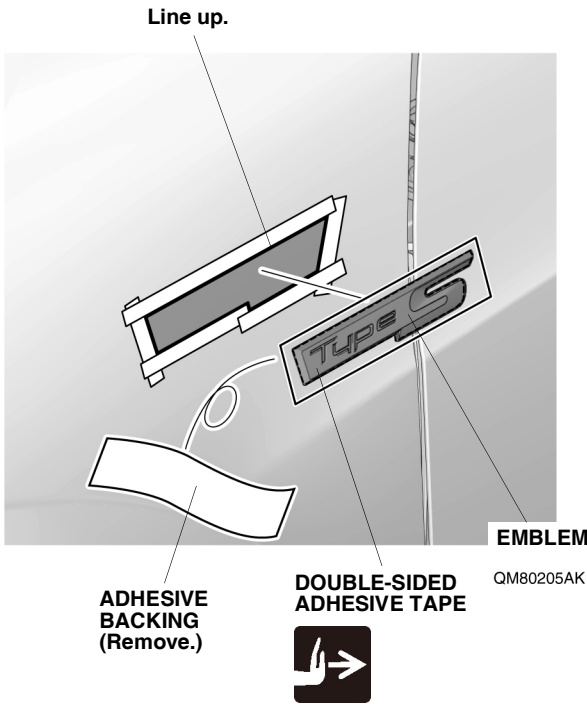

ADHESIVE BACKING (Remove.) **DOUBLE-SIDED ADHESIVE TAPE** QM80205AK


5. Secure the emblem.



QM80206AK


6. Remove the masking tape.

7. Remove the film.

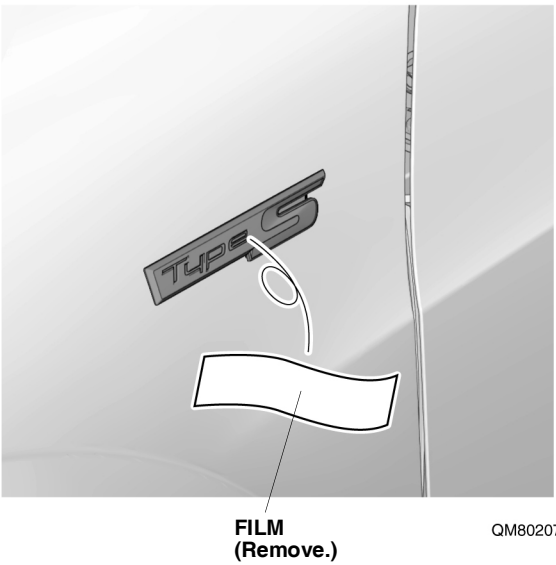


QM80207AK

8. Repeat the same procedures on the other side.

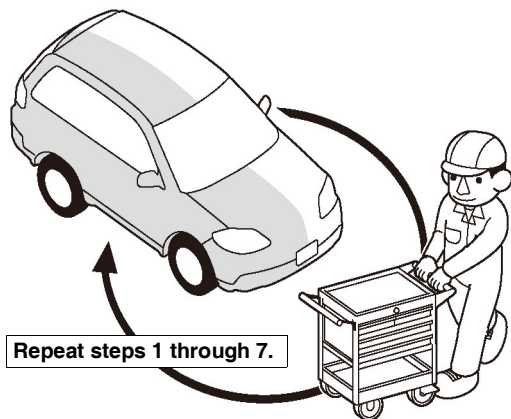


Q9D1012AE

9. Attach the masking tape.



**MASKING
TAPE**

**VEHICLE REAR
Type S EMBLEM**

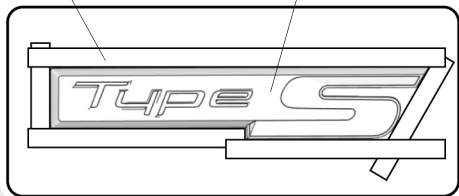

TAILGATE



QM80208AK

10. Remove the vehicle rear Type S emblem.

NOTE

- Do not damage the vehicle body when removing the vehicle rear Type S emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.


**NYLON STRING
MOVEMENT**

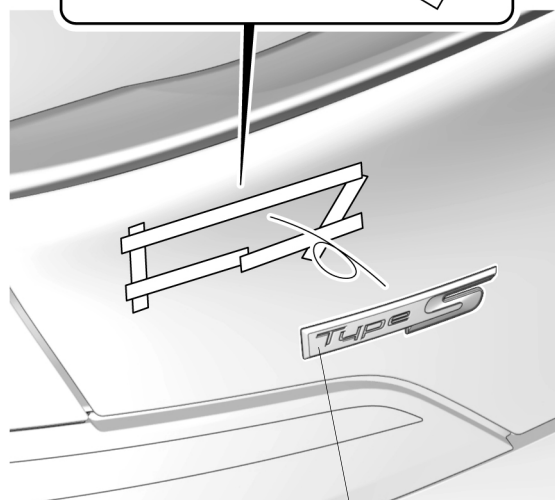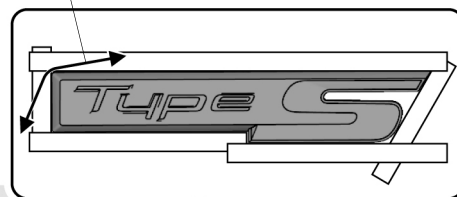

QM80209AK

11. Clean the attaching area.


NOTICE
Allow to dry thoroughly.

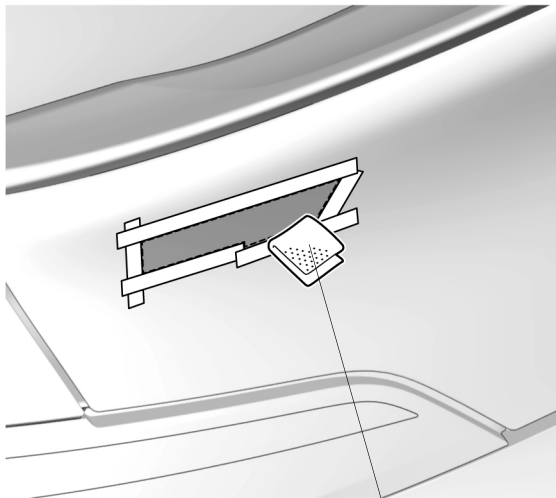

ALCOHOL WIPE QM80210AK


12. Attach the emblem.

NOTICE
Check the position of double-sided adhesive tapes and make sure to press firmly.

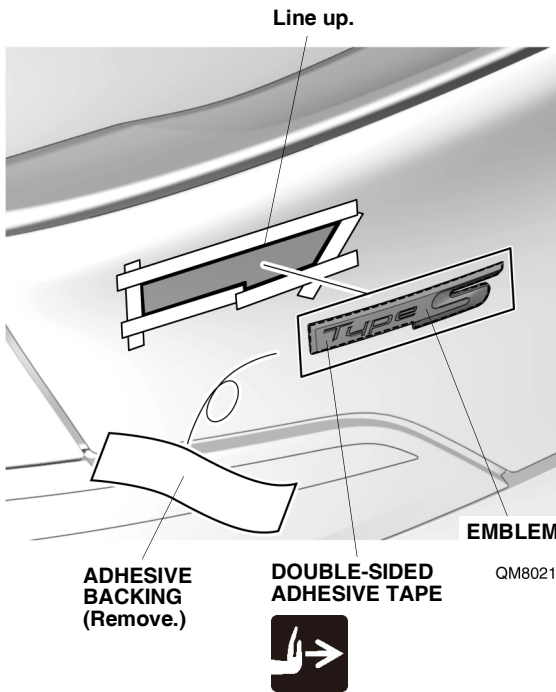

QM80211AK


13. Secure the emblem.

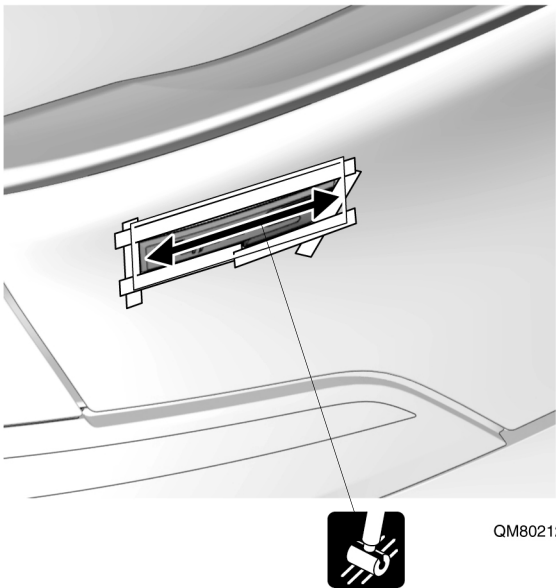

QM80212AK

14. Remove the masking tape.

15. Remove the film.

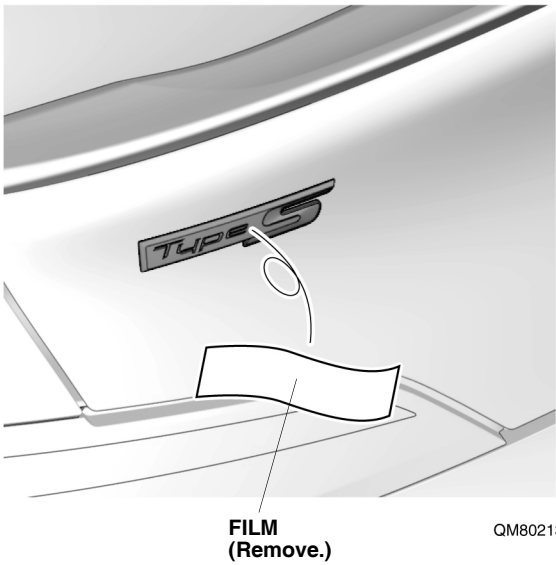


QM80213AK



16. Remove the vehicle front Type S emblem.

NOTE

- Do not damage the vehicle body when removing the vehicle front Type S emblem with the nylon string.
- Make sure to thoroughly remove the adhesive tape from the vehicle body.



**NYLON STRING
MOVEMENT**

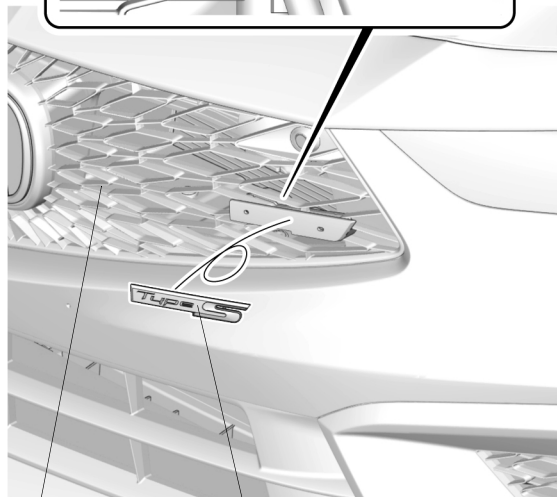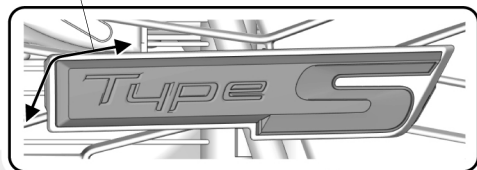

**FRONT
GRILLE**

**VEHICLE FRONT
Type S EMBLEM**


QM80214AK



17. Clean the attaching area.

NOTICE

Allow to dry thoroughly.

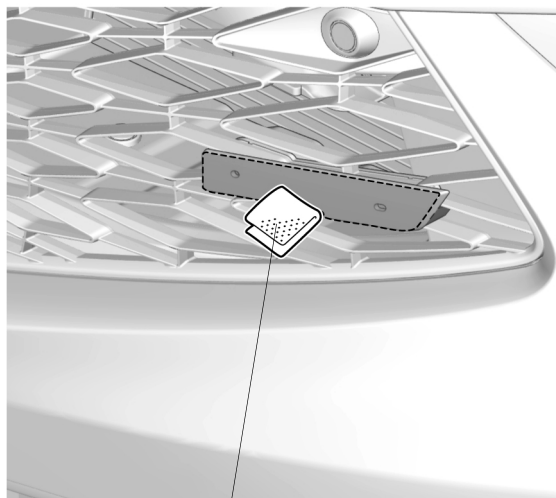


ALCOHOL WIPE

QM80215AK


18. Attach the emblem.

NOTICE


Check the position of double-sided adhesive tapes and make sure to press firmly.

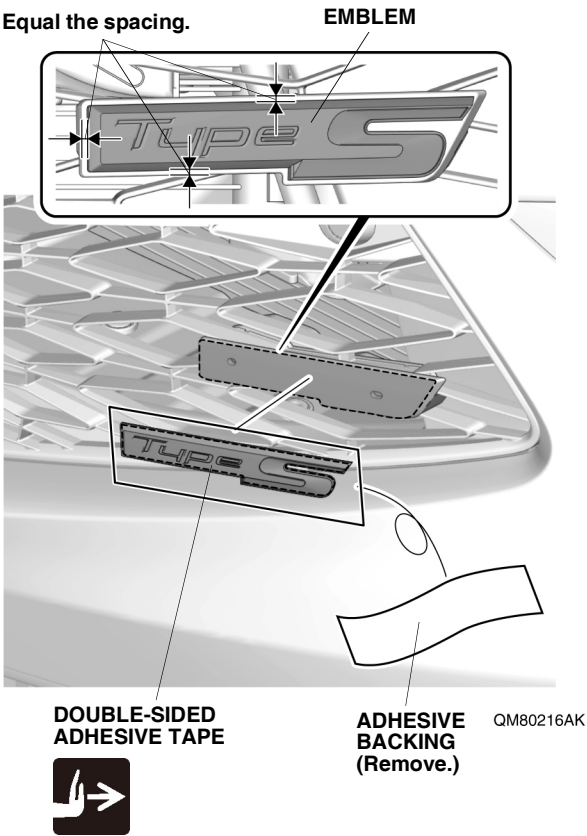

19. Secure the emblem.

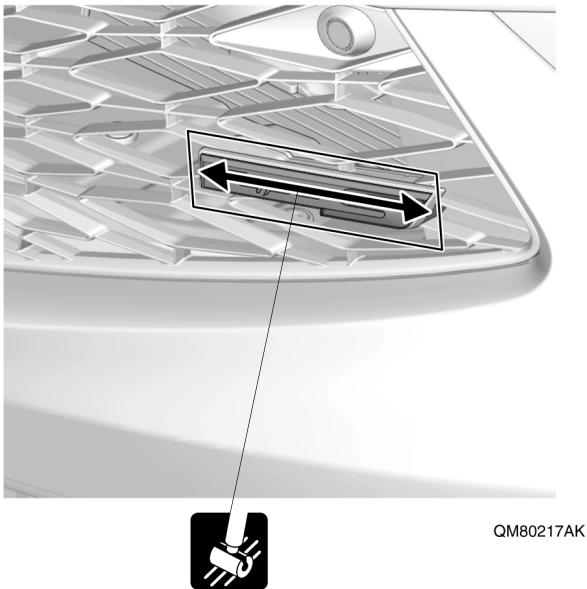

20. Remove the film.

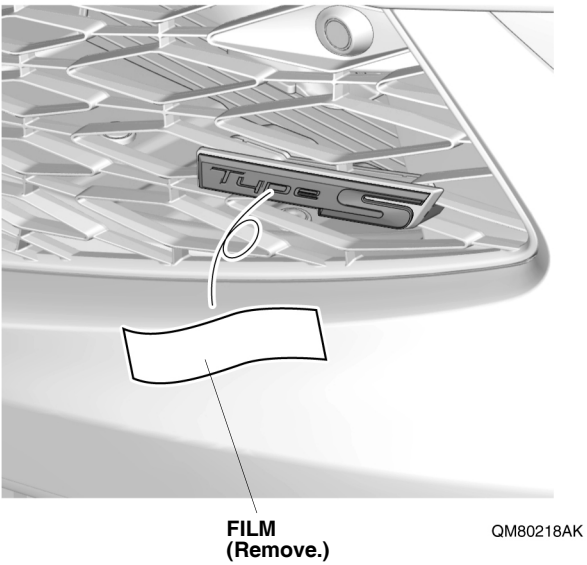

21. Check that all parts are installed properly.